


TRIPLE 18

LIST OF PARTS ONDERDELEN LIJST MANUEL D'UTILISATION

D

GB

 F

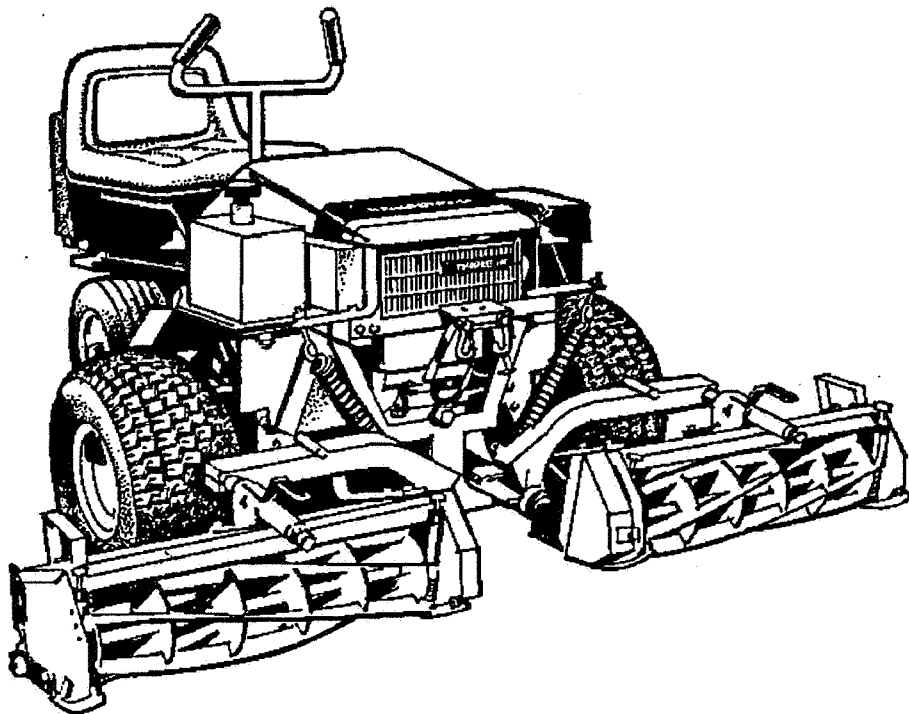

Ransomes Sims & Jefferies Ltd.
Ransomes Way, Ipswich
England, IP3 9QG
Tel (0473) 270000
Fax (0473) 276300

Publication No. 23888G (Rev.1)



RANSOMES
RSJ 150 0895



INTRODUCTION

ITEM NUMBER

Each part which is identified in the illustrations has an item number. Parts which do not have an item number may not be readily identified in the illustration but are usually closely associated with the immediately adjacent part.

ASSEMBLIES

A complete assembly, e.g. a wheel motor or hydraulic motor or roll assembly, is listed as a complete item with subsequent individual components listed separately.

The assembly is listed under its part number with component parts being listed offset to the right, e.g.:-

ITEM	RANSOMES PART NO.	DESCRIPTION	QTY
1	LMSD798	Roll Assy.	1
2	MBB4490	Tube	1
3	LMSD926	End Cap Assy.	2
4	MBB6851	End Cap	1
5	H009116	Bearing	1
6	MBB2356	Seal Housing	1
7	A224016	Seal	2
*	A122192	Screw	2

It may not be possible to illustrate every item. With certain items purchased from outside suppliers some component parts may not be available from Ransomes and may need to be specially ordered from the supplier e.g. Volvo hydraulic motor components.

QUANTITIES

Quantities shown are for one assembly or sub-assembly.

USING THE PARTS LIST

Determine the function and application of the part required. Turn to the main index page and select the appropriate section. Locate the part on the illustration and parts list and read off the quantity from the appropriate MODEL column.

NUMERICAL INDEX

This is a summary of all part numbers used in the manual arranged in numerical sequence and showing the page and item number under which the parts appear.

ORDERING OF SPARE PARTS

When ordering replacement parts, it is most important to quote the SERIAL NUMBER of the machine, PART NUMBER, DESCRIPTION and QUANTITY required.



EINFÜHRUNG

ARTIKELNUMMER

Jeder auf den Illustrationen identifizierte Teil hat eine Artikelnummer. Teile ohne Artikelnummer können nicht ohne weiteres aus der Abbildung identifiziert werden, aber stehen normalerweise mit dem benachbarten Teil in Verbindung.

BAUGRUPPEN

Eine vollständige Baugruppe, z.B. ein Rad- oder hydraulischer Motor oder eine Rolleneinheit, wird als kompletter Artikel verzeichnet, dessen spätere individuelle Komponenten separat verzeichnet sind. Die Baugruppe wird unter ihrer Teilenummer aufgelistet, und die Komponententeile werden rechts davon angegeben, z.B.:-

ARTIKEL RANSOMES TEILENUMMER	BESCHREIBUNG	MENGE
1	LMSD798 Rolleneinheit	1
2	MBB4490 Rohr	1
3	LMSD926 Verschlußkappeneinheit	2
4	MBB6951 Verschlußkappe	1
5	H000116 Lager	1
6	MBB2356 Verdichtungsgehäuse	1
7	A224016 Verdichtung	2
	A122192 Schraube	2

Es ist nicht immer möglich, sämtliche Artikel abzubilden. Da einige Teile von Fremdlieferanten angekauft werden, sind sie nicht jederzeit von Ransomes erhältlich und müssen besonders vom Lieferanten bestellt werden, z.B. hydraulische Volvo-Motorkomponenten.

MENGEN

Angegebene Mengen gelten nur für eine Baugruppe oder Untergruppe.

ANWENDUNG DER TEILELISTE

Die Funktion und den Einsatzbereich des erwünschten Teils feststellen. Zum Hauptinhaltsverzeichnis gehen und den entsprechenden Abschnitt wählen. Suchen Sie das Teil auf der Abbildung und Teileliste, und entnehmen Sie die Menge der entsprechenden MENGE-Spalte.

NUMERISCHER INDEX

Hier handelt es sich um eine Übersicht aller Teilenummern aus dem Handbuch. Sie sind in numerischer Reihenfolge aufgestellt und geben Seite und Artikelnummer an, unter denen die Teile angegeben wurden.

BESTELLUNG VON ERSATZTEILEN

Bei Bestellung von Ersatzteilen ist es sehr wichtig, stets die SERIENNUMMER der Maschine, die TEILENUMMER, die BESCHREIBUNG und die erwünschte MENGE anzugeben.

INTRODUCTION

NUMERO D'ARTICLE

Chaque pièce, qui est identifiée sur les illustrations, est accompagnée d'un numéro d'article. Il peut s'avérer difficile d'identifier les pièces ne possédant pas de numéro d'article, mais celles-ci sont généralement étroitement associées à la pièce immédiatement adjacente.

ENSEMBLES

Un ensemble complet, par exemple: un ensemble de moteur de roue, de moteur hydraulique ou de rouleau, est listé en tant qu'article complet et les composants individuels subséquents sont listés séparément. L'ensemble est listé sous son numéro de pièce et les composants sont décalés vers la droite sur la liste, par exemple:

ARTICLE	NO.DE PIECE RANSOMES	DESCRIPTION	QTE
1	LMSD798	Ensemble de rouleau	1
2	MBB1190	Tube	1
3	LMSD926	Ensemble de bouchon	2
4	MBB6891	Bouchon	1
5	HOO9116	Roulement	1
6	MBB2356	Logement de joint	1
7	A224016	Joint	2
8	A123103	Vis	2

Il se peut que l'illustration de tous les articles ne soit pas possible. Pour certains articles achetés à des fournisseurs externes, il se peut que certains composants ne soient pas disponibles chez Ransomes et que ceux-ci soient commandés spécialement auprès du fournisseur, par exemple: composants de moteur hydraulique Volvo.

QUANTITES

Les quantités indiquées s'appliquent à un ensemble ou sous-ensemble.

UTILISATION DE LA LISTE DE PIECES

Déterminer la fonction et l'application de la pièce requise. Passer à la page d'index principal et sélectionner la section appropriée. Situer la pièce sur l'illustration et la liste de pièces, puis lire la quantité dans la colonne MODELE appropriée.

INDEX NUMERIQUE

Il s'agit d'un récapitulatif de tous les numéros de pièce utilisés dans le manuel, classés en séquence numérique, et indiquant la page et le numéro d'article sous lesquels les pièces apparaissent.

COMMANDE DES PIECES DE RECHANGE

Lors de la commande des pièces de rechange, il est essentiel de stipuler le NUMERO DE SERIE de la machine, le NUMERO DE PIECE, la DESCRIPTION et la QUANTITE requise.



SPECIFICATIONS

Engine Manufacturer Kubota GH250-Q-1-SO-UK2
Number Cylinders 1
Cooling Air
Fuel Unleaded Petrol
Bore & Stroke 75mm x 56mm (2.94in x 2.75" in)
Displacement..... 247 cc (17.4 in³)
Maximum Output..... 6 kw (8 hp) at 3600 rpm
Torque 1.7 kg/m (16.7 N.m) (12.3 lbs/ft) at 2800rpm
Max. Gov. RPM 3600
Idle RPM 1500
Oil Capacity 0.9 litres (0.792 Imp pints) (0.95 US qts)
Battery 25 amp/hour
Fuel Capacity 26.4 liters (5.8 Imp. gallons) (7 U.S. Gallons)
Fuel Tank..... High density polyethylene
Starting Electric
Ignition Non contact magnetic
Transmission Hydrostatic drive to differential and drive wheels
Ground Speed Forward: 0. 10.5 km/hr (0 to 6.5 mph)
Recommended Cutting 2.4 to 6 km/hr (1.5 to 3.75 mph)
Reverse 0 to 5.3 km/hr (0 to 3.3. mph)
Drive Wheels 18 x 8.50-8 4 ply rated on demountable wheels (chain driven)
Wheel, Steering 16 x 6.5-8 4 ply rated
Brake System Disc parking brake, Hydrostatic braking
PTO Drive Belt drive
Steering Buckhorn and large 4.8 mm (3/16") aircraft cable

Noise Emmission

Conforms to the specification of Directive EEC 79/113, 84/538, 87/252, 88/180, 88/181
 Sound Power Level: 98 dB(A) LWA (Bystander)
 Sound Pressure Level 85 dB(A) LpA (Operator ear)

Controls

Throttle and choke, FWD/RVS Pedal, key switch, PTO lever located for easy accessibility, belt tension release lever

Safety System

PTO & FWD/RVS Pedal operated neutral start. Operator presence required to engage blades and to move FWD/RVS Pedal into FWD/RVS.

Lift System

Spring assisted manual lift

Seat

Foam padded, adjustable fore and aft

Uncut Turning Circle 8" (20 cm) Dia.

Reel Cutting Units 3 cylinders 6-1/2" (16.5 cm) Dia. 26" (66 cm) long. 5 knives.

RECOMMENDED LUBRICANTS

Engine oil: Should be to MIL-L-2104B/MIL-L-2104C or to A.P.I. Classification CC/CD grades and as given in the table below:

Temperature	Oil Viscosity
ABOVE 25°C (77°F)	SAE 30
0°C to 25°C (32°F to 77°F)	SAE 20
BELOW 0°C (32°F)	SAE 10W or SAE 10W-30

Grease: Multipurpose Lithium based automotive grease with good water resisting properties. Shell Retinax 'A' or equivalent.

D

F




INDEX TO SECTIONS

Section	Page
Steering wheel assy.	11
Fuel, seat & steering assy.	13
Wheel drive	15
PTO reel lift & drive	19
Exterior parts group	23
Engine, footpedal & brake group	27
Hydrostat & linkage	31
Brake group	35
Cutting unit	37
pivot, skids & roll	41
Front grassbox	43
Rear grassbox	45
Engine control & electrical group	47
Decals	49
Differential	51
Hydrostat	53

D

F

 RANSOMES
TRIPLE 18

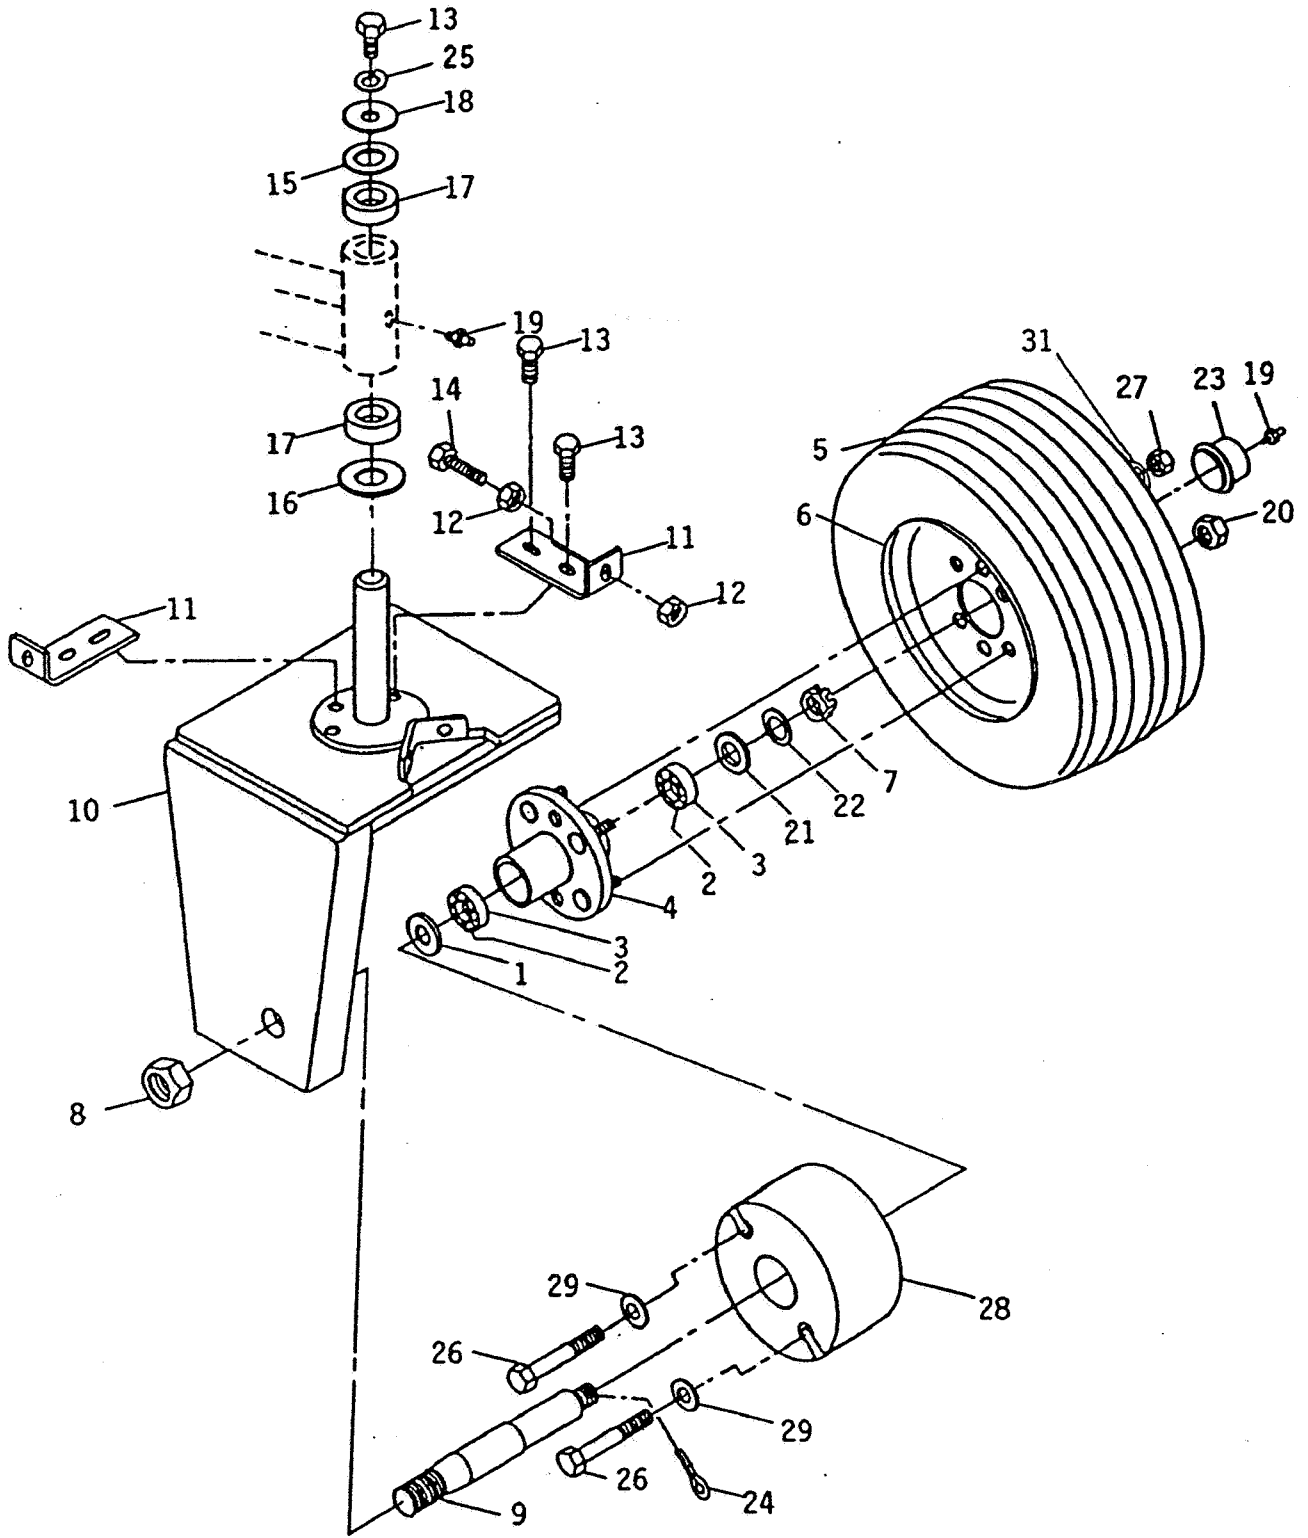


REAR STEERING WHEEL

LIST OF PARTS
ERSATZTEILLISTE
LISTE DE PIECES

ITEM	RANSOMES PART NO	DESCRIPTION GB	BESCHREIBUNG D	DESCRIPTION F	QTY
1	A816213	Wheel Assy. (Incl. ref. 4,20,23,19,6,5)			1
2/3	A230068	Seal			1
4	A205935	Roller Bearing			2
	A816914	Hub Assy (incl. ref 1,2,3, 23,19)			1
5	A817039	Tyre			1
6	A816183	Rim Assembly			1
7	GSF2057AH	Nut			1
8	A139922	Locknut			1
9	MBE1764	Spindle			1
10	W136148	Rear Wheel support			1
11	W122082A	Stop			2
12	GSF2073AC	Nut			4
13	GSF2093ED	Bolt			5
14	GSF2091EF	Bolt			2
15	A219007	Thrust Bearing			2
16	A159304	Thrust Washer			1
17	GSF3003BH	Bearing			2
18	MBA1553	Washer			1
19	A299301	Lubricator			2
20	A134102	Wheel Nut			4
21	A159901	Washer			1
22	H009005	Thrust Washer			1
23	A816915	Dust Cover			1
24	GSF1030GL	Cotter Pin			1
25	GSF2164J	S.L.Washer			1
26	A109906	Bolt			2
27	GSF2073AC	Nut			2
28	MBE1763B	Counter Weight			1
29	W64163-43	Washer			2
31	A159926	Washer			2
	GSF2150E	Washer (for 13)			4

* Not Illustrated

 RANSOMES
TRIPLE 18

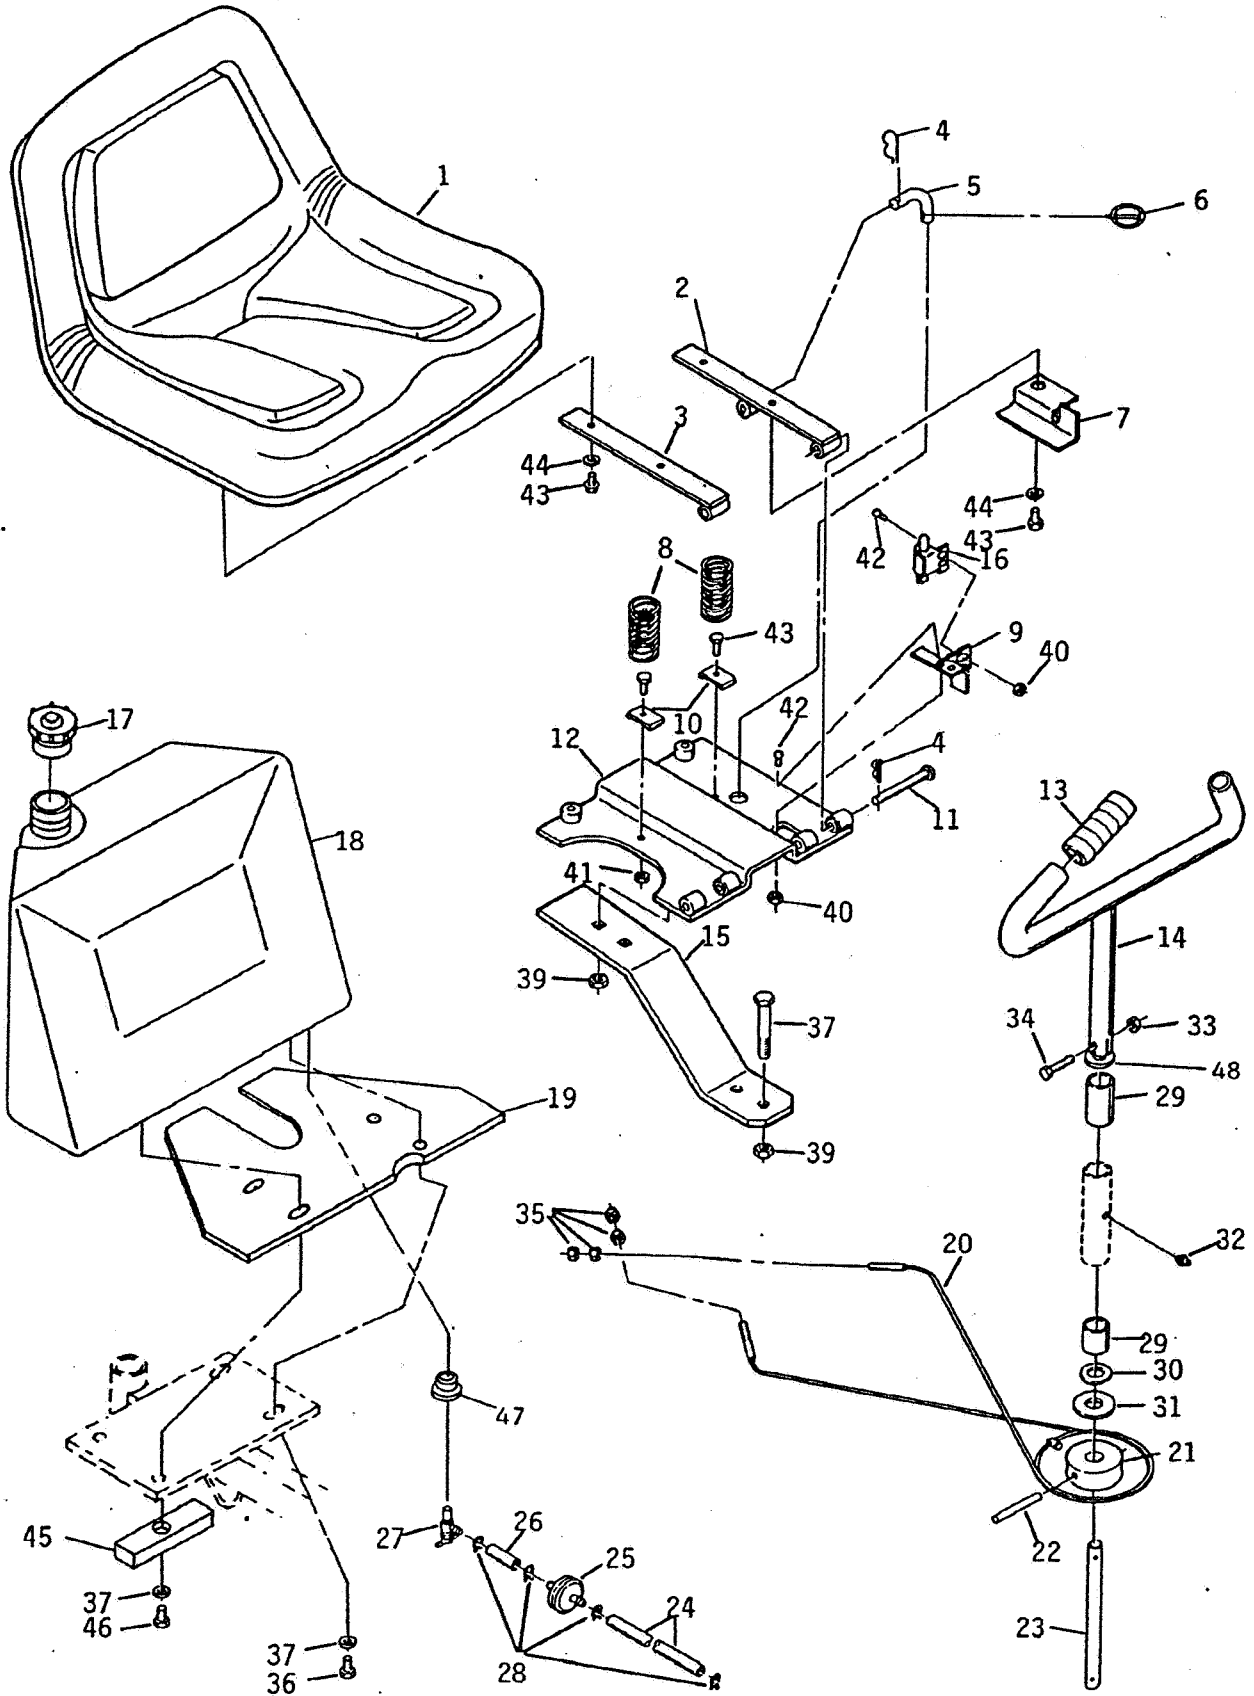


SEAT, STEERING & FUEL SYSTEM

**LIST OF PARTS
ERSATZTEILLISTE
LISTE DE PIECES**

ITEM	RANSOMES PART NO	DESCRIPTION	BESCHREIBUNG	DESCRIPTION	QTY
		GB	D	F	
1	W158137	Seat			1
2	W126076	Seat Mounting LH			1
3	W126075	Seat Mounting RH			1
4	A149000	Cotter Pin			3
5	BAN3109	Hook			1
6	A149002	Cotter pin & Ring			1
7	BAP2101	Bracket			1
8	BAN8035	Spring			1
9	W112102	Bracket			1
10	BAN2134	Clip			2
11	BAN3053	Pin			2
12	BAN6070	Mounting Plate			1
13	BAA0093	Handlegrip			2
14	W116086	Buckhorn			1
15	W102074	Spring			1
16	W038383	Switch			1
17	BAF8587	Cap			1
18	W106191	Tank			1
19	W102250	Support			1
20	W106011-03	Cable			1
21	BAM1000	Pulley			1
22	GSF1042NK	Pin			1
23	BAM3022	Shaft			1
24	A298324EV	Hose			1
25	BAA0230	Filter			1
26	A298324CR	Hose			1
27	BAA1367	Valve			1
28	A192900	Hose Clamp			4
29	GSF3002SG	Bushing			2
30	A159304	Thrust Washer			1
31	GSF2150L	Washer			1
32	GSF2540AC	Lubricator			1
33	GSF2073AC	Nut			1
34	GSF2091EF	Bolt			1
35	GSF2072AB	Nut			4
36	GSF2093EN	Bolt			1
37	GSF2164J	S.L.Washer			1
38	GSF2091JT	Bolt			2
39	GSF2080AE	Locknut			3
40	A139325	Nut			4
41	A139322	Nut			2
42	A119004	Screw			4
43	GSF2093CD	Bolt			6
44	A151008	S.L.Washer			4
45	W132152	Strip			3
46	GSF2091EM	Bolt			3
47	BAA1366	Bushing			1
48	A159301	Thrust Washer			1
*	MBE4288A	Fuel Pump Brkt			1
*	A100314	Bolt (for fuel pump brkt to frame)			1

* Not Illustrated

 **RANSOMES
TRIPLE 18**

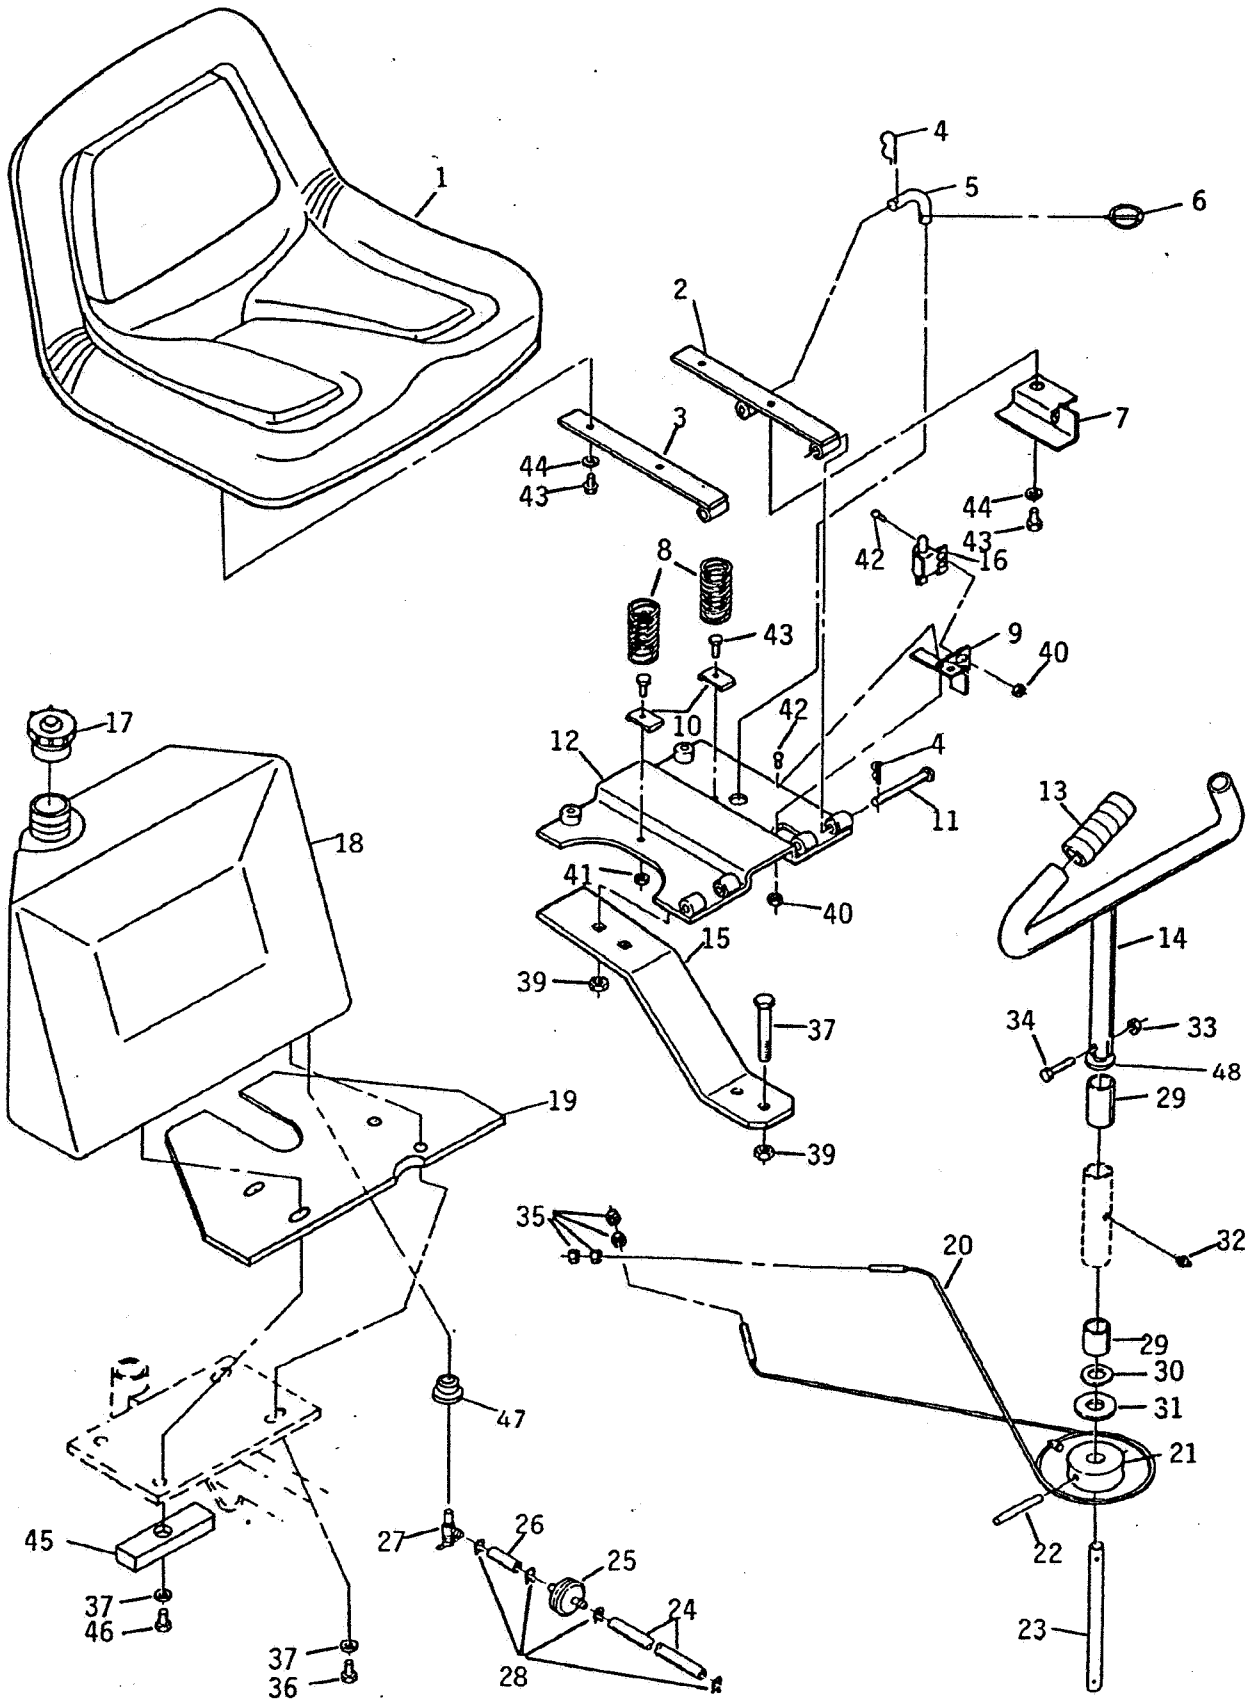


SEAT & FUEL SYSTEM

LIST OF PARTS
ERSATZTEILLISTE
LISTE DE PIECES

ITEM	RANSOMES PART NO	DESCRIPTION GB	BESCHREIBUNG D	DESCRIPTION F	QTY
<ul style="list-style-type: none"> * * * * * 	<ul style="list-style-type: none"> A133208 A150008 A110204 A133206 A150006 	<ul style="list-style-type: none"> Nut Washer Screw (pump to brkt) Nut Washer 			<ul style="list-style-type: none"> 1 1 2 2 2

* Not Illustrated

 **RANSOMES
TRIPLE 18**

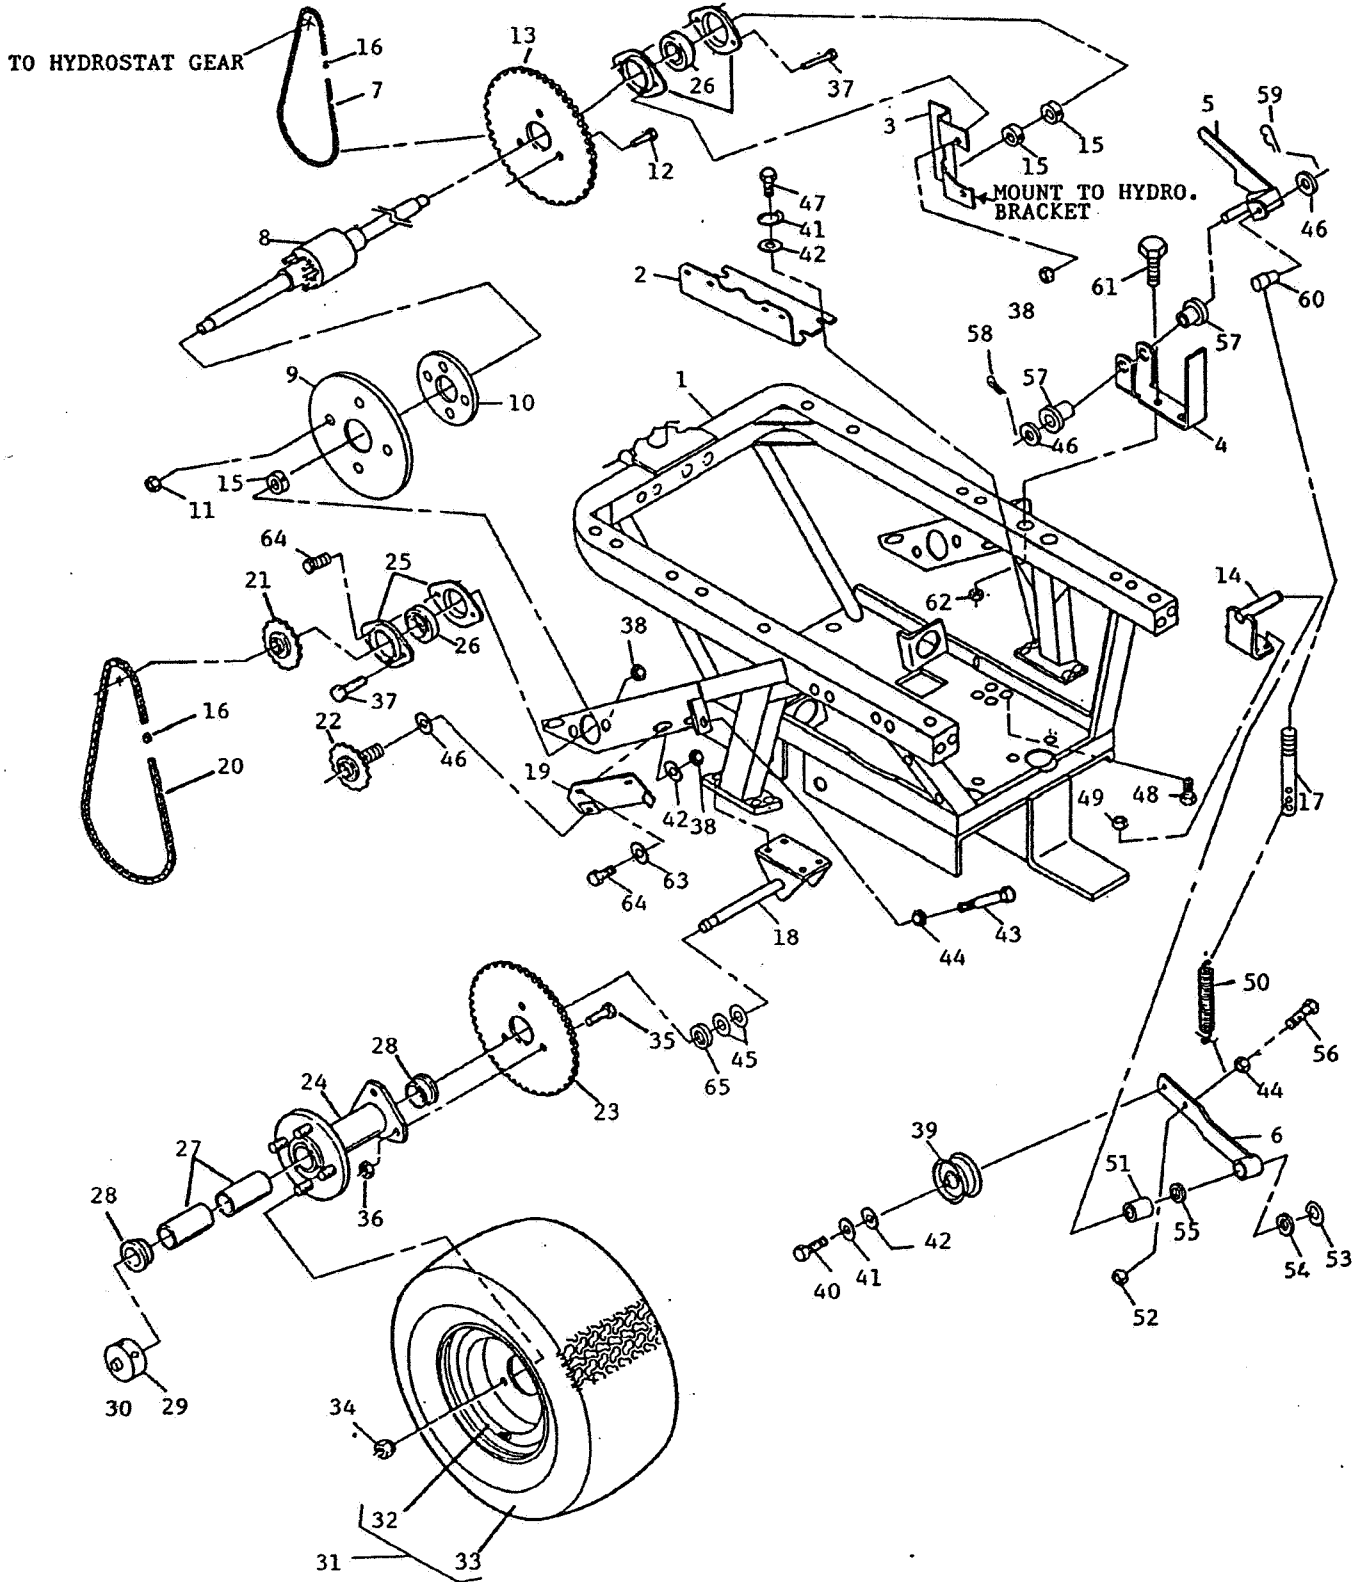


WHEEL DRIVE

LIST OF PARTS
ERSATZTEILLISTE
LISTE DE PIECES

ITEM	RANSOMES PART NO	DESCRIPTION GB	BESCHREIBUNG D	DESCRIPTION F	QTY
1	W136122	Frame			1
2	W132135B	Bracket			2
3	W132157	Bracket			3
4	W132165	Bracket			1
5	MBE4681	Lever			1
*	W38028A	Handle Grip			1
6	MBE4368	Arm			1
7	A399003	Chain Roller			1
	W136137	Sprocket			1
8	W138050	Differential			1
9	W132181	Brake Disc			1
10	W132180	Spacer			1
11		Nut			4
12	A100937	Bolt			4
13	W138053	Sprocket			1
14	MBE4366	Clutch Pivot			1
15	A209183	Collar			3
16	A389002	Connecting Link			3
17	W133062A	Rod			1
18	W136023	Stub Axle			2
19	W136024A	Idler Mount RH			1
*	W136025A	Idler Mount LH			1
20	A399002	Chain Roller			2
21	W118068	Sprocket			2
22	MBE1791	Sprocket			2
23	MBE1777	Sprocket			2
24	W136022A	Hub			2
*	A209186	Flange Bearing Assy (item 15, 25, 26)			1
25	A209184	Flange			6
26	A209182	Bearing			3
27	BAA0829	Bearing			4
28	BAA1266PC	Bearing			4
29	W113004	Lock Collar			2
30	GSF2542AC	Lubricator			2
31	A816199	Wheel & Tyre			2
32	A816125	Rim			2
33	A817078	Tyre 20 x 10.00-8 4pr.			2
34	A134111	Wheel Nut			8
35	GSF2093JH	Bolt			6
36	A139360	Locknut			6
37	A109092	Bolt			4
38	GSF2073AC	Nut			10
39	BAA0097	Pulley			1
40	A109001	Bolt			1
41	GSF2164J	S.L.Washer			5
42	A159926	Washer			9
43	A109018	Bolt			2
44	GSF2072AB	Nut			2
45	A159307	Washer			A/R
46	A159905	Washer			6

* Not Illustrated

 **RANSOMES
TRIPLE 18**

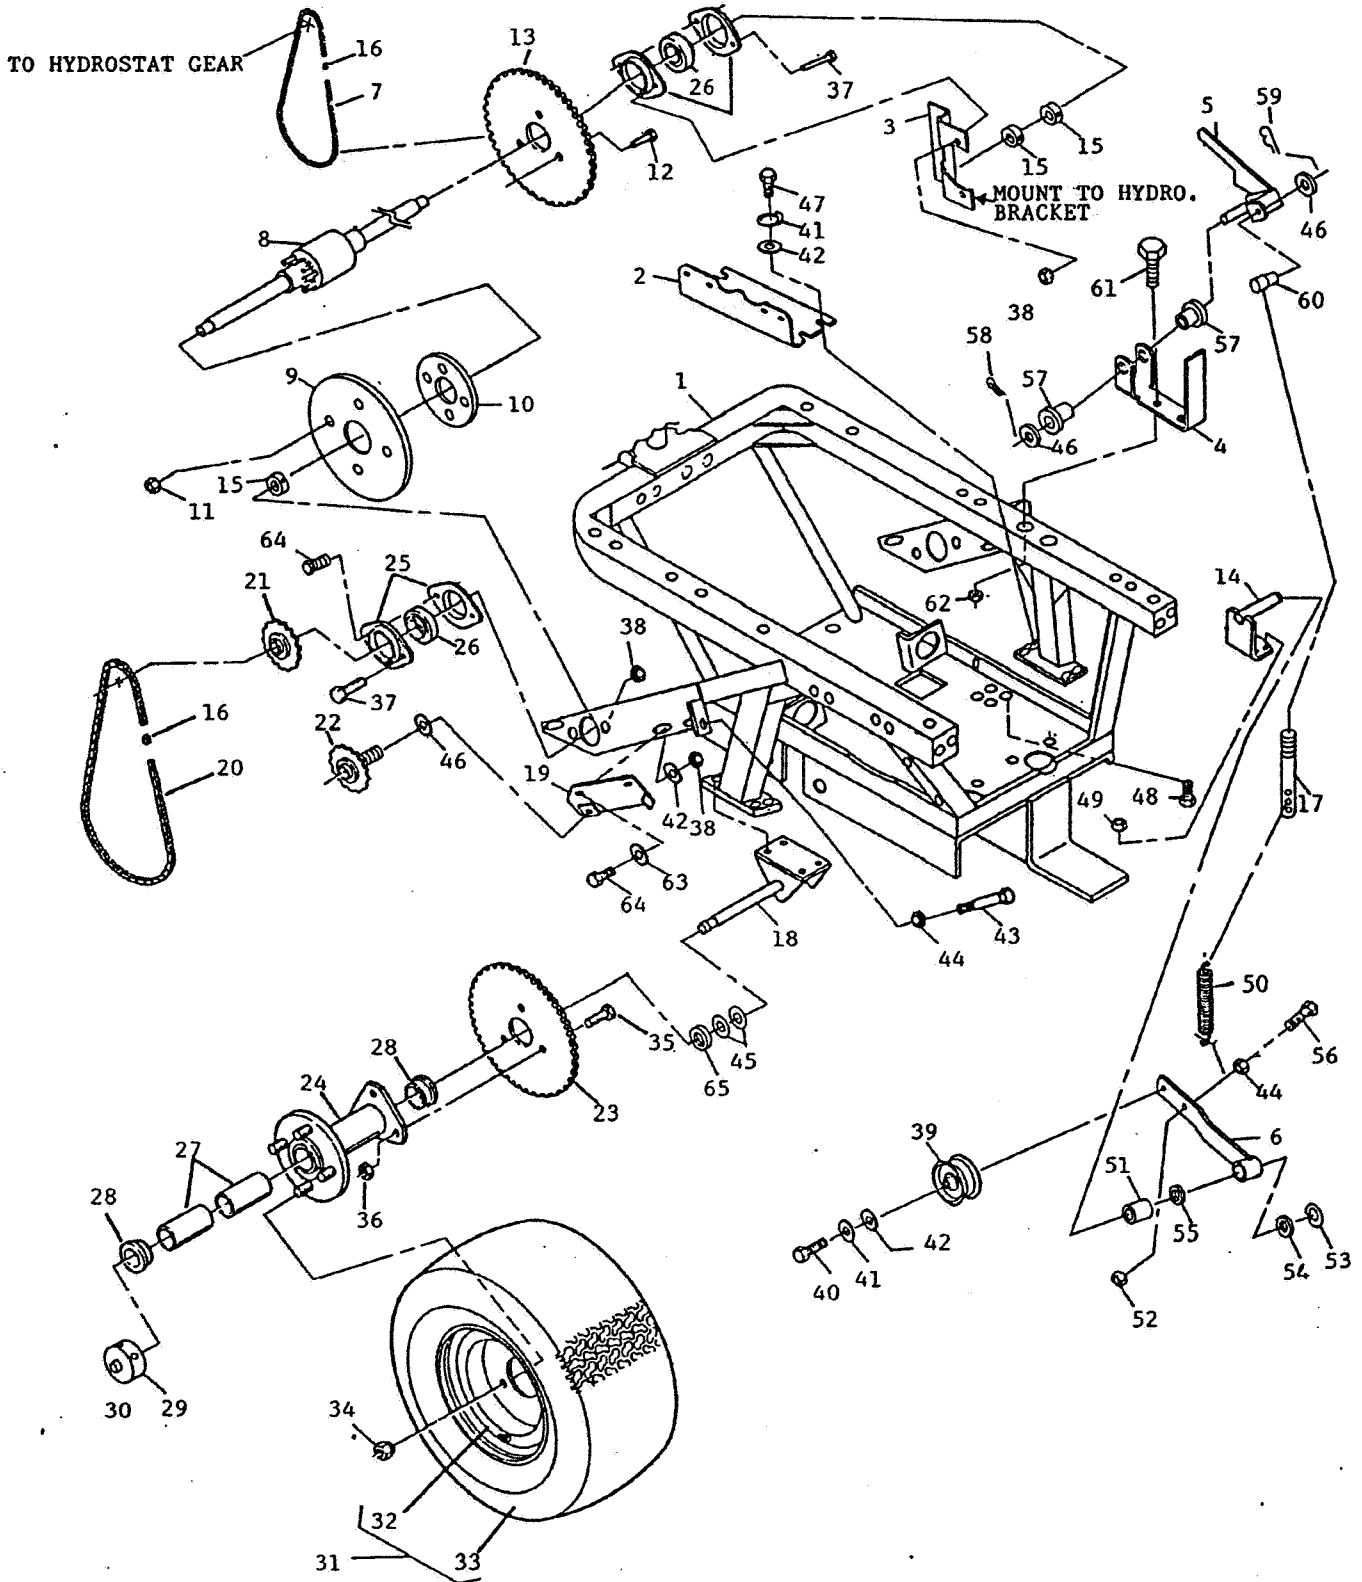


WHEEL DRIVE

LIST OF PARTS
ERSATZTEILLISTE
LISTE DE PIECES

ITEM	RANSOMES PART NO	DESCRIPTION GB	BESCHREIBUNG D	DESCRIPTION F	QTY
47	GSF2093EN	Bolt			4
48	GSF2093AD	Bolt			4
49	A139912	Nut			4
50	BAA0031	Spring			1
51	W133065	Spacer			1
52	A139322	Nut			1
53	A179107	Ring			1
54	BAJ2101	Plate			1
55	GSF2152A	Washer			1
56	GSF2093CF	Bolt			1
57	BAM8031	Flange			2
58	A140045	Cotter Pin			1
59	A149000	Cotter Pin			1
60	BAA0020	Swivel			1
61	GSF2091ES	Bolt			1
62	GSF2073AC	Nut			2
63	A159927	Washer			4
64	GSF2091CD	Bolt			6
65	BAA0386	Thrust Bearing			2

* Not Illustrated

 **RANSOMES
TRIPLE 18**

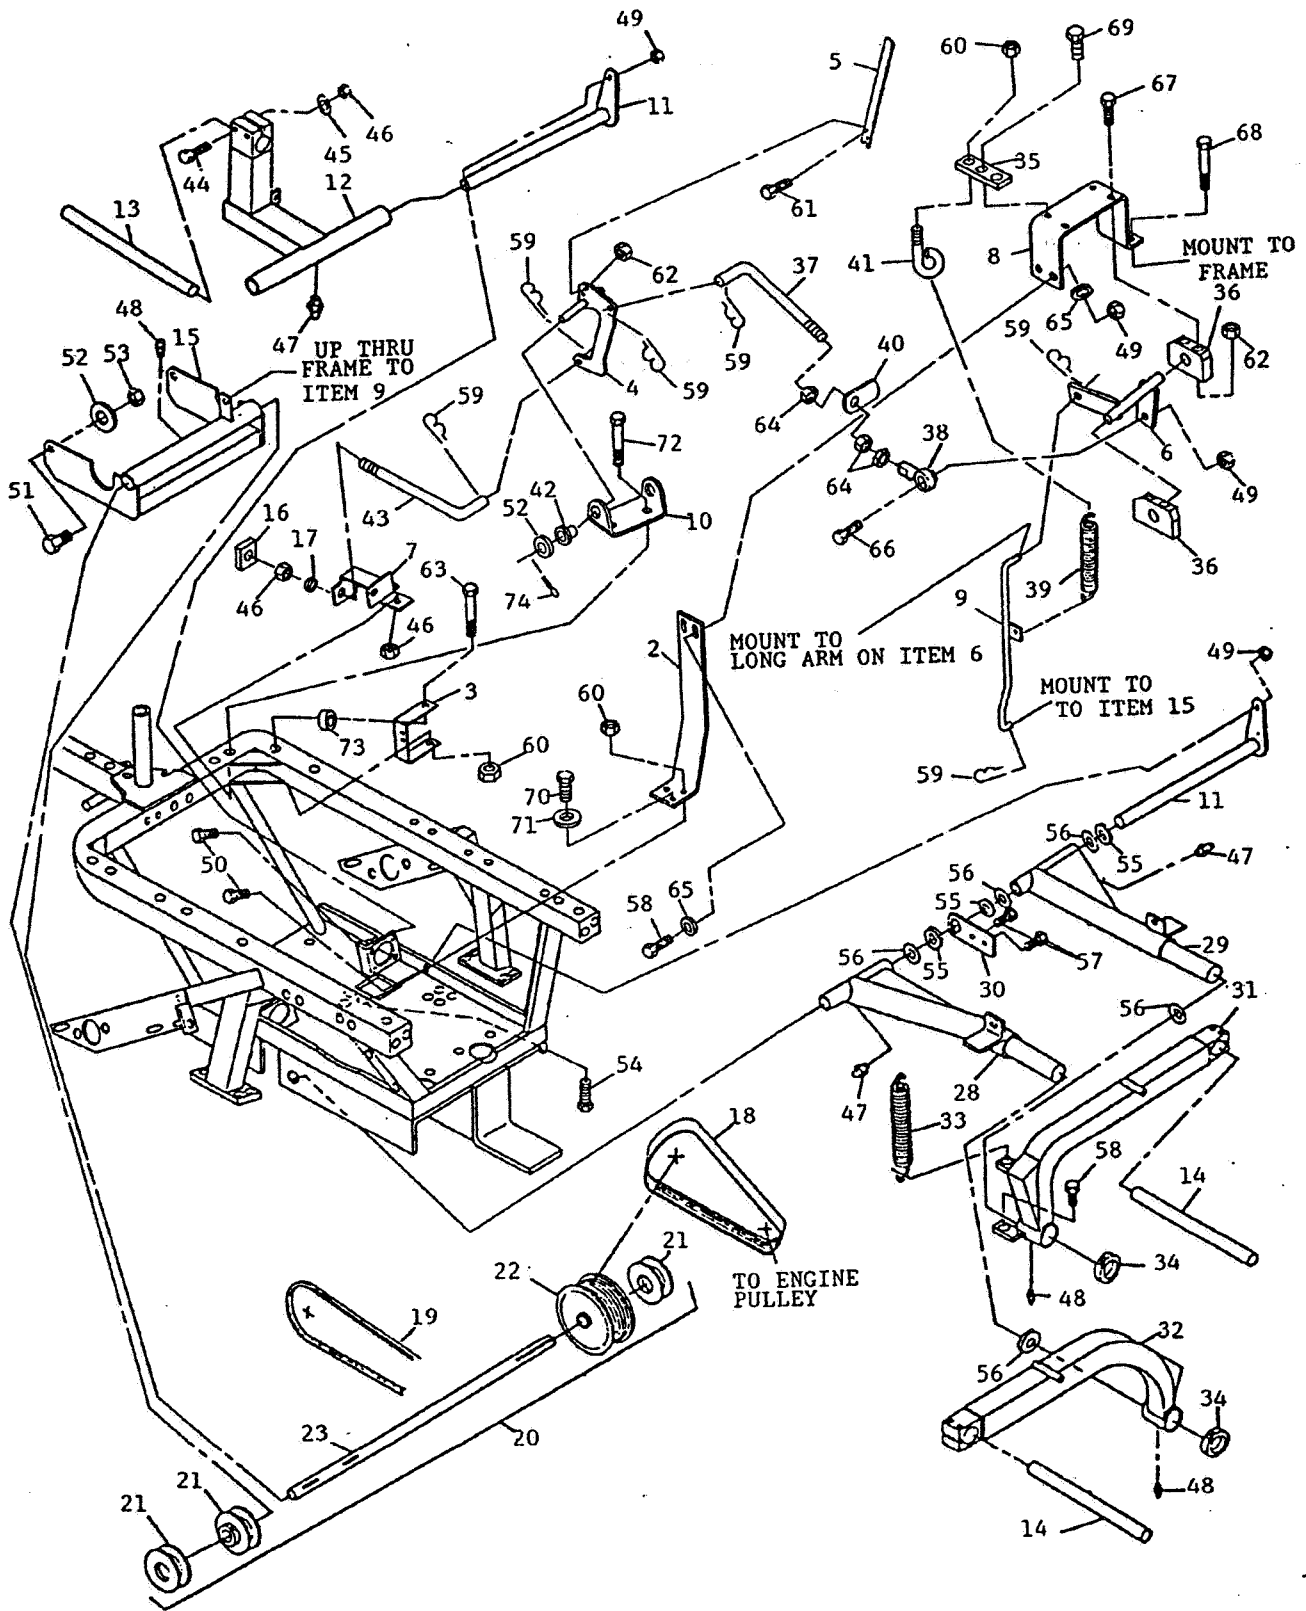


PTO, UNIT LIFT & DRIVE

LIST OF PARTS
ERSATZTEILLISTE
LISTE DE PIECES

ITEM	RANSOMES PART NO	DESCRIPTION GB	BESCHREIBUNG D	DESCRIPTION F	QTY
1	W136122	Frame front			1
2	W132156	Bracket			1
3	W132211	Switch Mount			1
4	W136108	Lever			1
5	W132206	Handle			1
*	A914200	Handle Grip			1
6	W136105	Pivot			1
7	W136139	Bracket			1
8	W132158	Support			1
9	W136106	Rod			1
10	W132162	Pivot Holder			1
11	BAM6036	Pivot Shaft			2
12	W136050	Rear Reel Arm			1
13	BAM3054	Rear Reel Pivot			1
14	BAM3031	Shaft			2
15	W136049	Housing			1
16	W136086	Interlock			1
17	W118047-02	Bushing			1
18	BAQ8021	V Belt			1
19	A491027	Belt			2
*	A291025	Belt			1
20	W136047	Jackshaft Assy			1
21	BAM1002	Sheave			3
22	BAM1003A	Sheave			1
23	W103019	Jackshaft			1
24	GSF2101HD	Setscrew			2
25	GSF2218DF	Key			4
26	BAA0386	Thrust Bearing			5
27	GSF2150M	Washer			1
28	W136067	Arm			1
29	W136066	Arm			1
30	BAM2057	Pivot			1
31	LMSE030	Lift Arm LH			1
		W136059 (incl item 48)			1
*	W138024-03	Bush			2
32	LMSE029	Lift Arm RH			1
		W136058 (incl item 48)			1
*	W138024-03	Bush			2
33	BAQ8023	Spring			2
34	W138025	Collar			2
35	W132160	Spring			1
36	W041028	Bearing			2
37	W133050	Rod			1
38	BAQ8011	Balljoint			1
39	BAA0821	Spring			1
40	W132166	Switch			1
41	W64158	Eyebolt			1
42	W10831-A1	Bearing Flange			2
43	W133057	Rod			1
44	A109001	Bolt			6
45	GSF2164J	S.L.Washer			6

* Not Illustrated

 
**RANSOMES
TRIPLE 18**

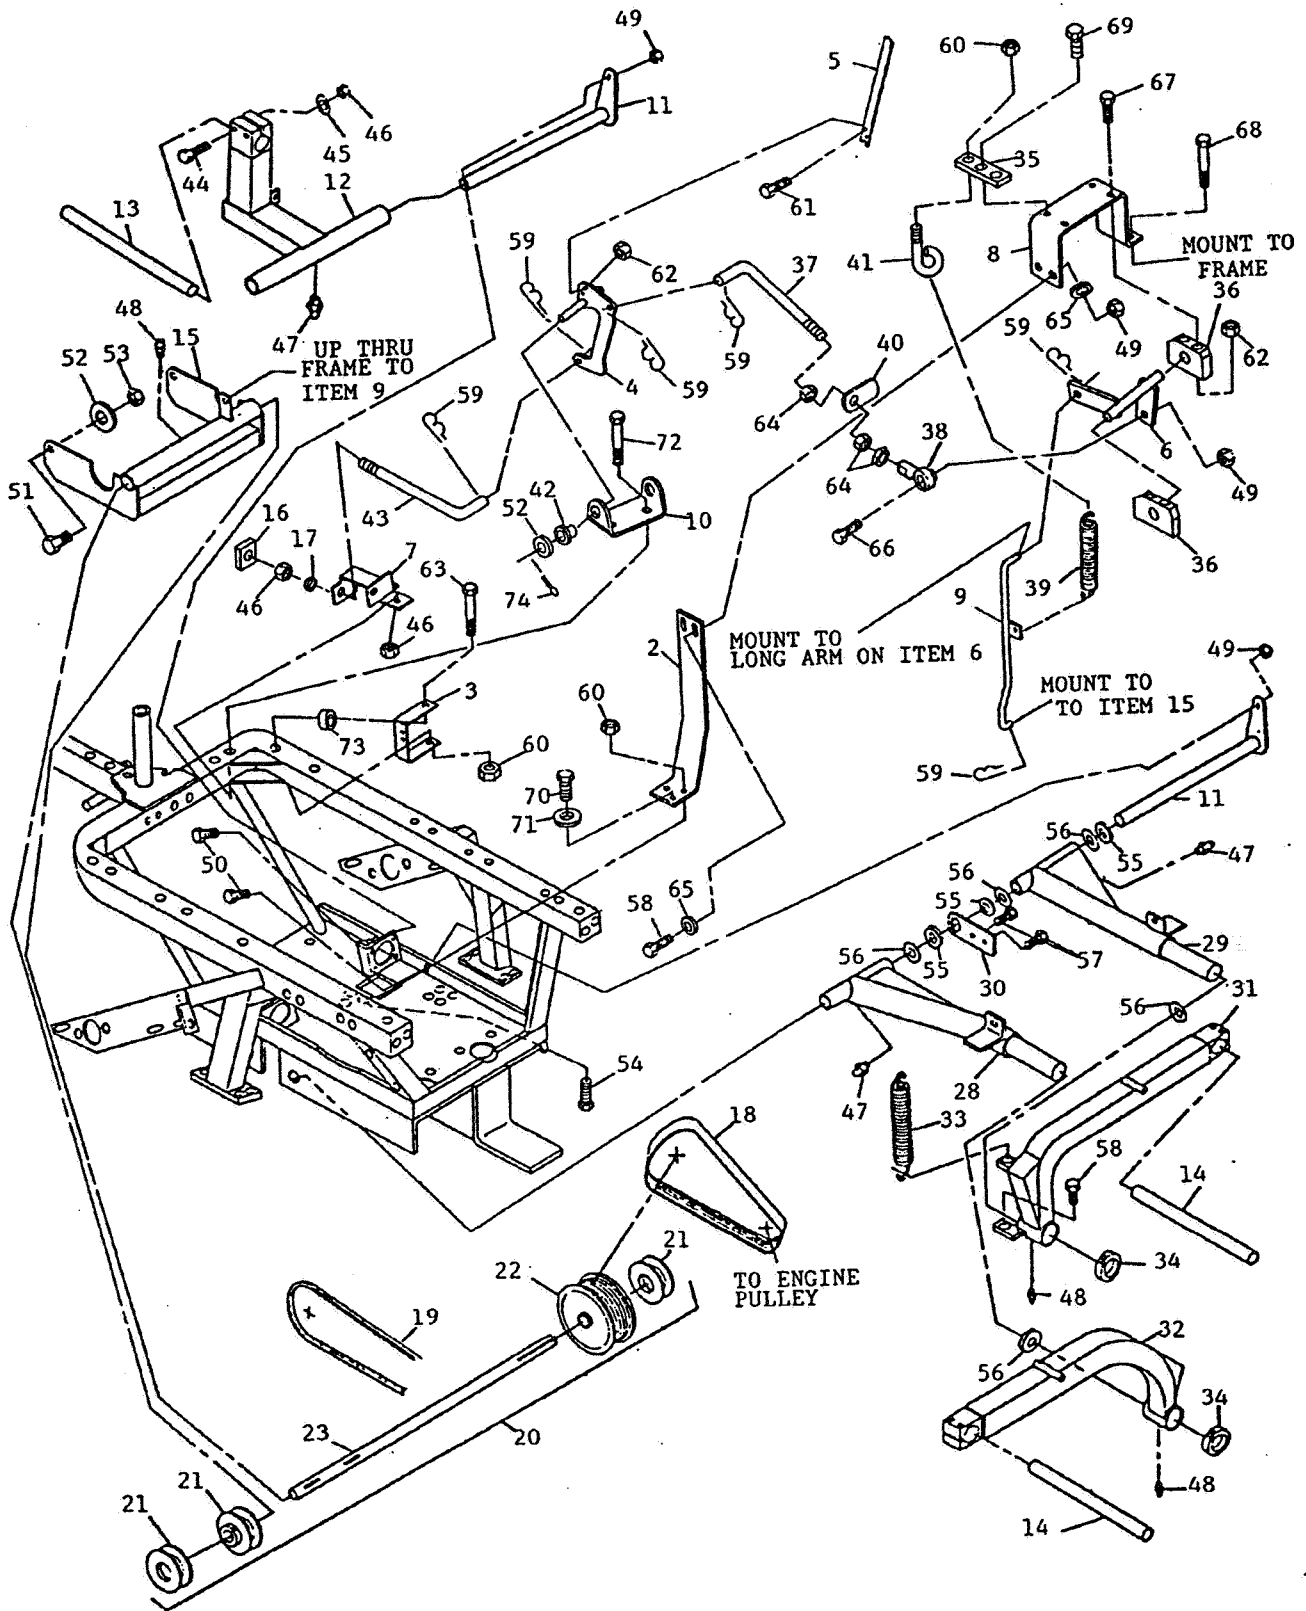

ITEM	RANSOMES PART NO	DESCRIPTION	BESCHREIBUNG	DESCRIPTION	QTY
		GB	D	F	
46	GSF2072AC	Nut			9
47	BAM8102	Lub			3
48	GSF2540AC	Lubricator			3
49	GSF2073AC	Nut			14
50	GSF2093ED	Bolt			3
51	GSF2002JF	Bolt			2
52	A159905	Washer			3
53	A139903	Nut			2
54	GSF2093AD	Bolt			3
55	GSF2150L	Washer			9
56	A159304	Thrust Washer			8
57	A119027	Bolt			2
58	GSF2093EF	Bolt			4
59	A149000	Hairpin Cotter			7
60	A139322	Nut			5
61	GSF2093AD	Bolt			2
62	A139912	Nut			6
63	A109016	Bolt			1
64	GSF2051AC	Nut			3
65	A159926	Washer			4
66	GSF2093EN	Bolt			1
67	A109039	Bolt			4
68	GSF2093EV	Bolt			2
69	A100940	Bolt			2
70	A119103	Bolt			1
71	A159917	Washer			1
72	GSF2091ES	Bolt			1
73	BAM3062	Bushing			1
74	A140045	Cotter Pin			2

* Not Illustrated

 **RANSOMES
TRIPLE 18**

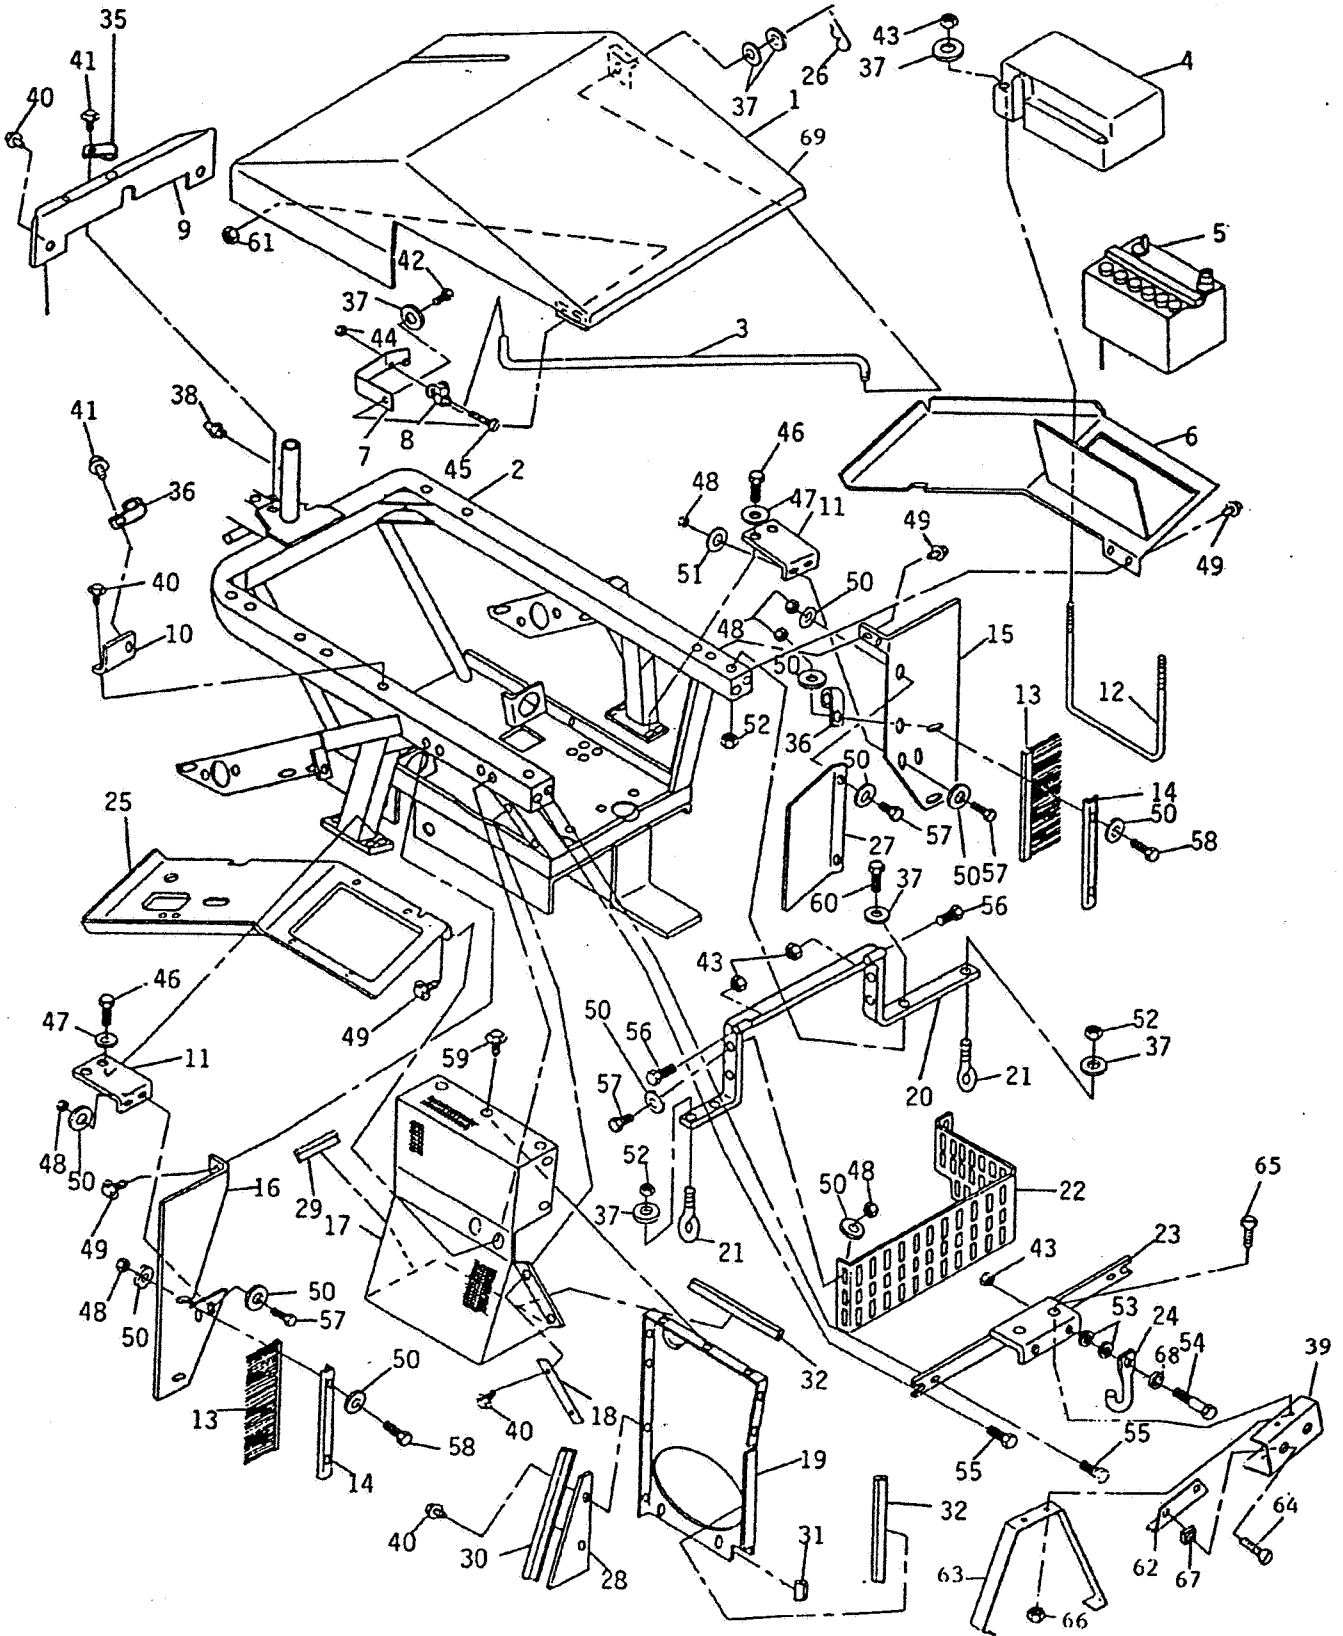


EXTERIOR PARTS

LIST OF PARTS
ERSATZTEILLISTE
LISTE DE PIECES

ITEM	RANSOMES PART NO	DESCRIPTION	BESCHREIBUNG	DESCRIPTION	QTY
		(GB)	(D)	(F)	
1	W136115	Hood			1
2	W136122	Front Frame			1
3	W133040A	Rod			1
4	BAP8035	Battery Cover			1
5	A823012	Battery			1
6	BAQ6098	Fender			1
7	W132144	Bracket			1
8	W138040	Clip			1
9	MBE4336A	Control Panel			1
10	W132108	Support			1
11	W132120	Support			2
12	W123026A	Rod			1
13	BAN8107	Brush			2
14	W112378	Retainer			2
15	W132097A	Grass Shield			1
16	W132098A	Grass Shield			1
17	W132109A	Front Screen			1
18	W132107	Plate			1
19	MBE4323	Screen			1
20	W136084A	Hood Support			1
21	A190001	Eye Bolt			2
22	W132117	Grill			1
23	W136057	Spring Mount			1
24	BAQ2088	Hook			2
25	MBE4323	Air Screen			1
26	A149000	Cotter Pin			1
27	W132143	Grass Guard			1
28	W132121	Filler Plate			1
29	W108194-01	Trim Seal			1
30	W108194-03	Trim Seal			1
31	W108194-02	Trim Seal			1
32	W108194-04	Trim Seal			2
33	BAF8450PK	Foam			1
34	BAF8492	Foam			2
35	W48412	Clip			2
36	H980031	Cable Clip			4
37	GSF2150E	Washer			9
38	GSF2540AC	Lubricator			1
39	W132212	Bracket			1
40	A119102	Screw			8
41	A119110	Screw			1
42	GSF2093CD	Bolt			1
43	A139322	Nut			6
44	A139340	Nut			2
45	A119015	Screw			2
46	GSF2093EN	Bolt			4
47	GSF2164J	S.L.Washer			4
48	A139912	Nut			11
49	A119103	Bolt			10
50	GSF2152A	Washer			16
51	A119064	Bolt			2

* Not Illustrated

 **RANSOMES
TRIPLE 18**

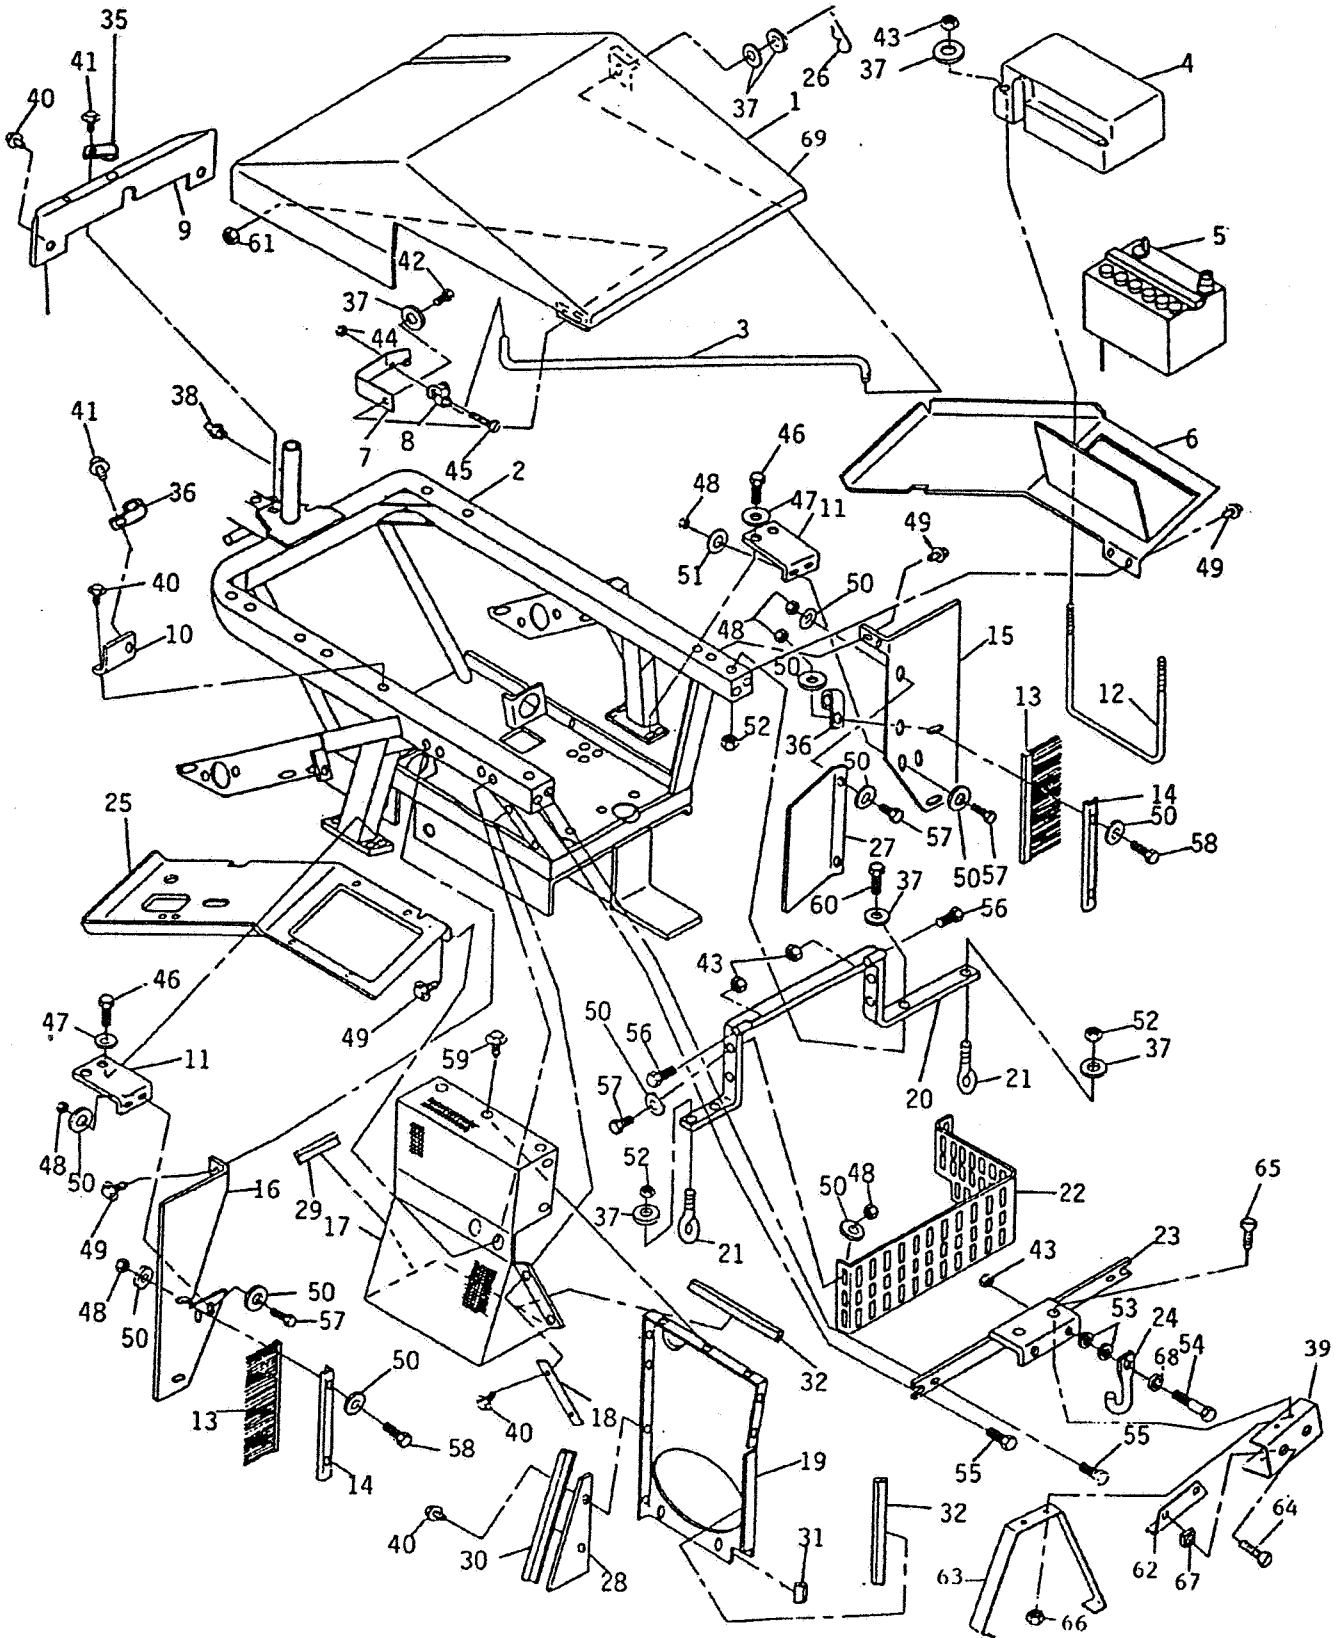

EXTERIOR PARTS

LIST OF PARTS
ERSATZTEILLISTE
LISTE DE PIECES

ITEM	RANSOMES PART NO	DESCRIPTION GB	BESCHREIBUNG D	DESCRIPTION F	QTY
52	GSF2073AC	Nut			4
53	BAA0089PB	Washer			4
54	GSF2093CF	Bolt			1
55	A119003	Bolt			4
56	A109000	Bolt			2
57	GSF2093AD	Bolt			18
58	GSF2093AF	Bolt			4
59	A119101	Bolt			6
60	GSF2091ES	Bolt			2
61	GSF2072AB	Nut			2
62	W132210A	Bracket			1
63	W132213	Spring			1
64	A119004	Screw			7
65	A119109	Screw			2
66	A139325	Nut			5
67	W138065-2	Nut			1
68	BAN3077	Bushing			2
69	W132182	Screen			1
*	MBE4544	Contact strip			1

* Not Illustrated

ENGINE & BRAKE

LIST OF PARTS
ERSATZTEILLISTE
LISTE DE PIECES


ITEM	RANSOMES PART NO	DESCRIPTION	BESCHREIBUNG	DESCRIPTION	QTY
		(GB)	(D)	(F)	
1	W136122	Frame front			1
2	A682170	Engine (Kubota)			1
2.1	A682170	Exhaust muffler			1
3	A421270	Belt			1
4	MBE4360A	Pulley			1
5	MBF0040	Belt Guide			1
6	MBF0039	Rod			1
7	W136107	Pivot Mount			1
8	W136116	Pedal Arm			1
9	W132200	Support			1
10	BAQ8017	Mount			4
12	MBC7029	Drain Plug			1
*	A186902	Washer			1
13	MBE4300A	Rear Mount			1
13.1	MBE4310	Front Mount			1
14	MBE3499	Bearing			2
15	W136146	Foot Pedal			1
16	W136126A	Latch			1
17	BAF8429	Spring			1
18	BAF8428	Collar			1
19	BAA0434	Collar			2
20	W136121	Lever			1
21	W136118	Brake Mount			1
22	W136129	Bracket			1
23	W132207	Stop			1
24	W133060A	Rod			1
25	W33004A	Swivel			1
26	A290074	Spring			1
27	W138055	Brake			1
28	W132208	Bracket			1
29	A159408	Washer			A/R
30	A150008	Washer			1
31	GSF2164G	S.L.Washer			4
32	GSF2093AB	Bolt			4
33	GSF2093CF	Bolt			1
34	A139322	Nut			1
35	A139912	Nut			1
36	GSF2093AB	Bolt			4
37	GSF2093AD	Bolt			1
38	A149000	Hairpin Cotter			3
39	A121414	Screw			1
*	A121409	Screw			1
*	A100418	Bolt			1
*	A130010	Nut			2
40	A130110	Nut			2
41	A119004	Screw			16
42	A139329	Nut			16
43	GSF2072AC	Nut			2
44	A141907	Pin			1
45	GSF2001GP	Bolt			1
46	GSF2163K	S.L.Washer			1

* Not Illustrated

ITEM	RANSOMES PART NO	DESCRIPTION GB	BESCHREIBUNG D	DESCRIPTION F	QTY
47	A159956	Washer			1
48	GSF2093ED	Bolt			2
49	GSF2164J	S.L.Washer			2
50	A159927	Washer			3
51	A119103	Bolt			2
52	A100940	Bolt			2
53	A139302	Nut			1
54	GSF2093EV	Bolt			1
55	A159926	Washer			1
56	A109043	Bolt			1
57	A139301	Nut			1

* Not Illustrated

 **RANSOMES
TRIPLE 18**

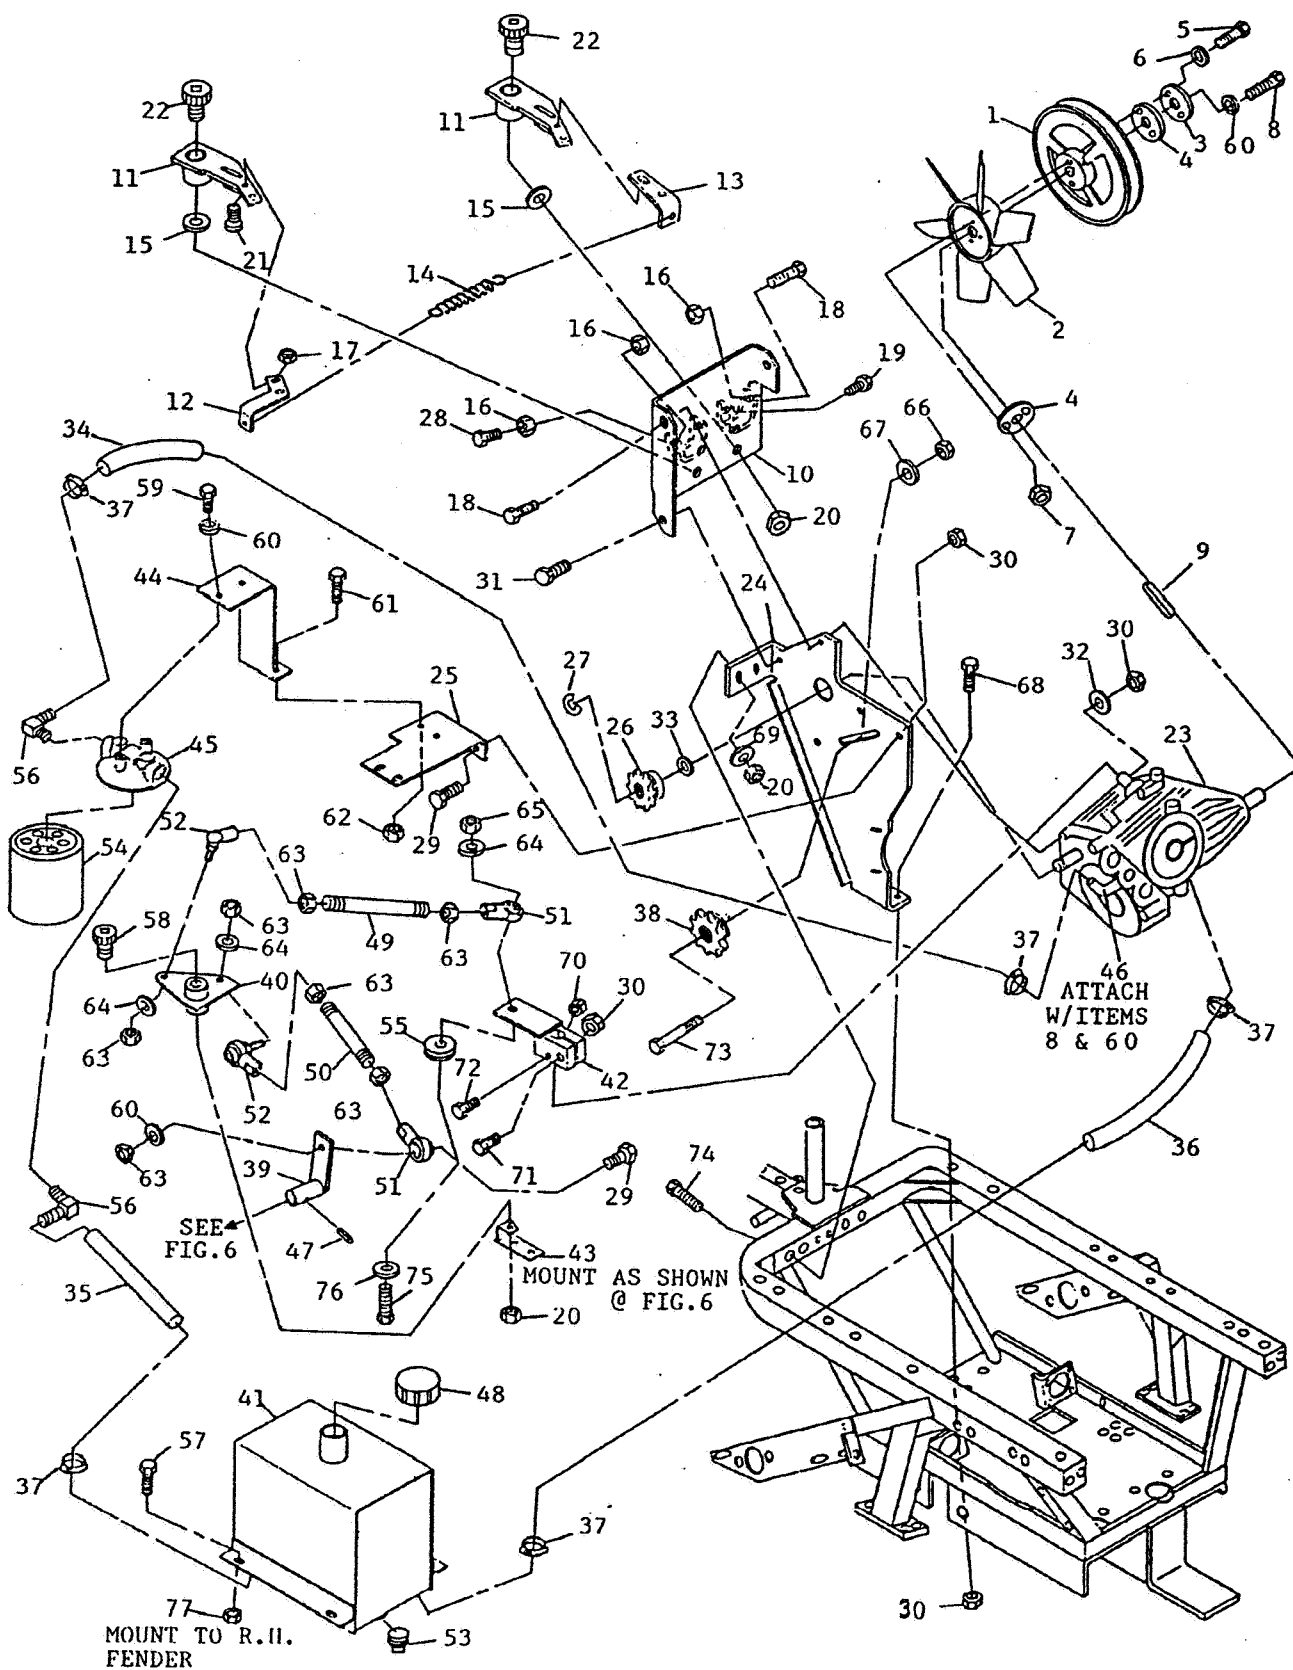


HYDROSTAT & LINKAGE

LIST OF PARTS ERSATZTEILLISTE LISTE DE PIECES

ITEM	RANSOMES PART NO	DESCRIPTION GB	BESCHREIBUNG D	DESCRIPTION F	QTY
1	W131006	Pulley			1
2	W138051	Fan			1
3	W132179	Fan Positioner			1
4	W132178	Fan Clamp			2
5	GSF2091AK	Bolt			2
6	GSF2152A	Washer			2
7	A139912	Nut			2
8	A110294	Bolt			1
9	A169019	Parallel Key			1
10	W136113	Neutral Mount			1
11	W136124	Neutral paddle Assy			2
12	MBE4131A	Bracket			1
13	MBE4132	Bracket			1
14	A290100	Spring			1
15	A159971	Thrust Washer			AR
16	GSF2072AA	Nut			4
17	A139325	Nut			4
18	GSF2093AD	Bolt			2
19	GSF2093AC	Bolt			2
20	GSF2073AC	Nut			5
21	A119004	Screw			4
22	A129100	Bolt			2
23	W138052	Hydrostat			1
24	W132175	Mount			1
25	W132164	Brace			1
26	W138049B	Sprocket			1
27	A179917	Snap Ring			1
28	A100939	Bolt			2
29	GSF2093CF	Bolt			2
30	A139322	Nut			7
31	A109027	Bolt			2
32	A159401	Washer			5
33	A159997	Washer			1
34	HO32608AP	Hose			1
35	HO32608CJ	Hose			1
36	HO32608ES	Hose			1
37	W108094PF	Hose Clamp			6
38	W138037	Sprocket			1
39	W136116	Pedal Arm			1
40	W136125	Pivot			1
41	W138057	Reservoir			1
42	W136109	Control Rod			1
43	W136107	Pivot Mount			1
44	W132192	Filter Mount			1
45	W138059	Filter Head			1
46	W138066	Fitting 90°			2
*	A229369	O Ring			2
47	A141907	Roll Pin			1
48	W128081	Filler			1
49	MBE4285	Rod			1
50	MBE4286	Rod			1

* Not Illustrated

 **RANSOMES
TRIPLE 18**

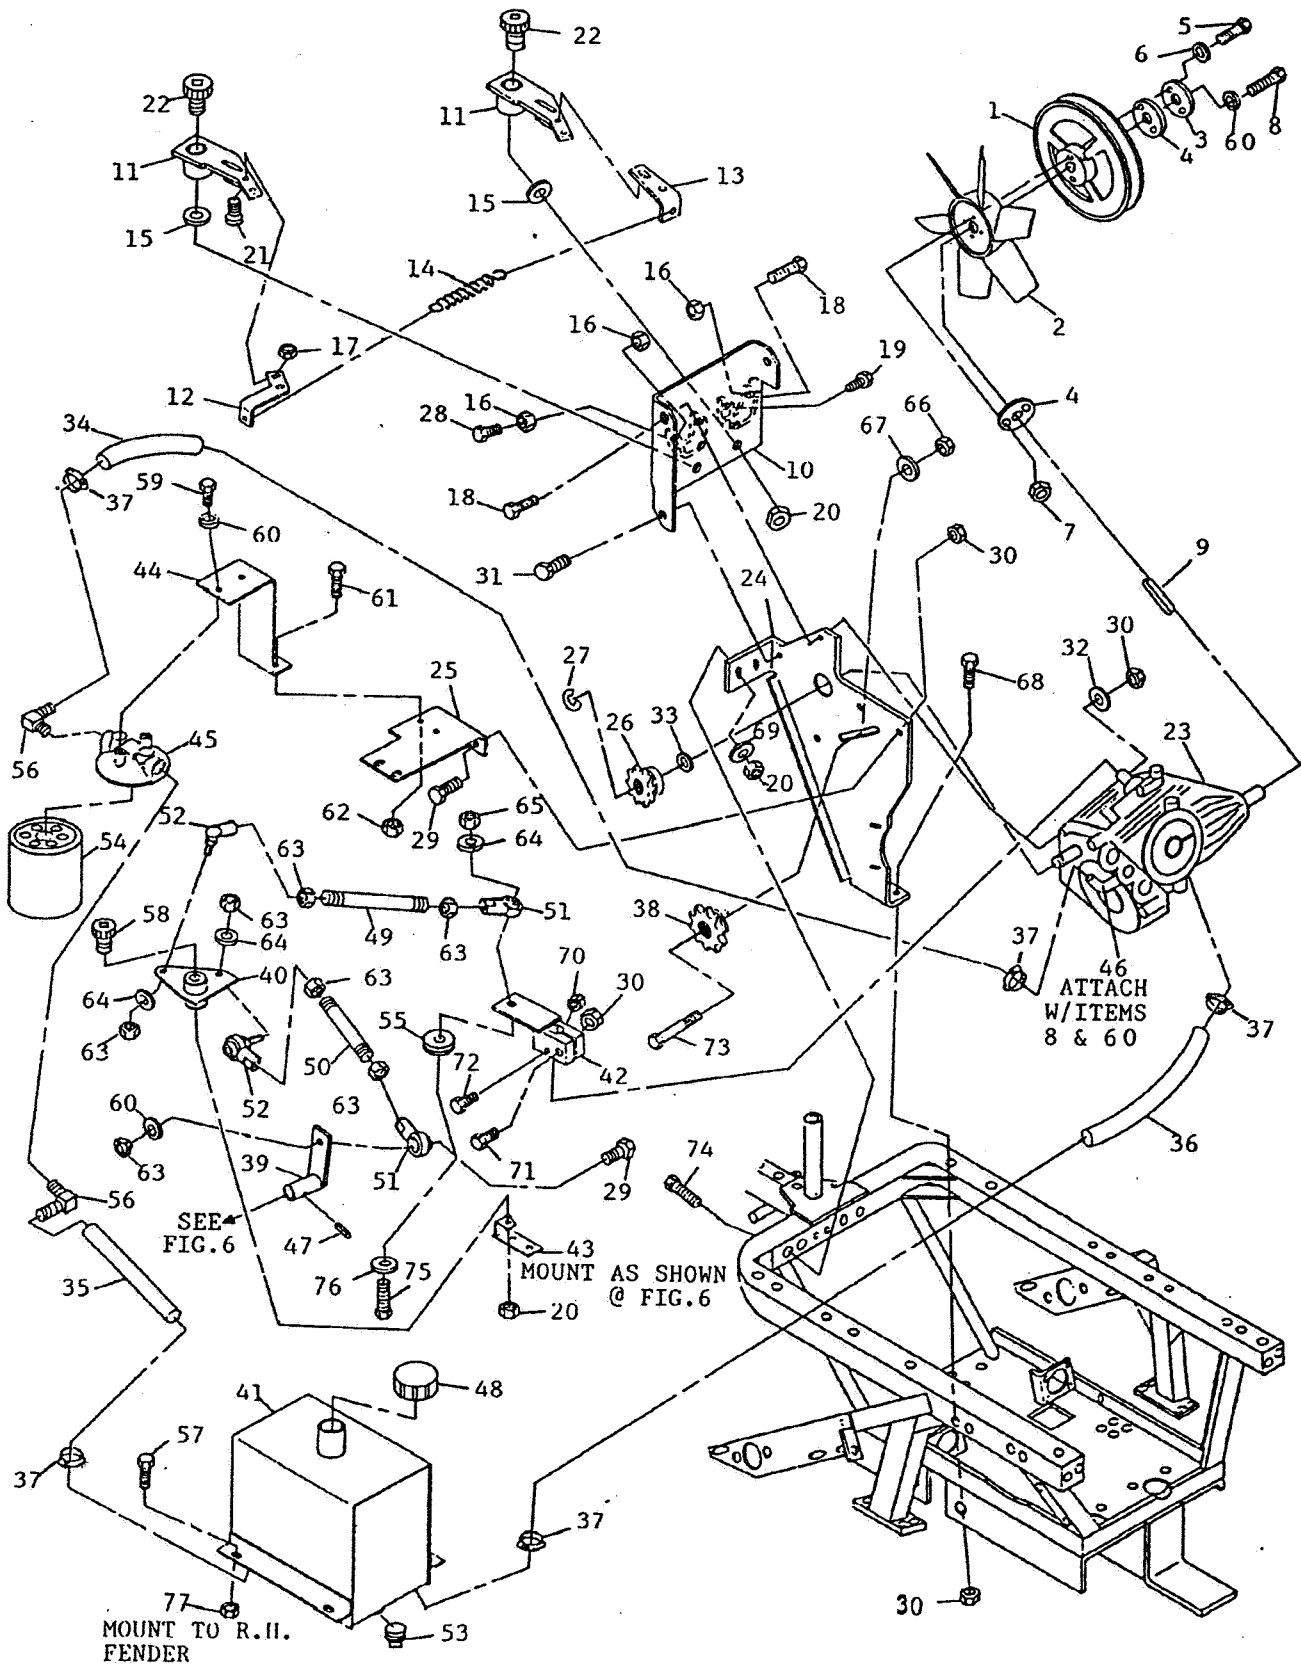






HYDROSTAT & LINKAGE

LIST OF PARTS
ERSATZTEILLISTE
LISTE DE PIECES

ITEM	RANSOMES PART NO	DESCRIPTION GB	BESCHREIBUNG D	DESCRIPTION F	QTY
51	A814514	Ball Joint			2
52	BAA0846	Ball Joint			2
53	A247947	Plug			1
54	W128112	Filter Element			1
55	A203602	Bearing			1
56	W108086PC	Hose			2
57	A119003	Bolt			4
58	A129112	Bolt			1
59	GSF2093AB	Bolt			2
60	GSF2164G	S.L.Washer			4
61	GSF2093AD	Bolt			2
62	A139305	Nut			2
63	GSF2051AB	Nut			7
64	A151008	S.L.Washer			2
65	GSF2072AB	Nut			1
66	GSF2080AE	Locknut			1
67	A159905	Washer			1
68	GSF2093CD	Bolt			2
69	A159926	Washer			2
70	A130006	Nut			1
71	A109000	Bolt			1
72	A100207	Bolt			1
73	GSF2001JK	Bolt			1
74	A109016	Bolt			2
75	A109018	Bolt			1
76	A159941	Washer			1
77	A139301	Nut			4

* Not Illustrated

     RANSOMES
TRIPLE 18

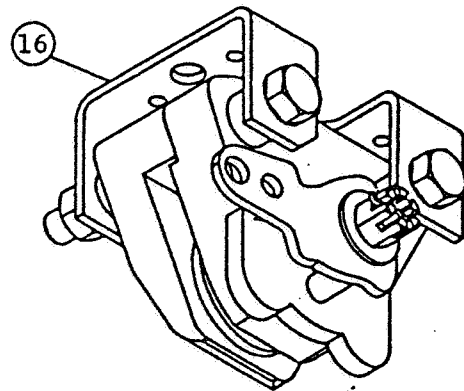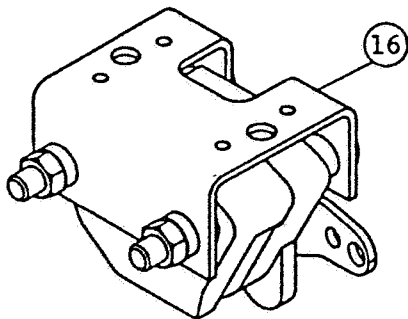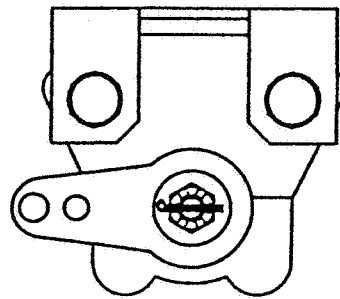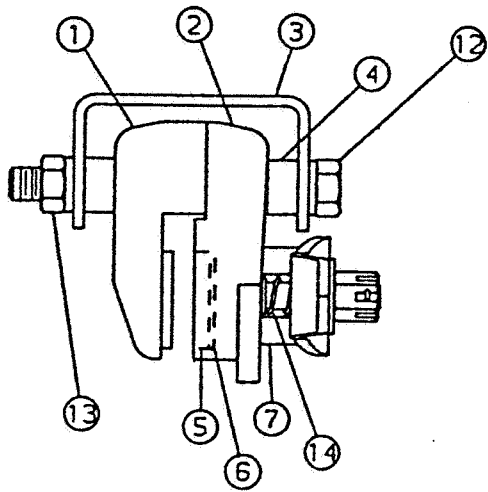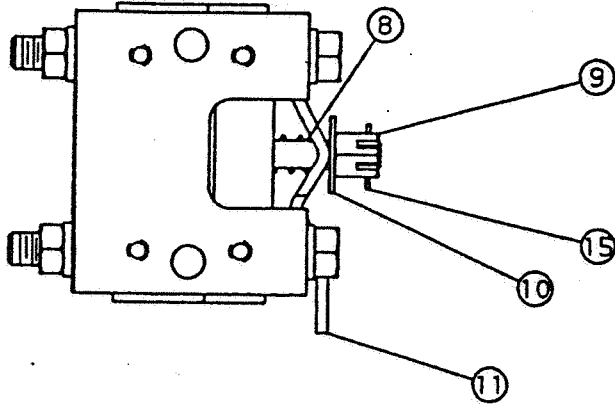


BRAKE ASSY

**LIST OF PARTS
ERSATZTEILLISTE
LISTE DE PIECES**

ITEM	RANSOMES PART NO	DESCRIPTION GB	BESCHREIBUNG D	DESCRIPTION F	QTY
1	W138055PA	Housing with Puck			1
2	W138055PB	Housing with Stud			1
3	W138055PC	Bracket			1
4	W138055PD	Bushing			4
5	W138055PE	Friction Plate			1
6	W138055PF	Bearing Plate			1
7	W138055PG	Pin			2
8	W138055PH	Guide			1
9	W138055PJ	Castle Nut			1
10	W138055PK	Washer			1
11	W138055PL	Cam Arm			1
12	GSF2001EX	Bolt			2
13	A139910	Locknut			2
14	BAN8044PF	Spring Compression			1
15	A140045	Cotter Pin			1
16	W138055	Brake Assy			1

* Not Illustrated

 RANSOMES
TRIPLE 18

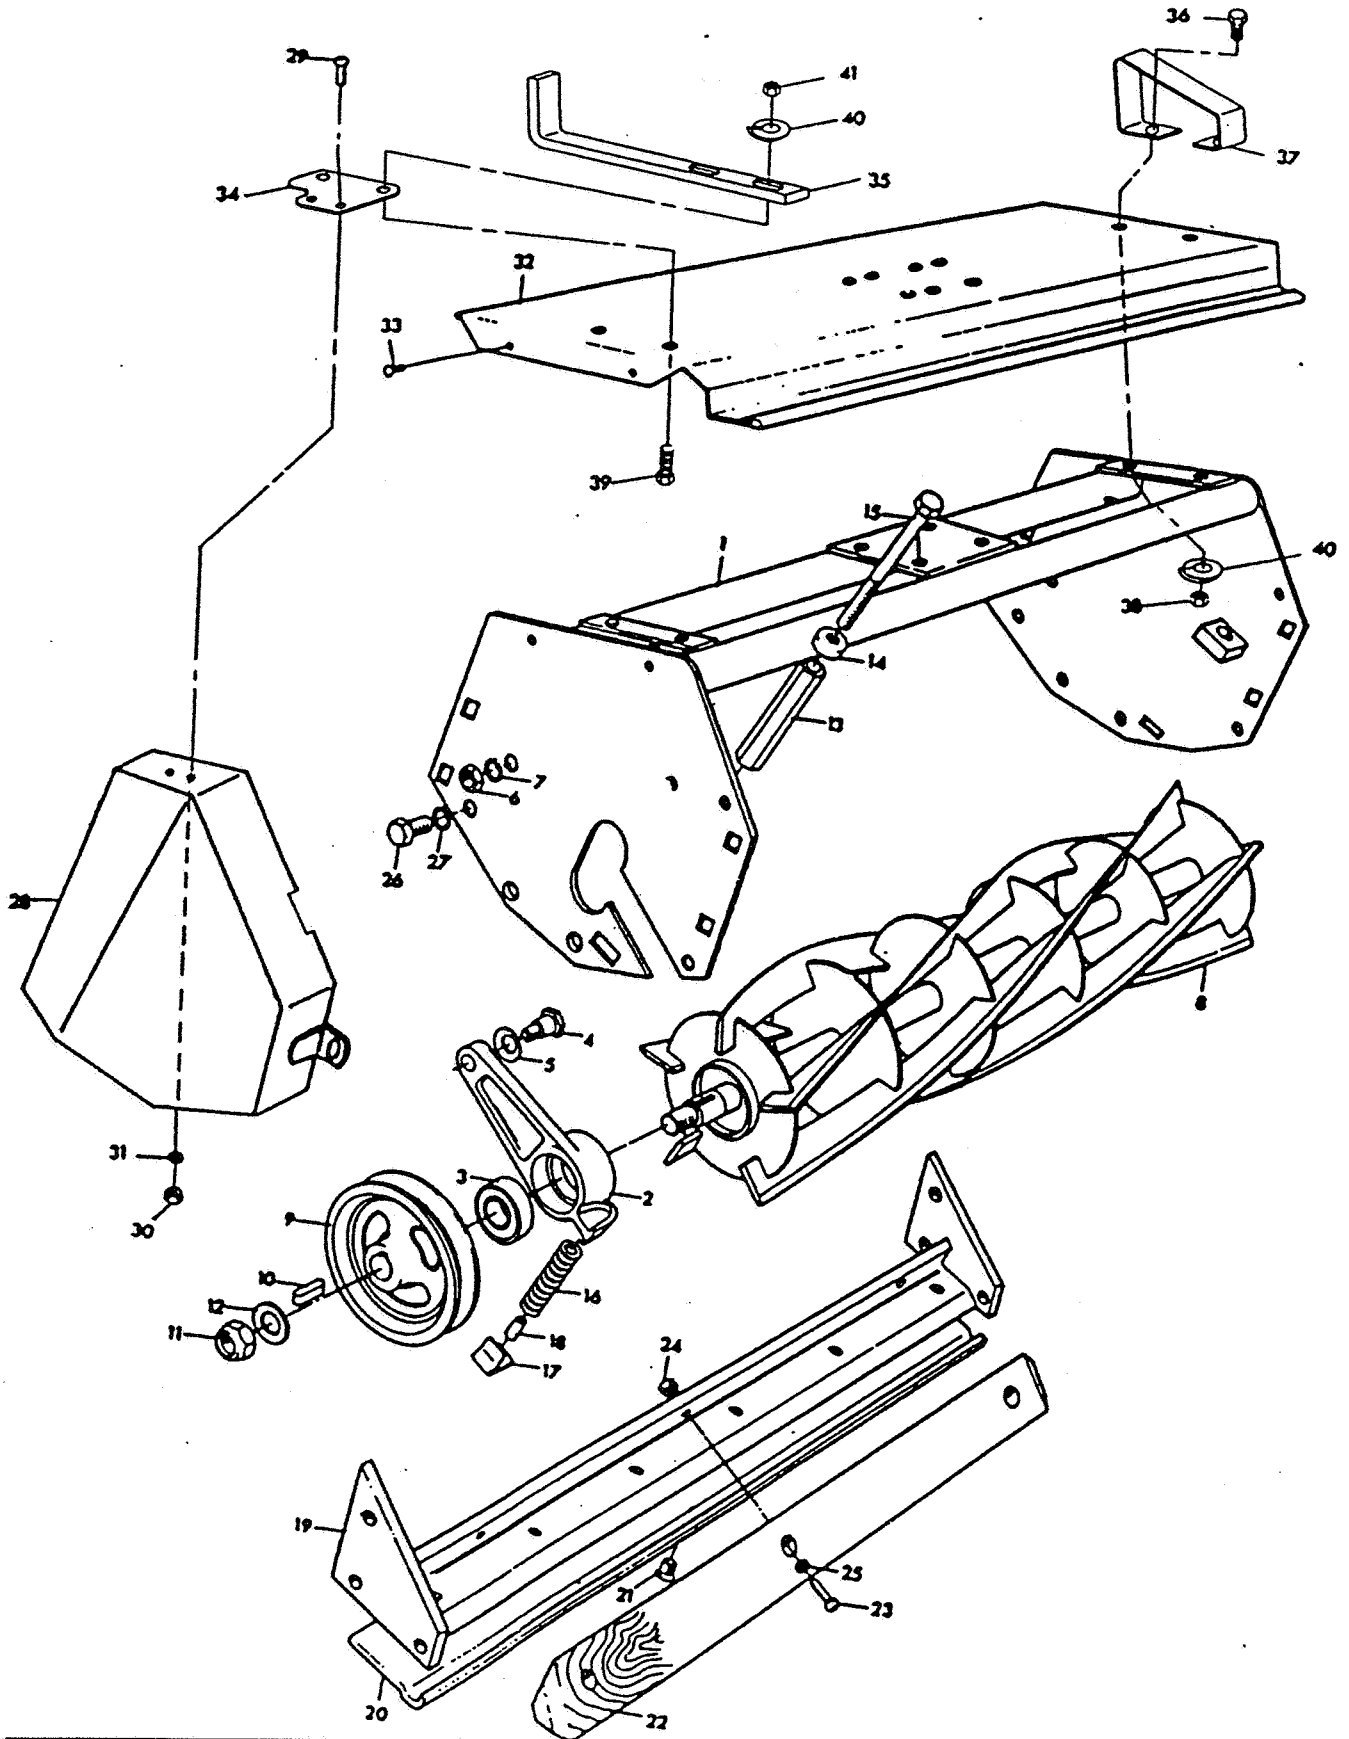

CUTTING UNIT


LIST OF PARTS ERSATZTEILLISTE LISTE DE PIECES

For LH Drive Unit use quantity column A
For RH Drive Unit use quantity column B
For Rear RH Drive Unit use quantity column C

ITEM	RANSOMES PART NO	DESCRIPTION (GB)	BESCHREIBUNG (D)	DESCRIPTION (F)	QTY		
					A	B	C
1	MBC7674A	Main Frame LH			1		
*	MBC7673A	Main Frame RH				1	1
2	MBB9868C	Bearing Housing			2	2	2
3	A203604	Bearing			2	2	2
4	MBC7671	Pin			2	2	2
5	H083023	Washer			2	2	2
6	A130010	Nut			2	2	2
7	A151010	S.L.Washer			2	2	2
8	MBC9367B	Cutting Cylinder LHD			1		
*	MBC9369B	Cutting Cylinder RHD				1	1
9	MBB9697A	Pulley			1	1	1
10	A160088	Key			1	1	1
11	A133903	Stiffnut			1	1	1
12	A150012	Washer			1	1	1
13	MBC4728	Locknut			2	2	2
14	A229935	Seal			2	2	2
15	A109073	Bolt			2	2	2
16	A291017	Adjusting Spring			2	2	2
17	MBC7740	Spring Anchor Assembly			2	2	2
19	LMAA504B	Bottom Block Assy			1	1	1
20	MBA7087	Bottom Blade			1	1	1
21	A119001	Screw			11	11	11
22	MBB9797	Wood Fillet			1	1	1
23	A112108	Screw			3	3	3
24	A130005	Nut			3	3	3
25	A150005	Washer			3	3	3
26	A110304	Screw			2	2	2
27	A151008	Washer			2	2	2
28	MBC5796	Belt Cover LH			1		
*	MBC5792	Belt Cover RH				1	
*	MBC1655	Pulley Guard Rear					1
*	A907206	Spacer			1	1	1
29	A115294	Screw			2	2	
*	A100315	Bolt					1
*	A151008	Washer			1	1	1
*	MBC1570A	Spacer			1	1	1
*	A133408	Nut M8			1	1	1
*	A150008	Washer M8			1	1	1
32	MBC7675B	Top Cover			1	1	1
34	MBC5801	Cover Plate			1	1	
35	MBG1112	Pivot Support			2	2	
36	A110405	Screw			2	2	
37	MBC5803	Handle			1	1	
38	A130010	Nut			4	4	
39	A110407	Screw			2	2	
40	A151010	S.L. Washer M10			4	4	

* Not Illustrated

 RANSOMES
TRIPLE 18

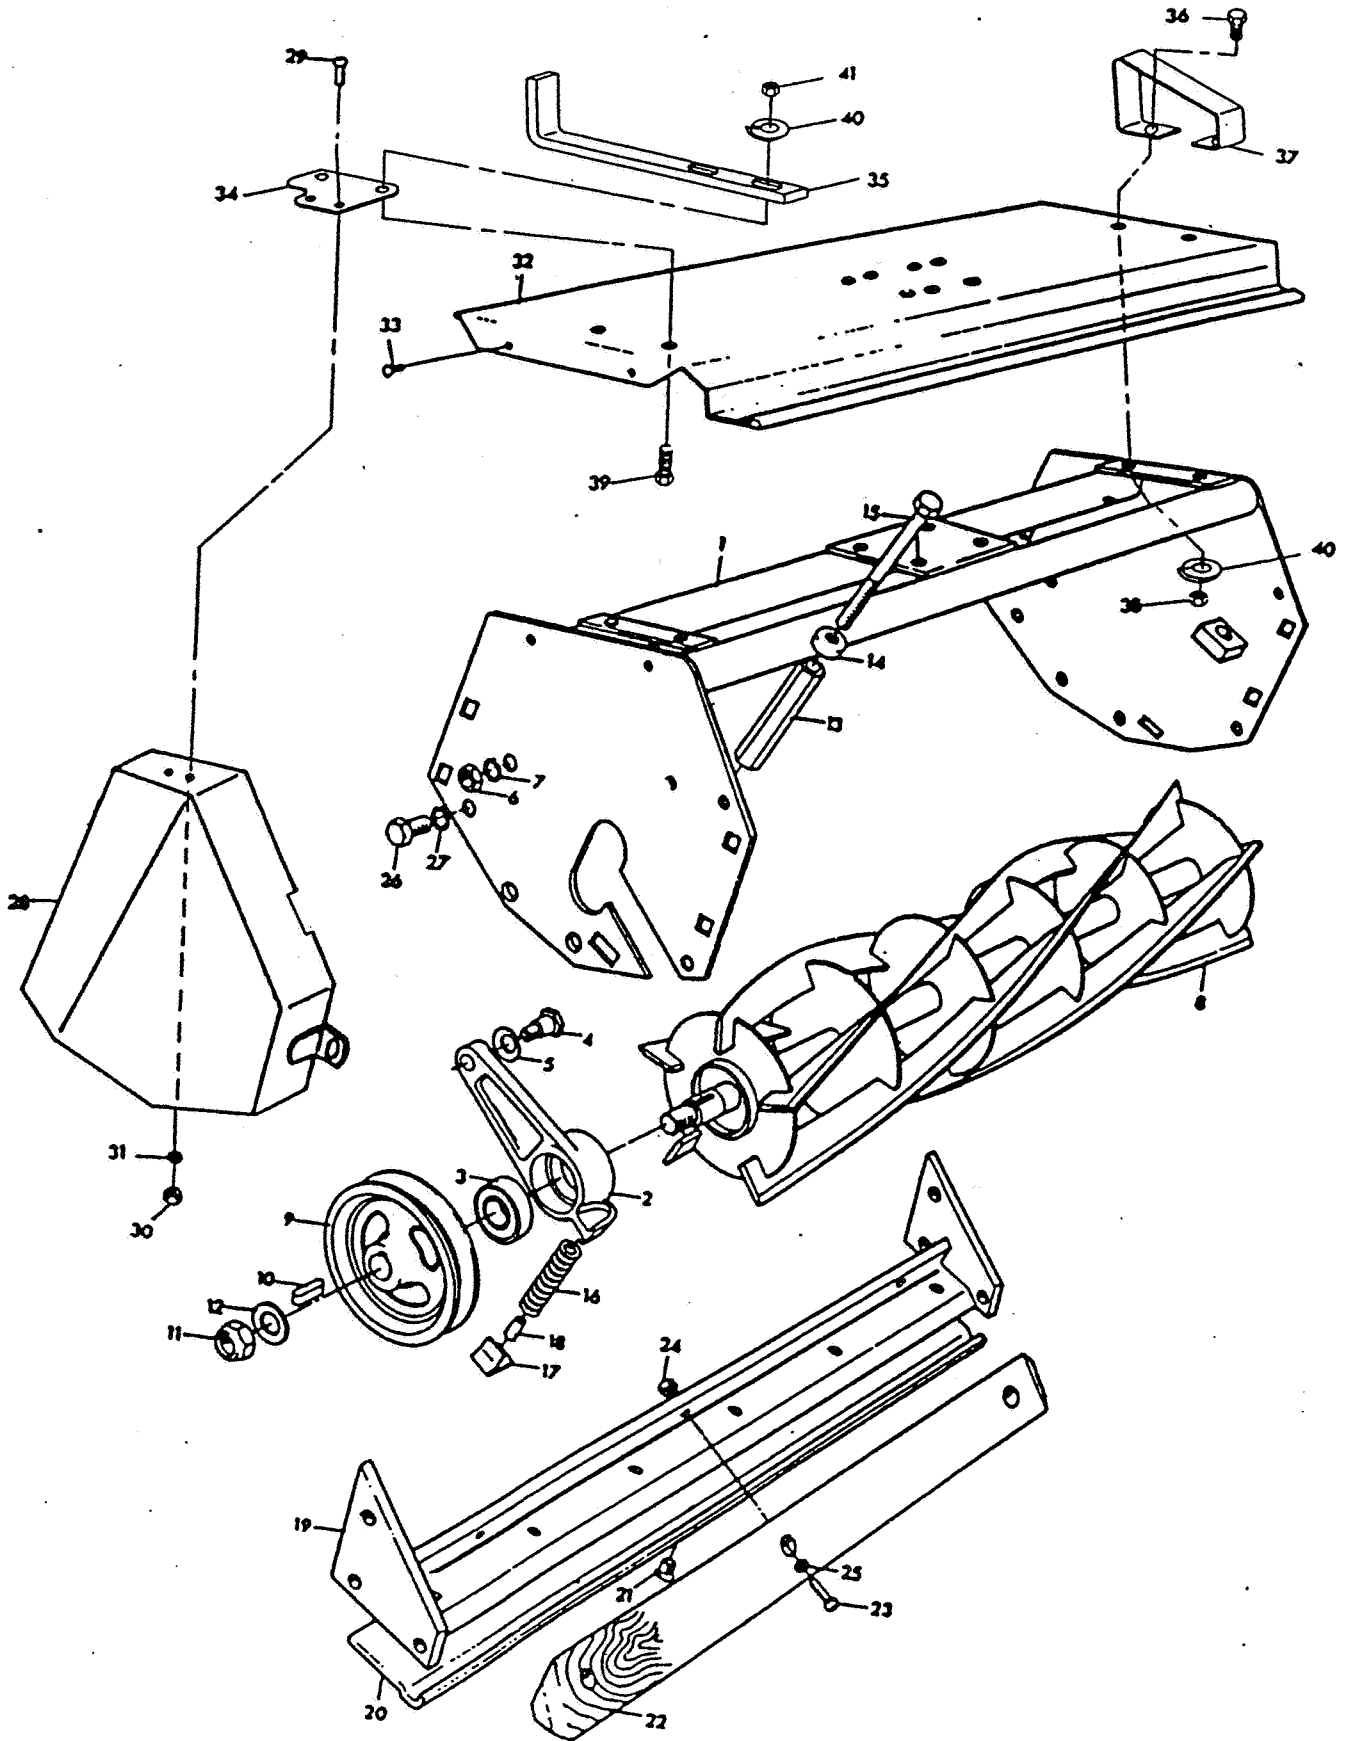

CUTTING UNIT


LIST OF PARTS ERSATZTEILLISTE LISTE DE PIECES

For LH Drive unit use quantity column A
 For RH Drive unit use quantity column B
 For Rear Drive unit use quantity column C

ITEM	RANSOMES PART NO	DESCRIPTION	BESCHREIBUNG	DESCRIPTION	QTY		
		GB	D	F	A	B	C
41	A130010	Nut			2	2	
*	A228204	Nilos Ring (For Ref. 2)			1	1	1
*	A299306	Lubricator (For Ref. 2)			2	2	2
*	A189000	Screw Plug (For Ref. 2)			2	2	2
*	A491027	Belt			1	1	
*	A491025	Belt					1

* Not Illustrated

 RANSOMES
TRIPLE 18

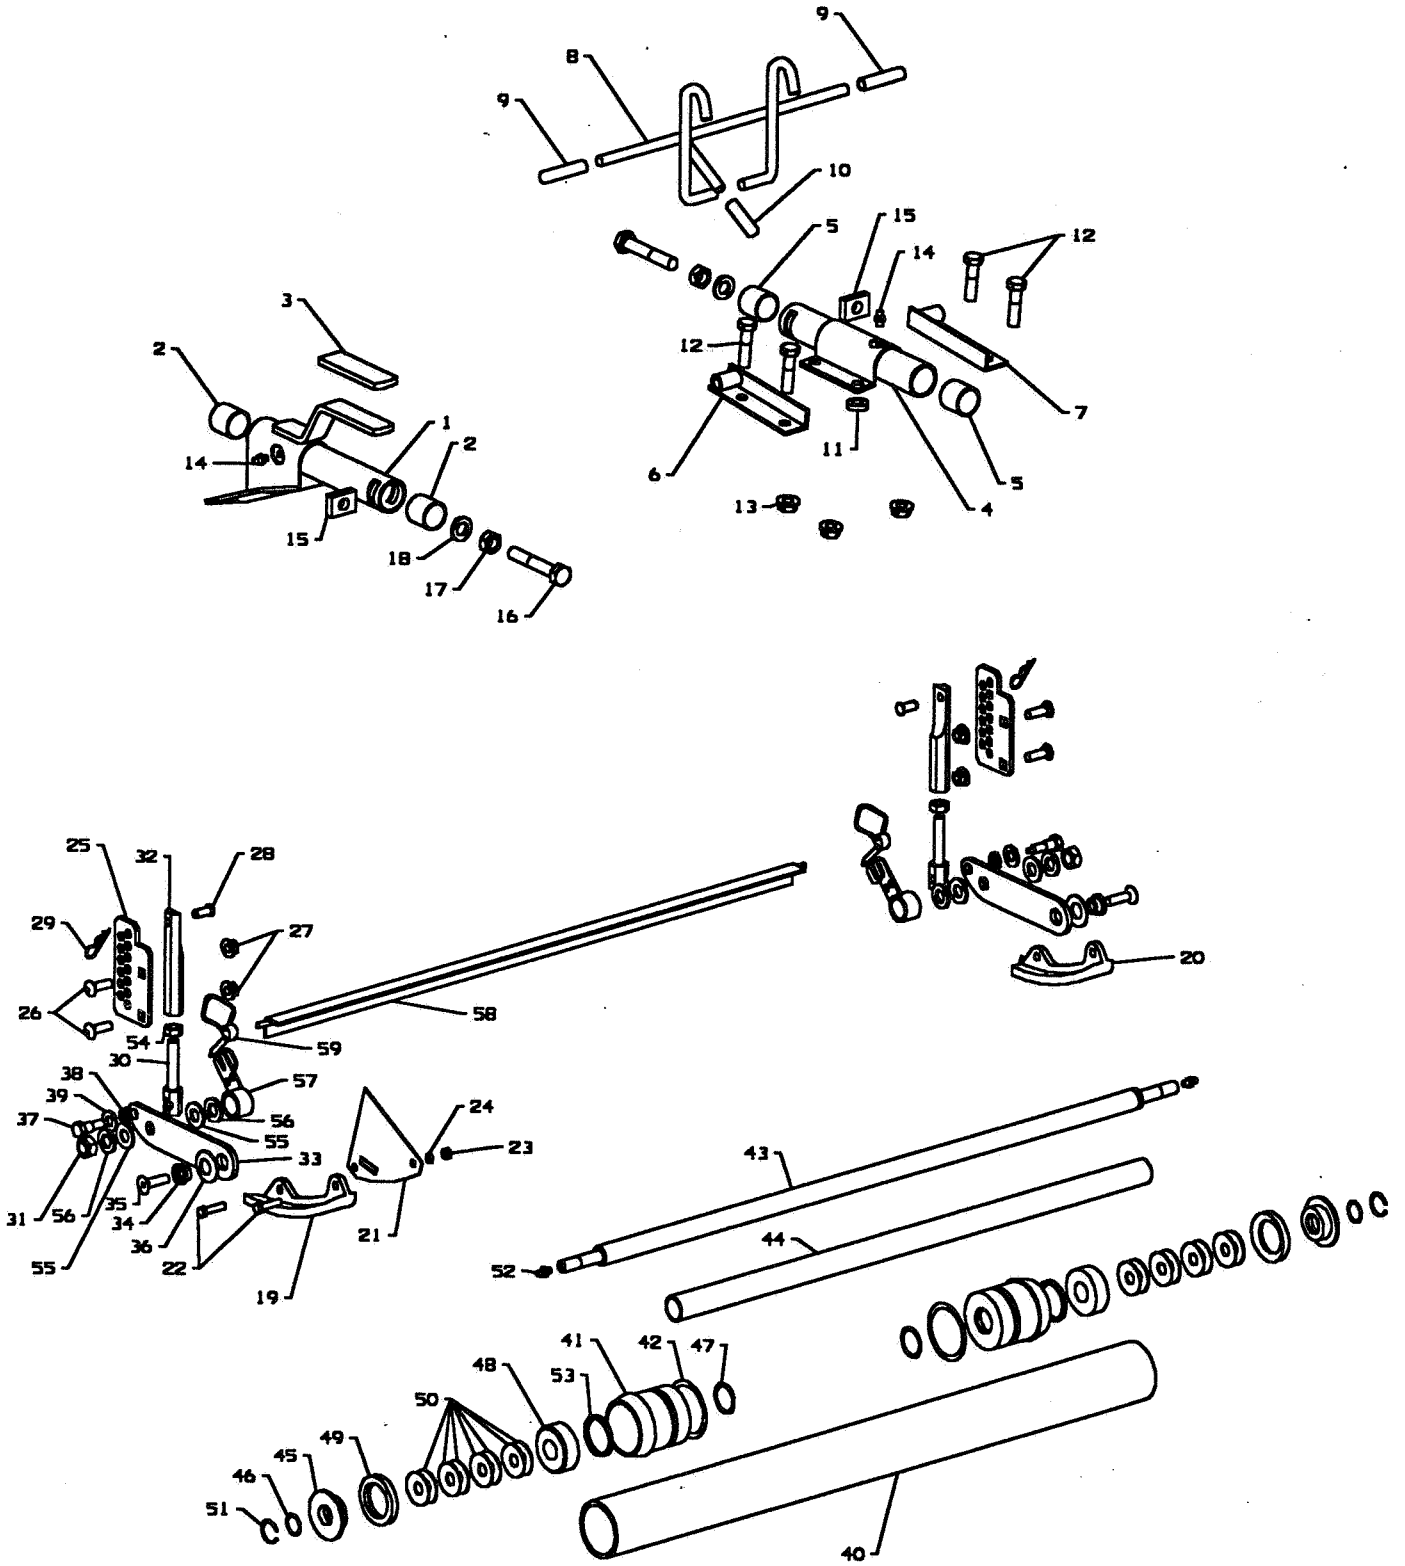

PIVOT SKIDS & ROLLS


**LIST OF PARTS
ERSATZTEILLISTE
LISTE DE PIECES**

For RH Front Unit Use quantity column A
For LH Front Unit use quantity column B
For Rear Unit use quantity column C

ITEM	RANSOMES PART NO	DESCRIPTION (GB)	BESCHREIBUNG (D)	DESCRIPTION (F)	QTY		
					A	B	C
1	MBC1574	Front Pivot			1	1	
2	GSF3014LF	Bush			2	2	
3	A914200	Handgrip			1	1	
4	MBC5925	Rear Pivot					1
5	GSF3014LF	Bush					1
6	MBC5804	Angle Bracket RH					2
7	MBC5807	Angle Bracket LH					1
8	MBC5423	Lift Handle					2
9	A914206	Sleeve					2
10	MBA5367A	Sleeve					1
11	MBC4721	Packer			1	1	1
12	A110407	Screw			4	4	4
13	A133310	Nut			4	4	4
*	MBC1666	Foot Guard					1
*	A110407	Screw					2
*	A150010	Washer					2
14	A299301	Lubricator			1	1	1
15	MBC1628	End Plug			1	1	1
16	A110514	Screw M12 x 70			1	1	1
17	A130012	Nut M12			1	1	1
18	A150012	Washer			1	1	1
19	MBE0092	Front Skid RH			1	1	1
20	MBE0093	Front Skid LH			1	1	1
21	MBB9821	Cover Plate			1	1	
22	A110204	Screw			4	4	4
23	A130006	Nut M6			4	4	4
24	A151006	S.L.Washer M6			4	4	4
25	MBC7155	Carriage Plate			2	2	
*	MBC7664	Carriage					2
26	A102900	Bolt			4	4	4
27	A133408	Nut			4	4	4
28	MBC7198C	Pin			2	2	2
29	A149022	R Clip			2	2	2
30	MBC7156	Rod			2	2	2
31	MBE2222	Rollnut			2	2	2
32	MBC7157B	Barrel			2	2	2
33	MBE2494A	Roll Arm Rear			2	2	2
34	MBC8910	Collar			2	2	2
35	A121305	Screw			2	2	2
36	H083023	Disc Spring			2	2	2
37	MBC8000B	Shoulder Pin			2	2	2
38	GSF2165J	S.L.Washer (Double Col)			2	2	2
39	A150010	Washer			2	2	2
	LMSE031	Roll Assembly			1	1	1
40	MBE1747	Tube			1	1	1
41	MBE0974	Housing			2	2	2
42	A221327	O Ring			2	2	2
43	MBE0976	Shaft			1	1	1
44	MBE0921	Inner Tube			1	1	1
45	MBE0975	End Cap			2	2	2
46	A221210	O Ring			2	2	2
47	A221213	O Ring			2	2	2

* Not Illustrated

 RANSOMES
TRIPLE 18

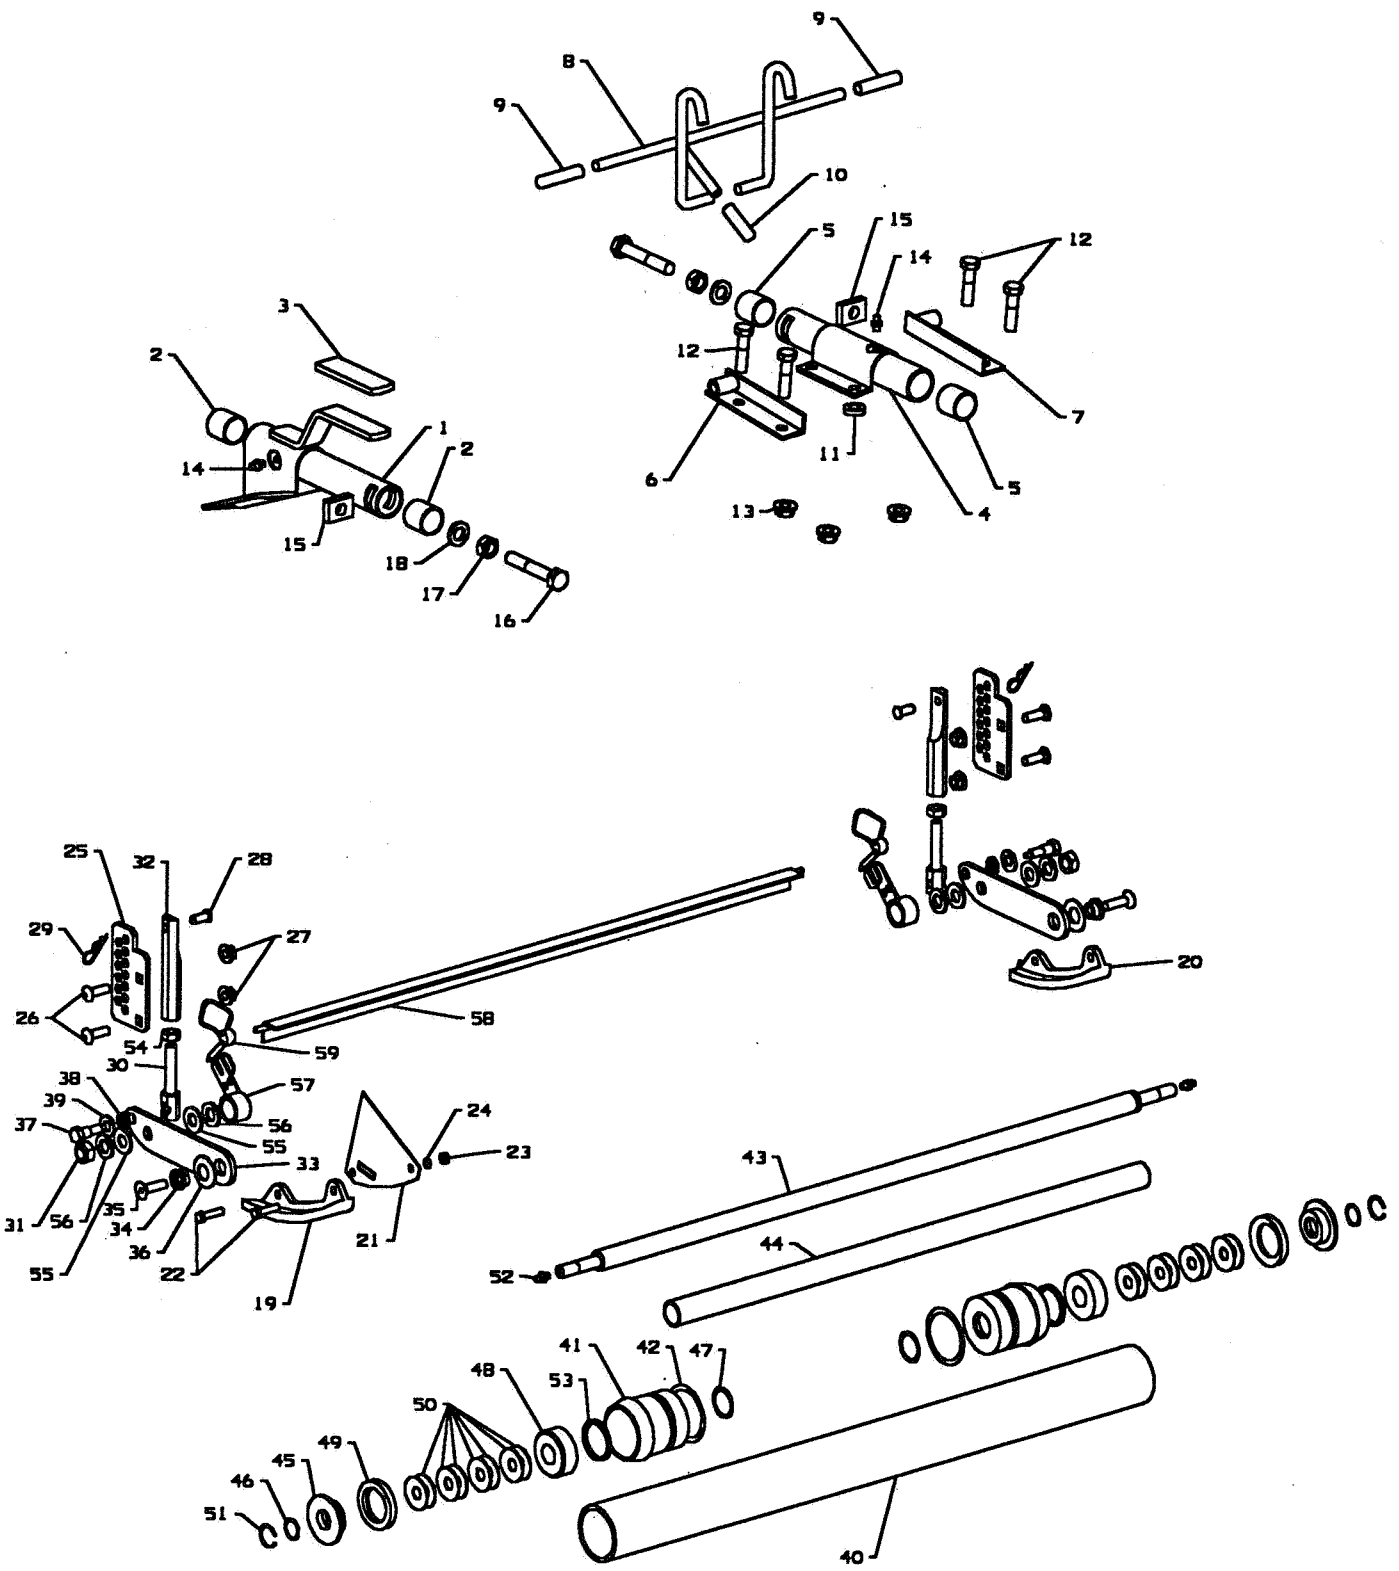

PIVOT SKIDS & ROLLS



**LIST OF PARTS
ERSATZTEILLISTE
LISTE DE PIECES**

For RH Front Unit Use quantity column A
For LH Front Unit use quantity column B
For Rear Unit use quantity column C

ITEM	RANSOMES PART NO	DESCRIPTION	BESCHREIBUNG	DESCRIPTION	QTY
		GB	D	F	
48	A205204	Bearing			2 2 2
49	A220350	Seal			2 2 2
50	A292112	Disc Spring			16 16 16
51	A171020	Ext.Circlip			2 2 2
52	A299301	Lubricator			2 2 2
53	A230011	Spacing Washer			2 2 2
54	A130012	Stiffnut M12			2 2 2
55	MBC5889	Rubber Washer			4 4 4
56	A150012	Washer			2 2 2
57	MBC8486A	Bracket			2 2 2
58	MBC9147	Scraper			1 1 1
59	A149002	Cotter Pin and Ring			2 2 2
*	A906105	Plastic Spacer			2 2 2

* Not Illustrated

  **RANSOMES
TRIPLE 18**

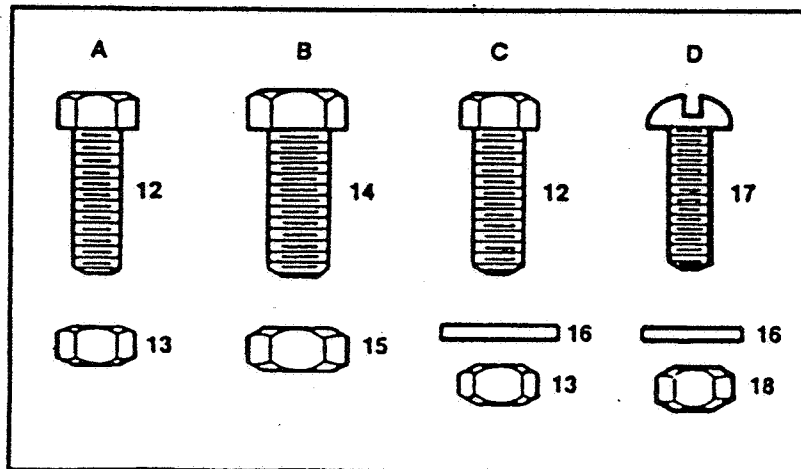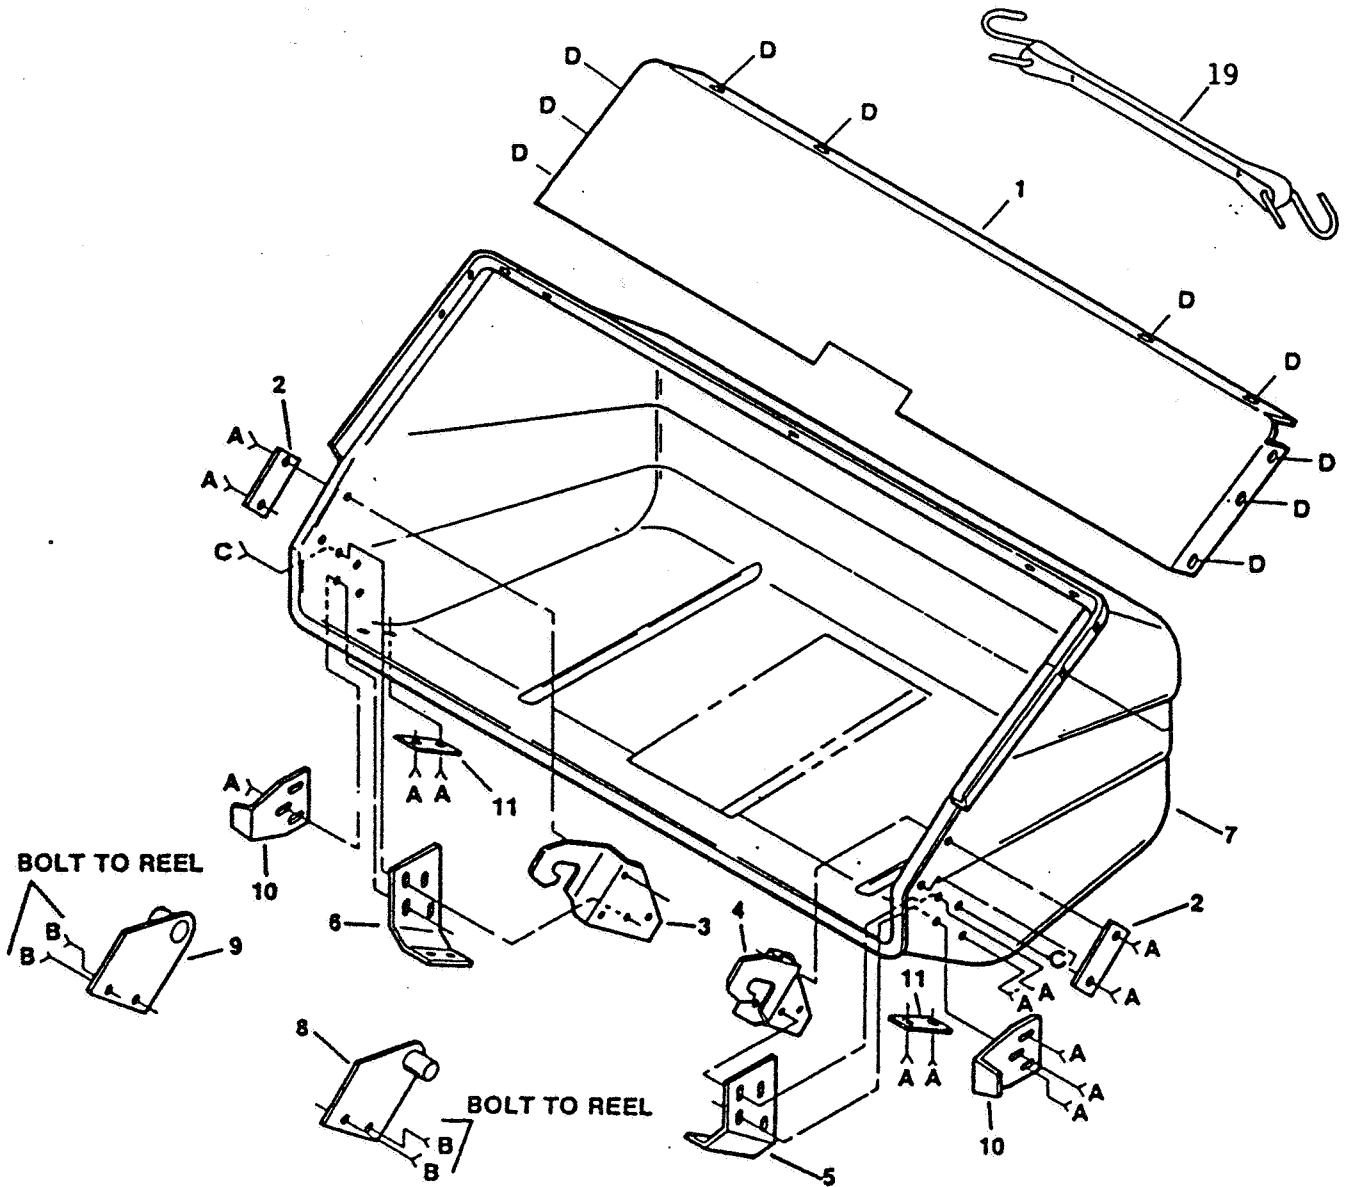


GRASS BOX FRONT

LIST OF PARTS
ERSATZTEILLISTE
LISTE DE PIECES

ITEM	RANSOMES PART NO	DESCRIPTION GB	BESCHREIBUNG D	DESCRIPTION F	QTY
1	BAM6172	Grassbox			2
2	MBC1629	Backing Plate			4
3	MBC1608A	Hook LH			2
4	MBC1607A	Hook RH			2
5	MBC1618	Corner Plate LH			2
6	MBC1617	Corner Plate RH			2
7	BAM6160	Grassbox			2
8	MBC1611	Bracket			2
9	MBC1612	Bracket			2
10	MBC8114A	Stop Plate			4
11	MBC1630	Backing Plate			4
12	GSF2093AD	Bolt			32
13	A139912	Nut			32
14	GSF2093CD	Bolt			8
15	A139322	Nut			8
16	MBC8940	Backing Plate			24
17	A119004	Screw			20
18	A139329	Nut			20
19	W128060-02	Strap			2

* Not Illustrated

 **RANSOMES
TRIPLE 18**

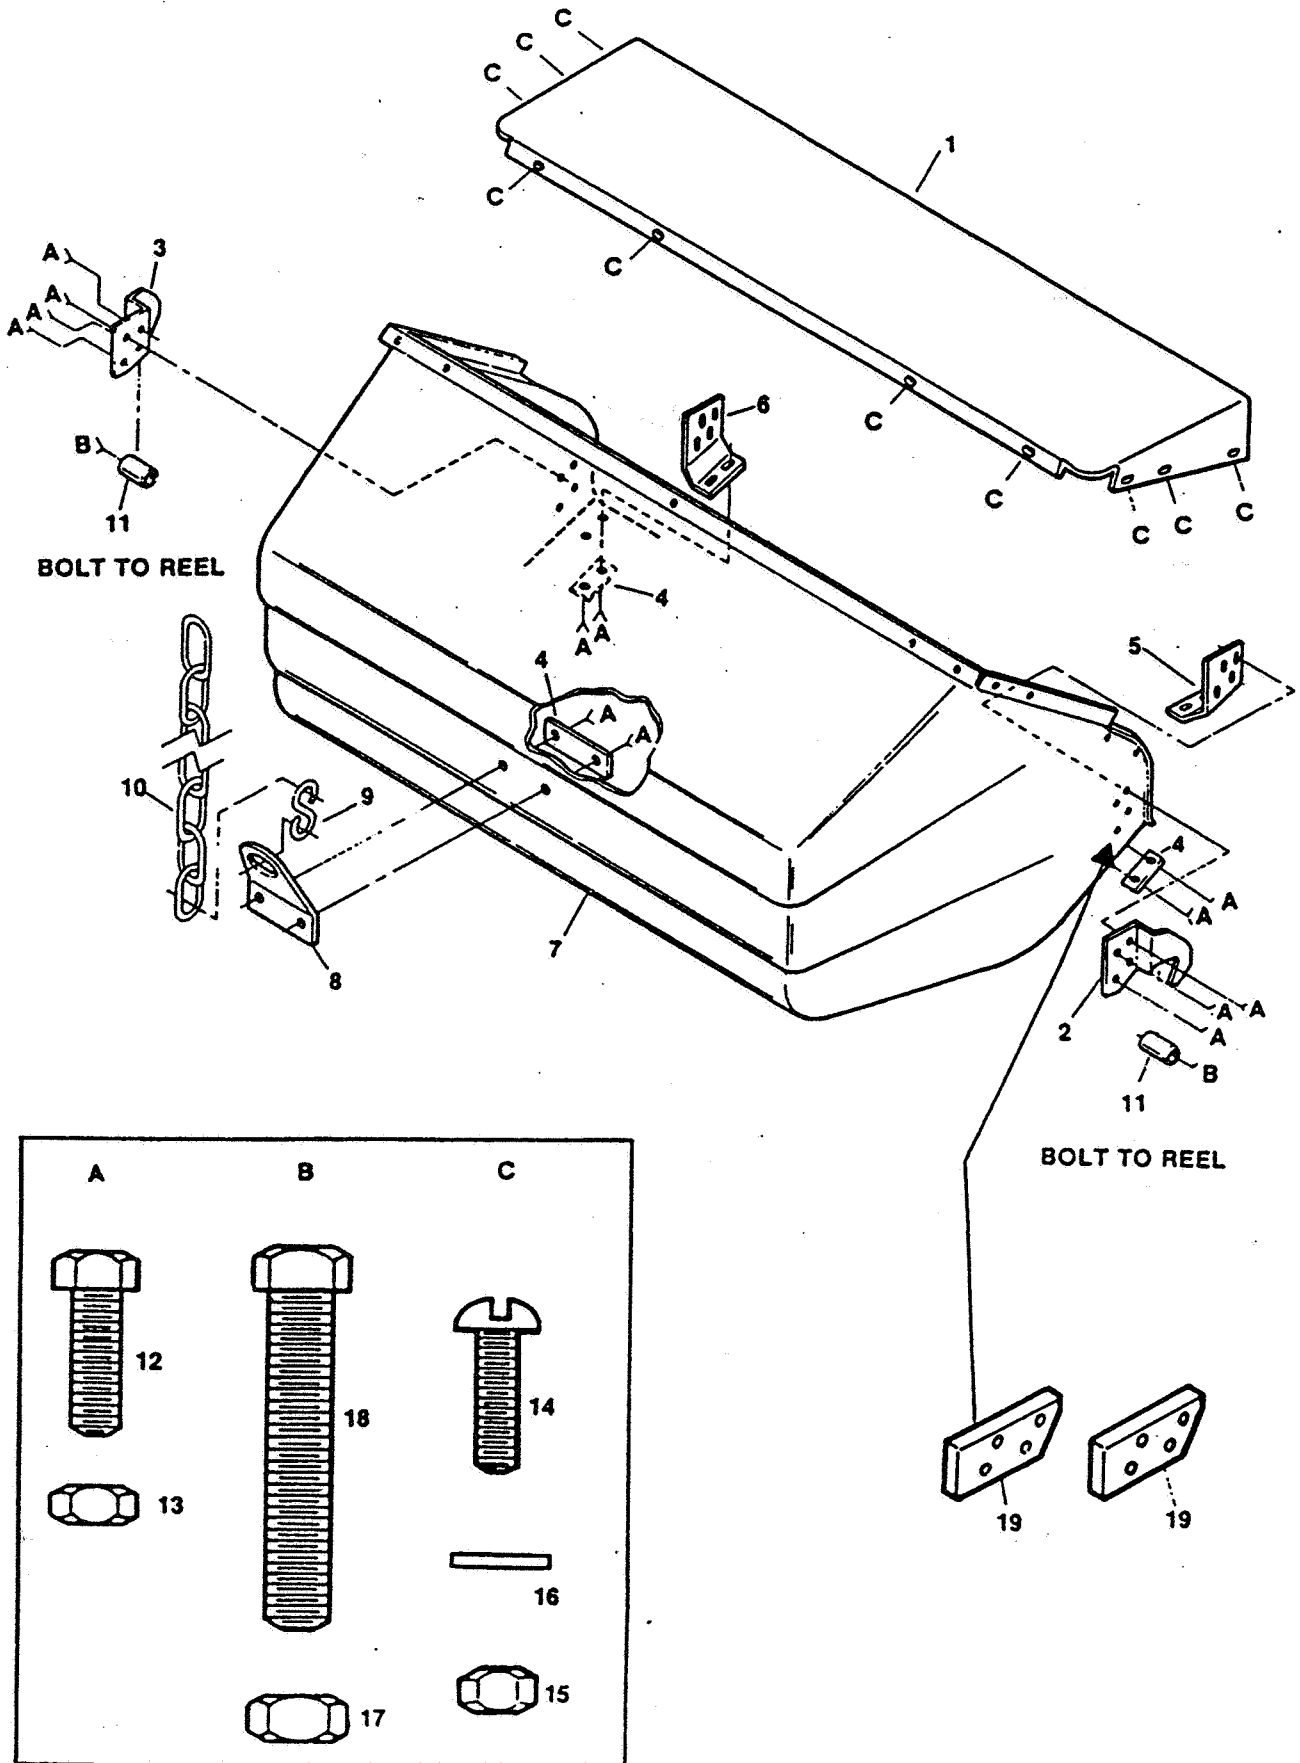

GRASS BOX REAR

LIST OF PARTS
ERSATZTEILLISTE
LISTE DE PIECES

ITEM	RANSOMES PART NO	DESCRIPTION GB	BESCHREIBUNG D	DESCRIPTION F	QTY
1	BAM2245	Stiffener			1
2	MBC8112	Hook RH			1
3	MBC8113	Hook			1
4	MBC1630	Backing Plate			3
5	MBC1617	Corner Plate RH			1
6	MBC1618	Corner Plate LH			1
7	BAM6160	Grassbox			1
8	MBC1619	Chain Anchor			1
9	H980234	Hook			1
10	H060048AM	Chain			1
11	MBC1616	Pin			2
12	GSF2093AD	Bolt			14
13	A139912	Nut			14
14	A119004	Screw			17
15	A139329	Nut			17
16	GSF2152A	Washer			17
17	A139322	Nut			2
18	GSF2091CK	Bolt			2
19	A913123	Packer			2

 
* Not Illustrated

**RANSOMES
TRIPLE 18**

WIRE HARNESS: P/N-138054

WIRE COLOR CODES

G-GREEN
BLK-BLACK
B-BLUE
W-WHITE
Y-YELLOW
R-RED

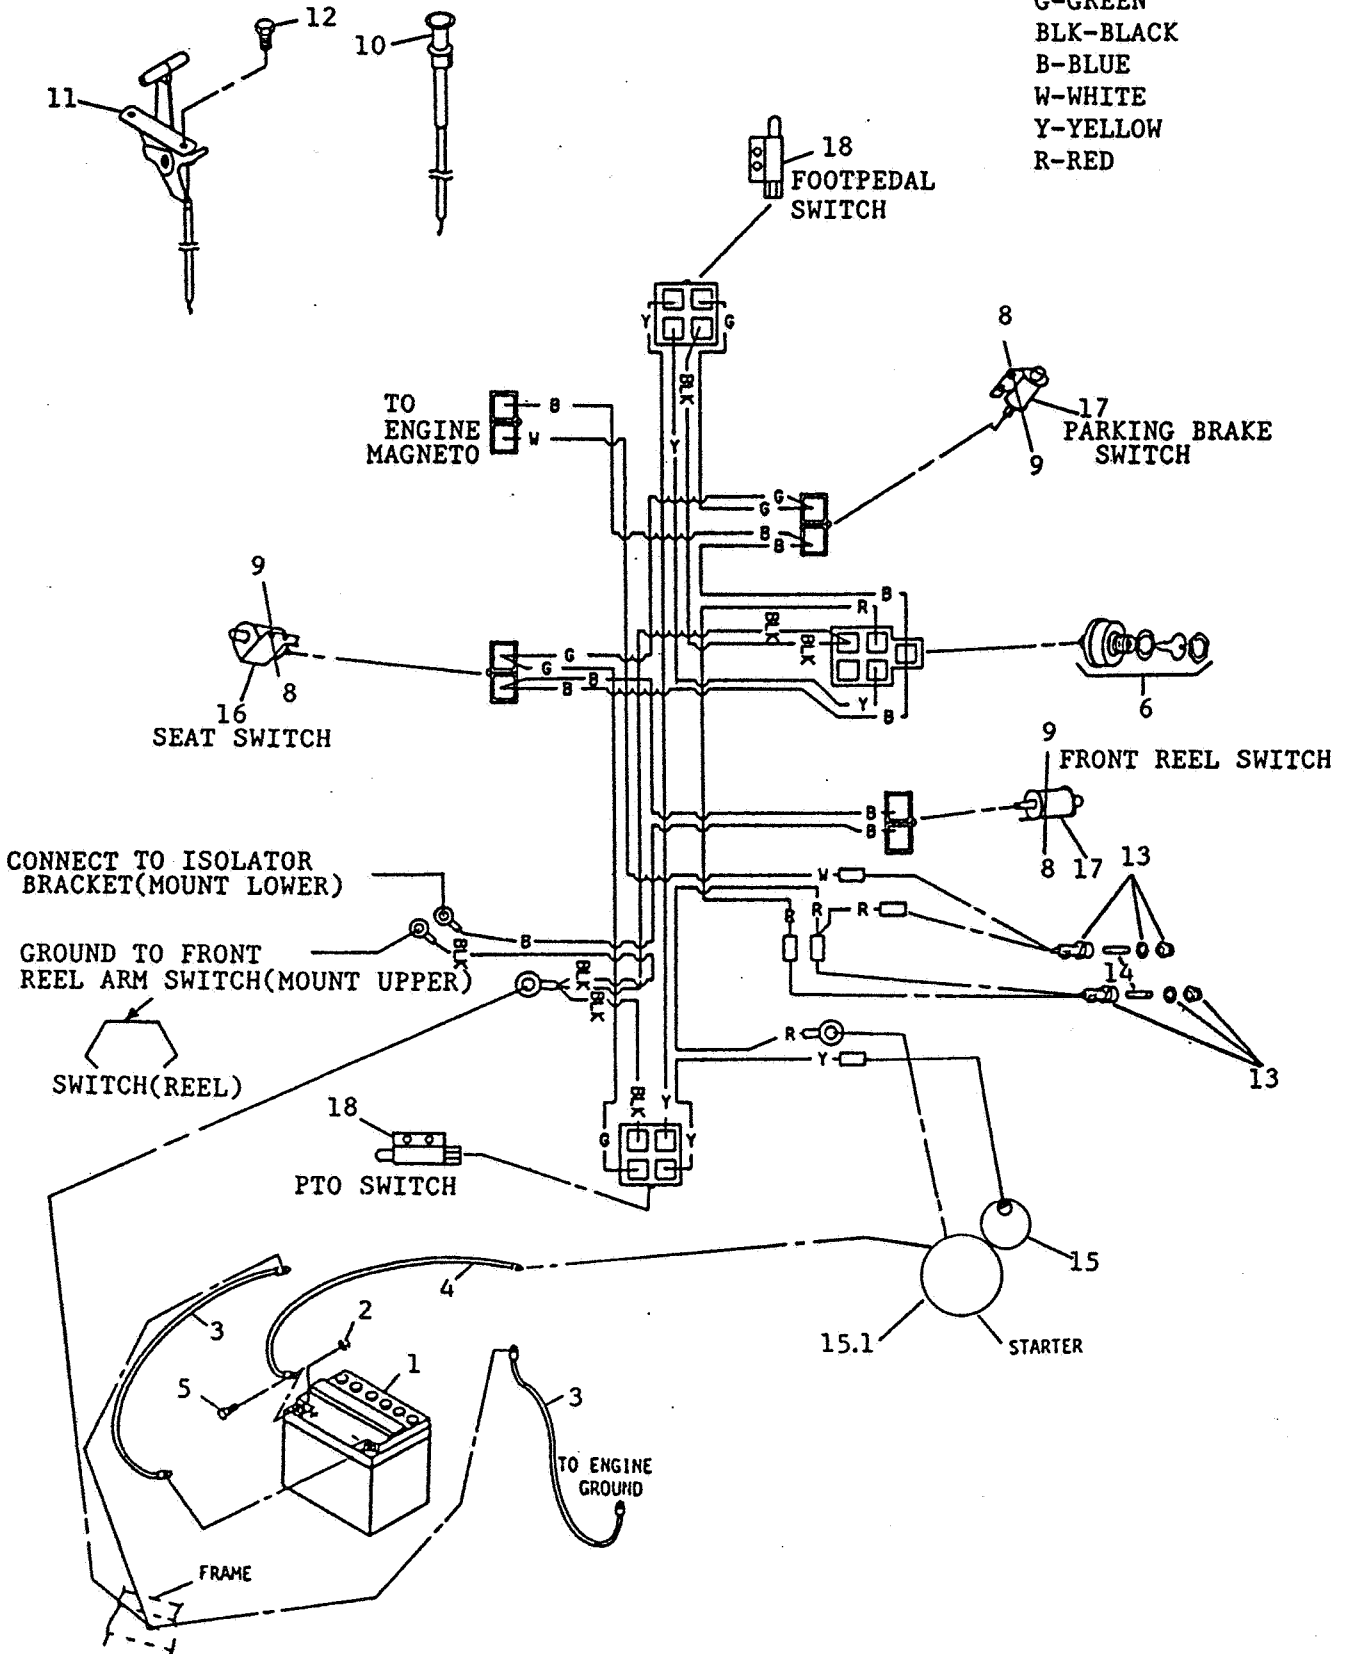


CONTROLS & ELECTRICAL

LIST OF PARTS
ERSATZTEILLISTE
LISTE DE PIECES

ITEM	RANSOMES PART NO	DESCRIPTION GB	BESCHREIBUNG D	DESCRIPTION F	QTY
1	A905494	Wiring Harness			1
*	A823012	Battery			1
2	BAP8035	Battery Cover			1
3	A130006	Nut			2
4	A905496	Battery Cable -			1
5	A905495	Battery Cable +			1
6	A110296	Bolt			2
8		Ignition Switch			1
9		Key			1
10	A139325	Nut			10
11	A119004	Screw			10
12	A811048	Choke			1
13	BAN8020PA	Throttle			1
14	BAM8060	Fuse Holder			2
15	A823302	Fuse			2
16	Ex Kubota	Solenoid			1
17	Ex Kubota	Starter Motor			1
18	W038383	Switch (seat)			1
19	BAQ8031	Switch (parking brake & cyl drive)			2
20	W108208	Switch (PTO & foot pedal)			2
21	A150006	Washer (for item 5)			2
22	A906052	Swivel (for item 10)			1
23	MBE4408	Choke Brkt			1
24	MBC5633	Strap (for brkt to item 10)			1
25	A139921	Star Ring (swivel to eng)			1
26	A112093	Screw (swivel to choke)			1
27	A110196	Screw (choke cable to brkt)			1
28	A133205	Nut			1
29	A150005	Washer			1
30	A110304	Screw (choke to eng)			2
31	A150008	Washer			2
32	A151008	S.L. Washer			2
33	A905497	Earth Strap			1

* Not Illustrated

 **RANSOMES
TRIPLE 18**

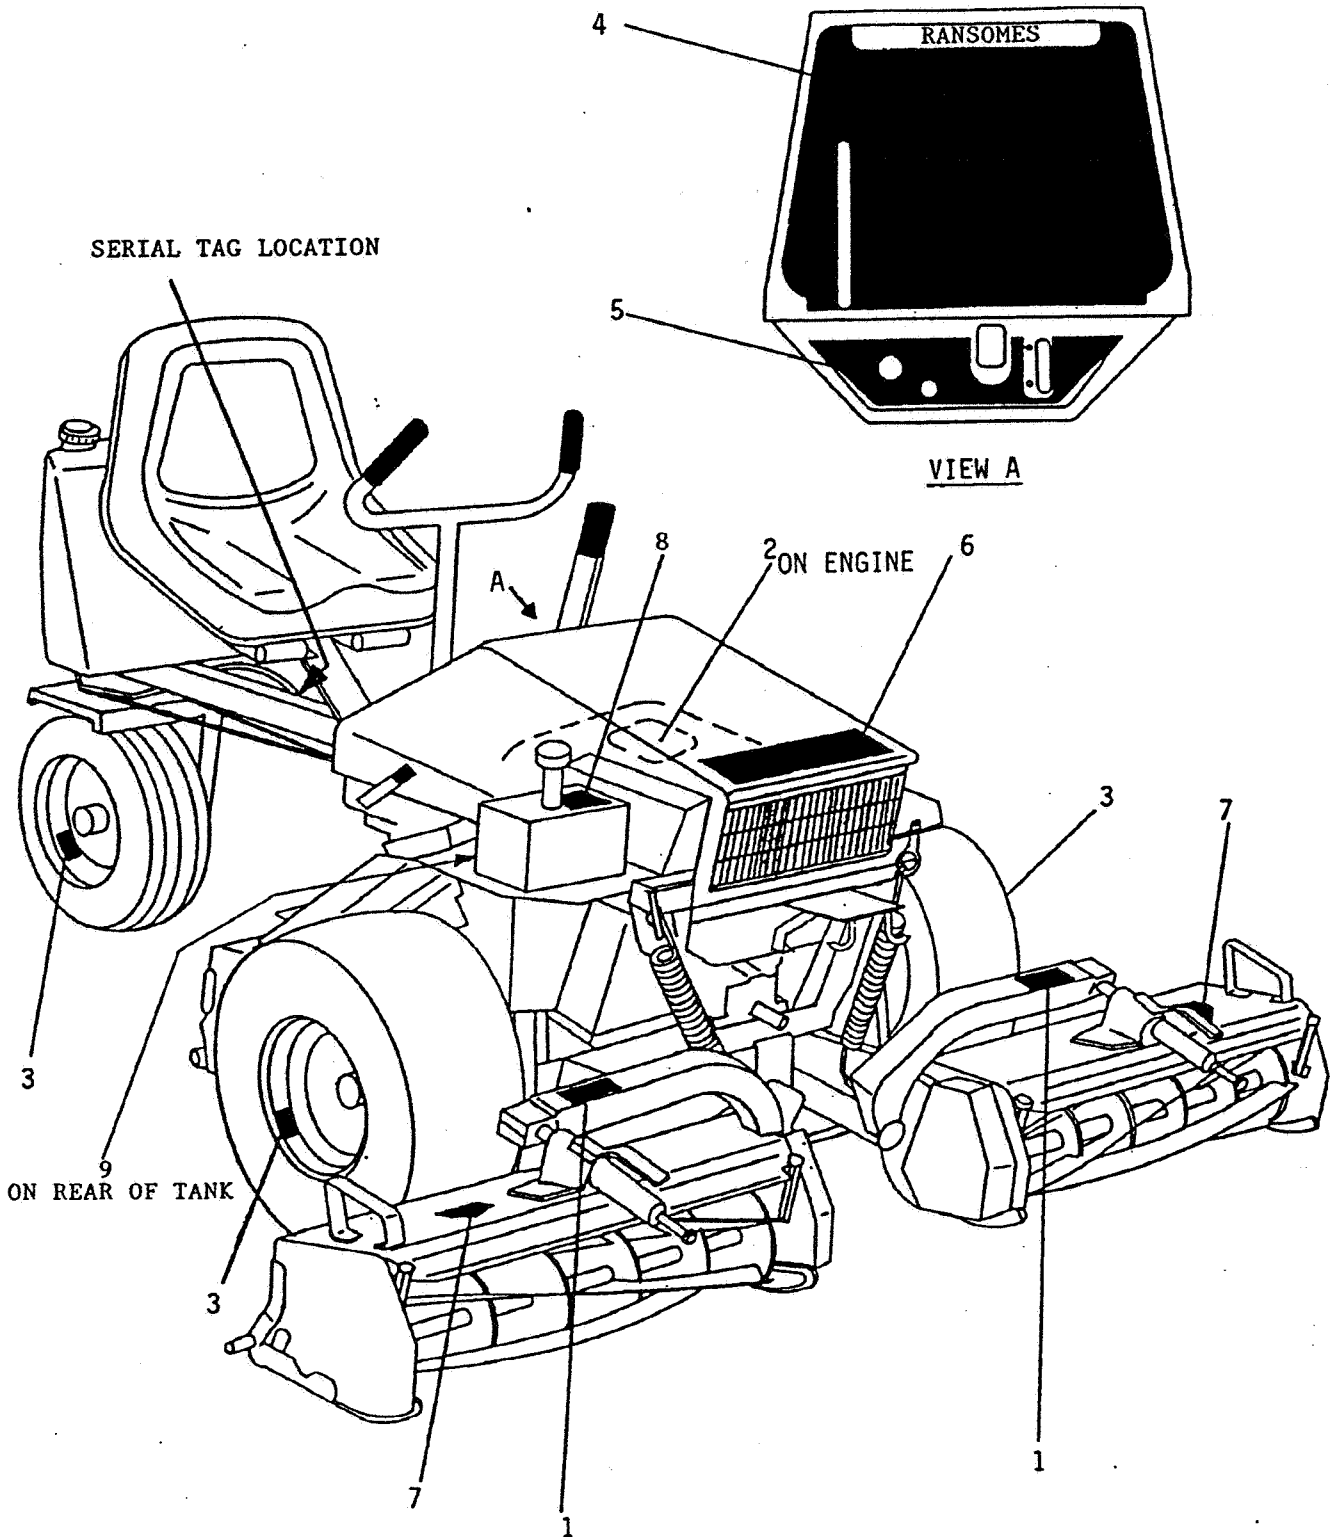


DECALS

LIST OF PARTS
ERSATZTEILLISTE
LISTE DE PIECES

ITEM	RANSOMES PART NO	DESCRIPTION GB	BESCHREIBUNG D	DESCRIPTION F	QTY
1	A903411	Decal - Warning Reel Spring			2
2	A903429	Decal - Please be			1
3	A903146	Decal - Tyre Pressure			3
4	A903829	Decal - Hood			1
5	A903830	Decal - Control Panel			1
6	A903806	RANSOMES (Bonnet)			1
7	A903400	Decal - Danger			2
8	A903312	Decal - Hydraulic Reservoir			1
9	A903155 A903574	Decal - Forward/Reverse Label - Triple 18			1 1

* Not Illustrated

 RANSOMES
TRIPLE 18

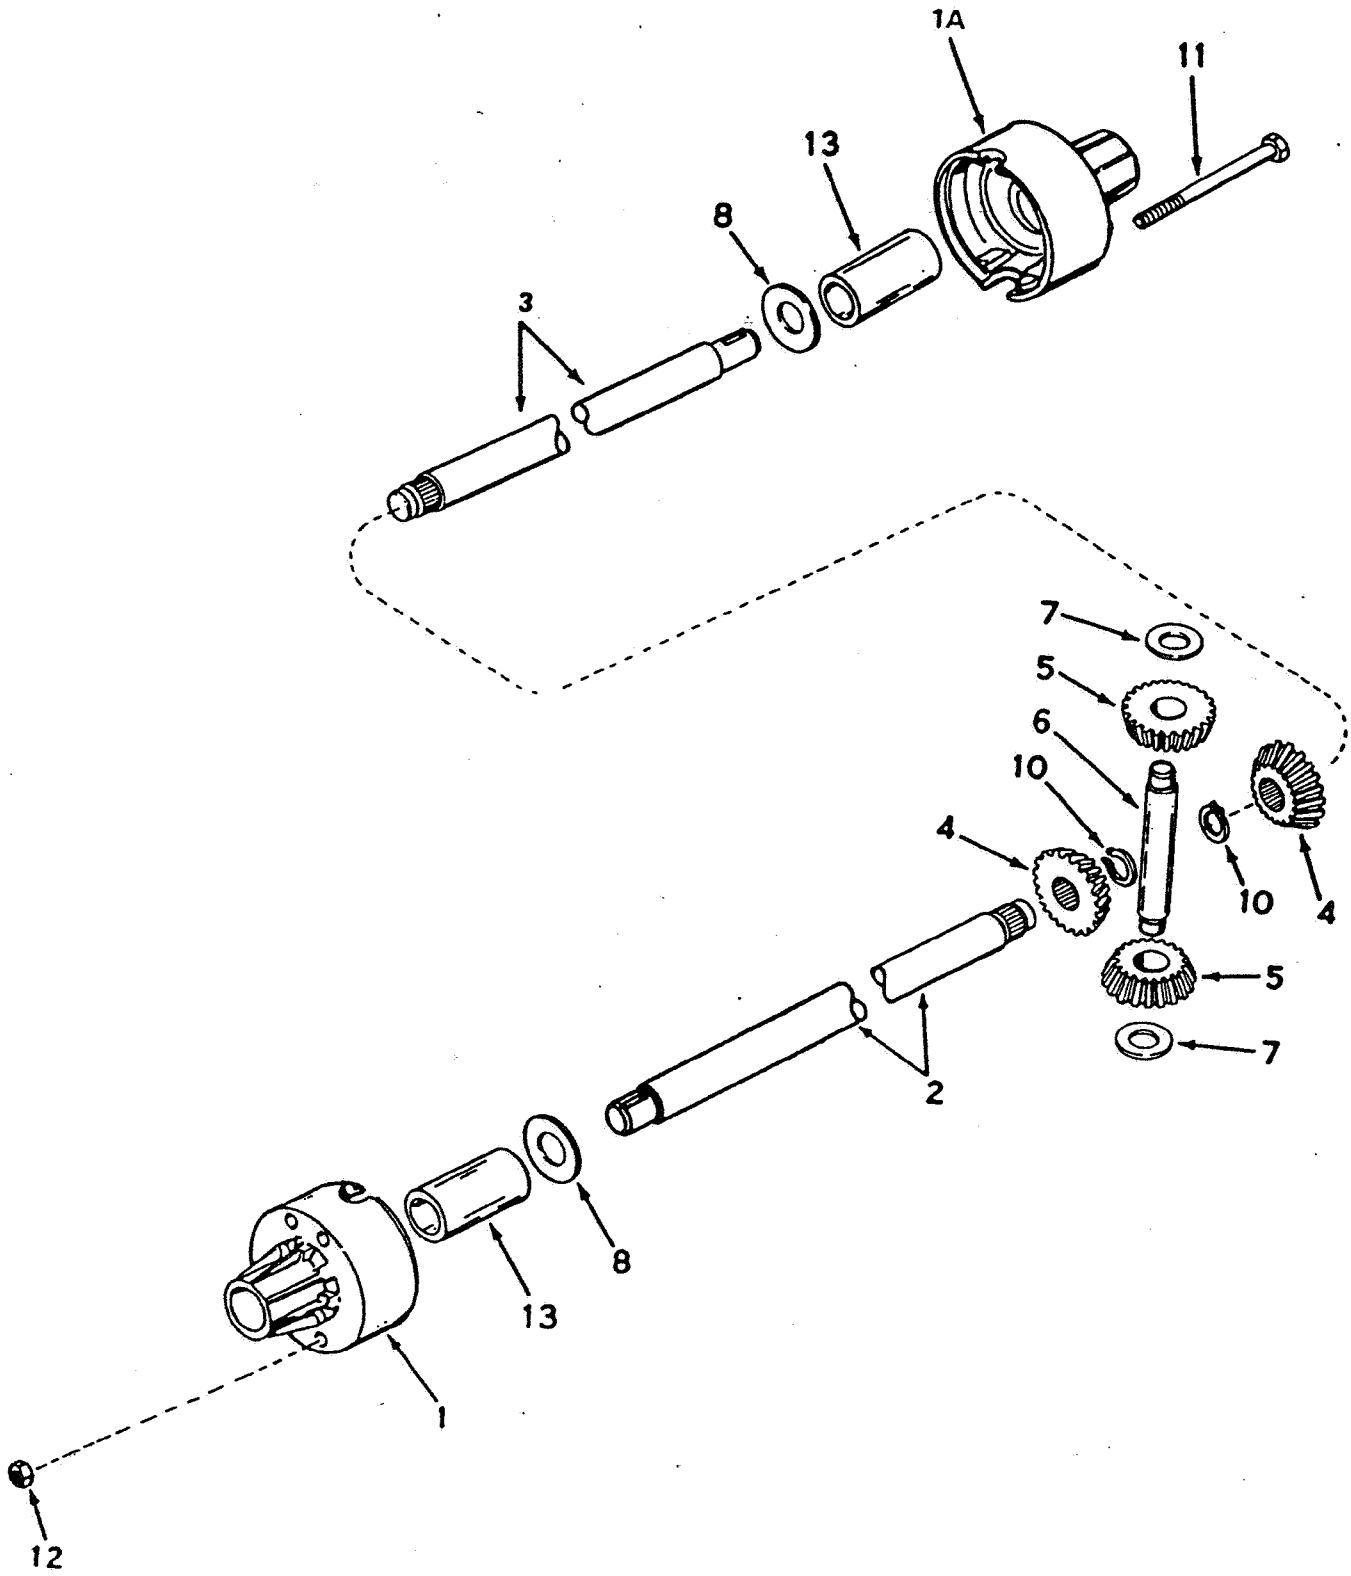


DIFFERENTIAL

LIST OF PARTS
ERSATZTEILLISTE
LISTE DE PIECES

ITEM	RANSOMES PART NO	DESCRIPTION GB	BESCHREIBUNG D	DESCRIPTION F	QTY
1	A815765	Differential			1
1A		Housing			1
2		Housing			1
3		Axle (10 5/8in long)			1
4		Axle (19 9/32in long)			1
5		Gear, bevel			2
6		Gear, pinion			2
7		Pin, drive			1
8		Washer, thrust			2
10		Washer			2
11		Snap ring			2
12		Screw 5/16 x 3 15/16			4
13		Nut 5.16			4
	Bushing			2	

* Not Illustrated

 RANSOMES
TRIPLE 18

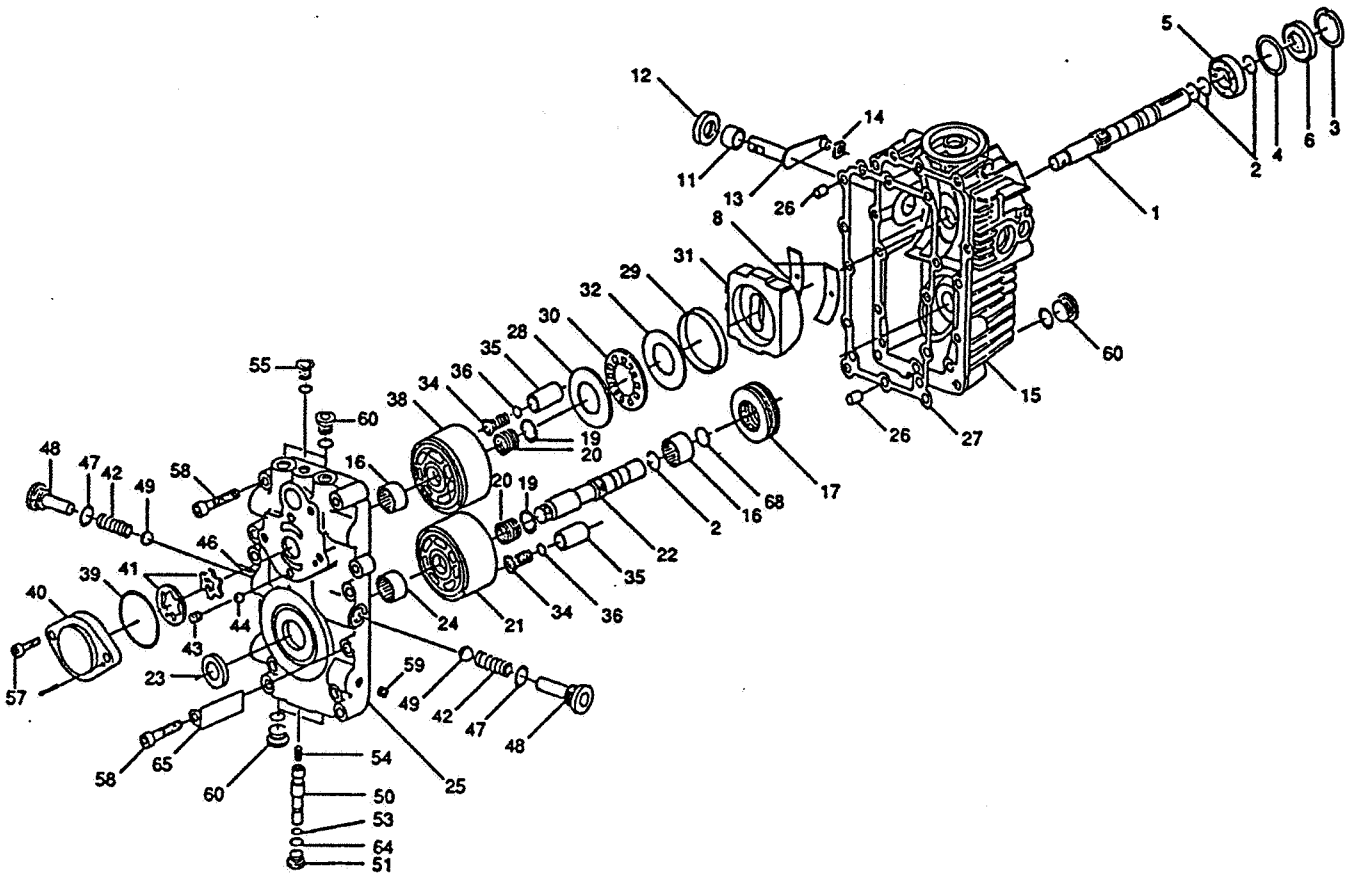

HYDROSTAT


LIST OF PARTS ERSATZTEILLISTE LISTE DE PIECES

SUNDSTRAND BDU-21

ITEM	RANSOMES PART NO	DESCRIPTION GB	BESCHREIBUNG D	DESCRIPTION F	QTY
1	W138052	Hydrostat			1
	A806577	Pump Shaft			1
2	A806578	Retaining Ring			4
3	A806579	Retaining Ring			1
4	A806580	Spacer			1
5	A806581	Bearing			1
6	A806582	Seal			1
8	A806583	Bearing			2
11	A806584	Bearing			1
12	A806585	Seal			1
13	A806586	Trunnion Arm			1
14	A806587	Guide			1
15	A806588	Housing			1
16	A806589	Bearing			2
17	A806590	Bearing			1
19	A806591	Washer			2
20	A806592	Spring			2
21	A806593	Cylinder Block			1
22	A806594	Shaft			1
23	A806595	Seal			1
24	A806596	Bearing			1
25	A806597	Centre Section			1
26	A809355	Pin			2
27	A806598	Gasket			1
28	A806599	Plate			1
29	A806626	Bearing			1
30	A806627	Bearing			1
31	A806628	Swashplate			1
32	A806629	Plate			1
34	A806630	Spring			14
35	A806631	Piston			14
36	A806632	Seat			14
38	A806633	Block			1
39	A806634	O ring			1
40	A806635	Housing			1
41	A806636	Gerotor Assembly			1
42	A806637	Spring			2
43	A806638	Spring			1
44	A806639	Ball			1
46	A809388	Pin			1
47	A806640	O Ring			3
48	A806641	Plug			2
49	A806639	Ball			2
50	A806642	Spool			1
51	A806643	Plug			1
53	A806644	O Ring			1
55	A809378	Plug			2
57	A806645	Screw			2
58	A806646	Screw			8

* Not Illustrated

 **RANSOMES
TRIPLE 18**

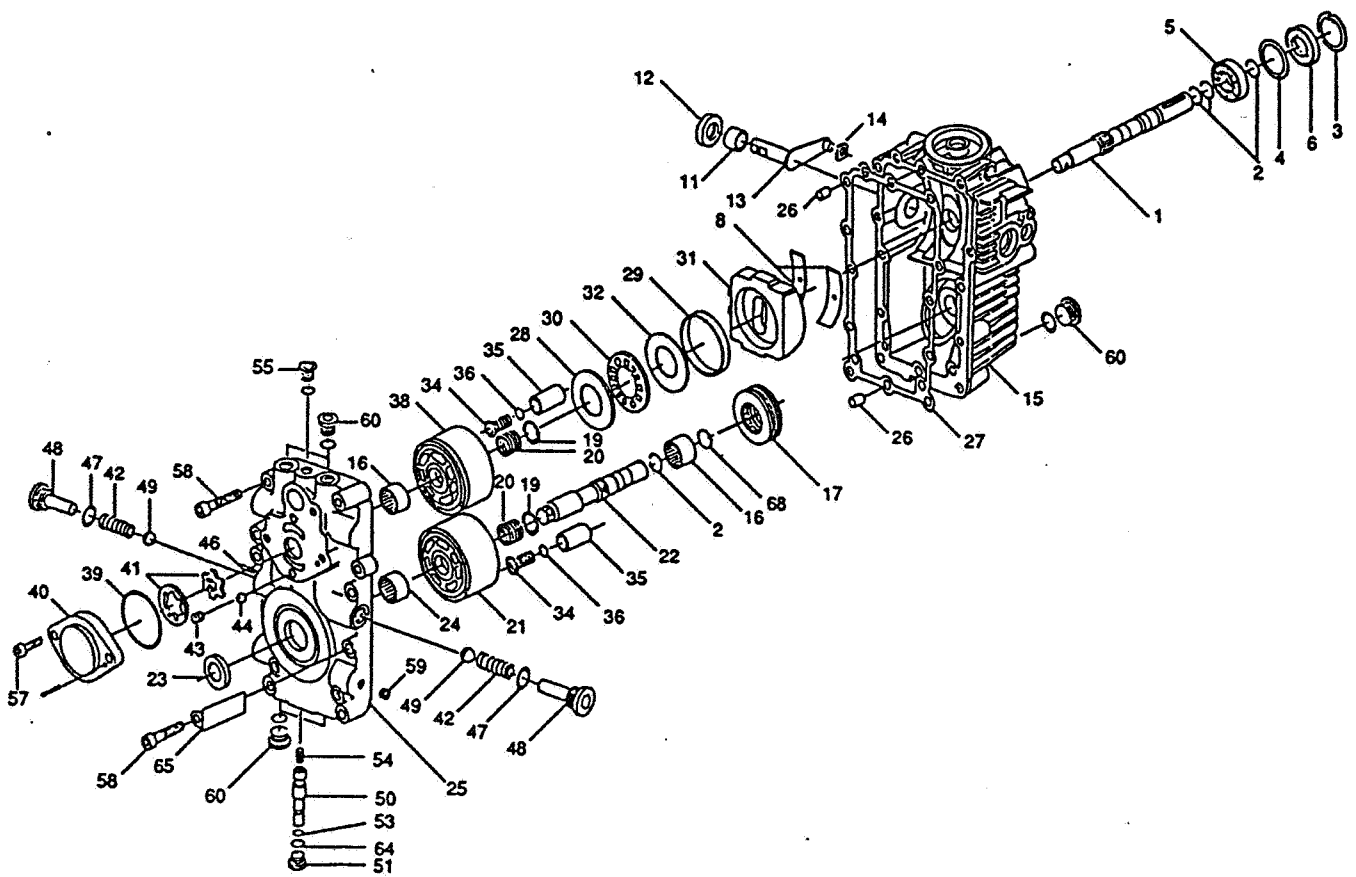

ITEM	RANSOMES PART NO	DESCRIPTION GB	BESCHREIBUNG D	DESCRIPTION F	QTY
59 64 65 68 70	A806647 A806648 A806649 A806650 A806651	Plug O Ring Nameplate Washer Plug			1 1 1 1 2

* Not Illustrated

