



PARTS & SERVICE MANUAL

SUPER STAR 2 WHEEL DRIVE Model 42-001-D Bunker Rake

SUPER STAR 3 WHEEL DRIVE Model 42-000-D Bunker Rake

Starting Serial #12663 (2WD)
Starting Serial #4765 (3WD)

February, 2003



WARNING: If incorrectly used this machine can cause severe injury. Those who use and maintain this machine should be trained in its proper use, warned of its dangers and should read the entire manual before attempting to set up, operate, adjust or service the machine.

CONTENTS

Introduction

| | |
|---------------------------|------------|
| Introduction | 1-3 |
| Introduction | 1 |
| Safe Practices | 2 |
| Specifications | 3 |
| Optional Equipment | 3 |

Service

| | |
|--------------------------------|-------------|
| Service | 4-11 |
| Maintenance | 4-6 |
| Service Chart | 7 |
| End User's Service Chart | 8 |
| Adjustments | 9-11 |
| Storage | 11 |

Diagrams

| | |
|-------------------------|--------------|
| Diagrams | 12-15 |
| Wiring Diagram | 12-13 |
| Hydraulic Diagram | 14-15 |

Parts

| | |
|-------------------------------------|--------------|
| Parts | 16-47 |
| Main Frame | 16-17 |
| 3 Wheel Drive Front Fork | 18-19 |
| 2 Wheel Drive Front Fork | 20-21 |
| Linkage | 22-25 |
| Gas Tank | 26-27 |
| Oil Tank | 28-29 |
| Pump and Engine | 30-33 |
| Engine | 34-35 |
| Rear Axle | 36-37 |
| Rake Lift | 38-39 |
| 13-729 2-Bank Hydraulic Valve | 40-41 |
| 34-109 Variable Pump | 42-43 |
| 42-039 Front Wheel Motor | 44-45 |
| 42-002 Rear Wheel Motor | 46-47 |

Accessories

| | |
|--|-------------------|
| Accessories | 48-125 |
| 42-302 Electric On-Off Valve | 48-51 |
| 13-731 Single Bank Valve | 52-53 |
| 43-003 Hydraulic Sand Plow | 54-57 |
| 42-011 Sand Plow(Steel & Aluminum) | 58-59 |
| 42-136 60" Aluminum Sand Plow | 60-61 |
| 42-315 Light Kit | 62-65 |
| 42-223 Adjustable Disc Edger..... | 66-67 |
| 42-750 Cart Path & Sidewalk Edger | 68-69 |
| 42-008 Sand Cultivator | 70-71 |
| 42-010 Construction Leveling Blade | 72-75 |
| 42-210 Grader Blade Kit | 76-77 |
| 42-178 Infield Scarifier(vertical blades) .. | 78-81 |
| 42-179 Infield Scarifier(chisel blades) | 82-83 |
| 42-285 Scarifier w/ Vertical Blades . | 84-87 |
| 42-700 Leaf & Debris Blower | 88-93 |
| 42-026 84"(213cm)Stainless Rake | 94-97 |
| 42-128 72"(183cm) Stainless Rake . | 98-101 |
| 13-438 Rake with Finishing Blades | 102-103 |
| 13-606 Rake with Lexan Blades .. | 104-105 |
| 13-684 Sand Rake Brush Kit | 106-107 |
| 13-298 Fan Rake | 108-109 |
| 13-319 Fan Rake Kit..... | 108-109 |
| 26-007 Professional Field Finisher | 110-111 |
| 42-185 Drag Mat Kit | 110-111 |
| 43-002 Flex Action Field Finisher w/ Brush | 112-115 |
| 26-008 Flex Action Field Finisher | 116-119 |
| 43-043 Finishing Brush Kit for 26-008 | 120-121 |
| 42-582 Green Star Spiker | 122-123 |
| 42-586 Green Star Main Frame ... | 124-125 |
| Reference | 127-128 |
| Decal List | 127 |
| Quick Reference | 1 |
| Warranty | Inside Back Cover |

Reference

Thank you for purchasing a **SMITHCO** product.

Read this manual and all other manuals pertaining to the Super Star carefully as they have safety, operating, assembly and maintenance instructions. Failure to do so could result in personal injury or equipment damage.

Keep manuals in a safe place after operator and maintenance personnel have read them. Right and left sides are from the operator's seat, facing forward.

All **SMITHCO** machines have a Serial Number and Model Number. Both numbers are needed when ordering parts. The serial number plate on the Super Star is located on the rear axle. Refer to engine manual for placement of engine serial number.

For easy access record your Serial and Model numbers here.

| | | |
|--|----------------------|----------------------|
| SMITHCO | | DATE OF MFG. |
| WAYNE, PENNSYLVANIA 19087 USA 610-688-4009 Fax 610-688-6069 | | <input type="text"/> |
| SERIAL NO. | kW/hp | |
| <input type="text"/> | <input type="text"/> | |
| MODEL NO. | kg/lb | |
| <input type="text"/> | <input type="text"/> | |



Information needed when ordering replacement parts:

1. Model Number of machine
2. Serial Number of machine
3. Name and Part Number of part
4. Quantity of parts

SAFE PRACTICES

1. It is your responsibility to read this manual and all publications associated with this machine (engine, accessories and attachments).
2. Never allow anyone to operate or service the machine or its attachments without proper training and instructions. Never allow minors to operate any equipment.
3. Learn the proper use of the machine, the location and purpose of all the controls and gauges before you operate the equipment. Working with unfamiliar equipment can lead to accidents.
4. Wear all the necessary protective clothing and personal safety devices to protect your head, eyes, ears, hands and feet. Operate the machine only in daylight or in good artificial light.
5. Inspect the area where the equipment will be used. Beware of overhead obstructions and underground obstacles. Stay alert for hidden hazards.
6. Never operate equipment that is not in perfect working order or without decals, guards, shields, or other protective devices in place.
7. Never disconnect or bypass any switch.
8. Carbon monoxide in the exhaust fumes can be fatal when inhaled, never operate a machine without proper ventilation.
9. Fuel is highly flammable, handle with care.
10. Keep engine clean. Allow the engine to cool before storing and always remove the ignition key.
11. After engine has started, machine must not move. If movement is evident, the neutral mechanism is not adjusted correctly. Shut engine off and readjust so the machine does not move when in neutral position.
13. Never use your hands to search for oil leaks. Hydraulic fluid under pressure can penetrate the skin and cause serious injury.
14. This machine demands your attention. To prevent loss of control or tipping of the vehicle:
 - A. Use extra caution in backing up the vehicle. Ensure area is clear.
 - B. Do not stop or start suddenly on any slope.
 - C. Reduce speed on slopes and in sharp turns. Use caution when changing directions on slopes.
 - D. Stay alert for holes in the terrain and other hidden hazards.
15. Before leaving operator's position for any reason:
 - A. Disengage all drives.
 - B. Lower all attachments to the ground.
 - C. Shut engine off and remove the ignition key.
16. Keep hands, feet and clothing away from moving parts. Wait for all movement to stop before you clean, adjust or service the machine.
17. Keep the area of operation clear of all bystanders.
18. Never carry passengers.
19. Stop engine before making repairs/adjustments or checking/adding oil to the crankcase.
20. Use parts and materials supplied by SMITHCO only. Do not modify any function or part.

These machines are intended for professional maintenance on golf courses, sports turf, and any other area maintained turf and related trails, paths and lots. No guaranty as to the suitability for any task is expressed or implied.



WEIGHTS AND DIMENSIONS

| | | |
|--------------------------|---|------------------------------|
| Length | 64" (163 cm) | |
| Width | 57" (145 cm) | |
| Height | 47" (119 cm) | |
| Wheel Base | 41" (104 cm) | |
| Weight | 950 lbs. (451 kg) | |
| SOUND LEVEL | | |
| At Ear Level | 85 dB | |
| At 3ft (.914 m) | 83 dB | |
| At 30 ft (9.14 m) | 73 dB | |
| ENGINE | | |
| | 2 WHEEL DRIVE | 3 WHEEL DRIVE |
| Make | Briggs and Stratton Vanguard | Briggs and Stratton Vanguard |
| Model# | 303447 | 350447 |
| Type / Spec# | 1131E1 | 1109E1 |
| Horsepower | 16 hp (11.9 kW) | 18 hp (13.4 kW) |
| Fuel | Unleaded 87 Octane Gasoline Minimum | |
| Cooling System | Air Cooled | |
| Lubrication System | Full Pressure | |
| Alternator | 16 amp | |
| WHEELS & TIRE | | |
| | Three: 22 X 11 - 10.0 Knobby Tires 5 psi (.35 bar) | |
| | Front tire fluid filled to 80 lbs. total 45.5 pints of windshield washer fluid or equivalent. | |
| Speed | | |
| Forward Speed | 0 to 11 m.p.h. (0-18 kph) | |
| Reverse Speed | 0 to 5 m.p.h. (0-8 kph) | |
| BATTERY | | |
| | Automotive Type 45-12 Volt | |
| BCI Group | Size 45 | |
| Cold Cranking Amps | 480 | |
| Ground Terminal Polarity | Negative (-) | |
| Maximum Length | 9" (23 cm) | |
| Maximum Width | 5.38" (14 cm) | |
| Maximum Height | 9" (23 cm) | |
| FLUID CAPACITY | | |
| Crankcase Oil | See Engine Manual | |
| Fuel | 20 quarts (18.93 liters) | |
| Hydraulic Fluid | 20 quarts (18.93 liters) | |
| Grade of Hydraulic Fluid | SAE 10W-40 API Service SJ or higher Motor Oil | |

OPTIONAL EQUIPMENT

| | | | |
|--------|--|--------|--|
| 42-200 | Super Star Baseball Field Groomer | 42-700 | Leaf and Debris Blower |
| 13-319 | Fan Rake Kit | 13-298 | Fan Rake Attachment |
| 42-011 | Front Mounted Manual Plow | 34-191 | Box Grader |
| 43-003 | Hydraulic Sand Plow | 42-582 | Spiker (needs 42-586 main frame) |
| 42-136 | Front Mounted 60" Manual Plow | 26-007 | Professional Infield Finisher |
| 43-002 | Flex Action Field Finisher with Brush | 26-008 | Flex Action Field Finisher |
| 42-178 | Infield Scarifier (w/ Straight Blades & Castor Wheels) | 42-185 | Drag Mat Kit |
| 42-179 | Infield Scarifier (w/ Chisel Blades & Castor Wheels) | 42-188 | Drag Mat Carrier (only) |
| 42-008 | Sand Cultivator | 42-223 | Edger Kit |
| 42-010 | Construction Leveling Blade | 42-315 | Light Kit |
| 13-438 | Rake Assembly with Finishing Blades | 42-750 | Razor Edger Kit |
| 13-684 | Brush Kit (for 13-438 and 13-606) | 42-569 | RBS Mount Kit for Super Star |
| 13-606 | Rake Assembly with Lexan Blades | 42-550 | Greens Star Roller, Brush, Spiker System with Main Frame |
| 42-128 | Stainless Steel Tournament Rake 72" | 42-210 | Grader Blade Kit |
| 42-026 | Stainless Steel Tournament Rake 84" | 42-285 | Scarifier w/ Vertical BLades |
| 43-043 | Brush Kit for 26-008 | | |

MAINTENANCE



Before servicing or making adjustments to machine, stop engine and remove key from ignition.

NOTE: Use all procedures and parts prescribed by the manufacturer's. Read the engine manual.

LUBRICATION

Use No. 2 General purpose Lithium Base Grease and lubricate every 100 hours. The Super Star has two grease fittings. One is located on the shift idler arm and one on the rod end of the attachment lift cylinder.

AIR CLEANER ON ENGINE

1. Unhook clips on both sides of cover and remove cover.
2. Carefully slide pre-cleaner of cartridge. To service pre-cleaner, wash in liquid detergent and water. Squeeze dry in clean cloth. Saturate in engine oil. Squeeze in clean absorbent cloth to remove excess oil. Replace if very dirty or damaged.
3. Remove knob and plate. Carefully remove cartridge to prevent debris from entering carburetor. To service cartridge, clean by tapping gently on flat surface. Do not oil cartridge. Replace if very dirty or damaged.

NOTE: Do not use petroleum solvents, e.g., kerosene, which will cause cartridge to deteriorate. Do not use pressurized air to clean cartridge. Pressurized air can damage cartridge.

4. Reinstall cartridge, plate and knob.
5. Reassemble pre-cleaner on cartridge.
6. Replace cover and reattach clips to body.

REMOTE AIR CLEANER

1. Unclip the two clips, remove the cover and pull out the element.
2. To service, clean by tapping gently on flat surface. Do not oil. Replace if very dirty or damaged.
3. Clean out the inside of the body and cover.
4. Place the element into the body and put the cover back on.

TOWING

When it is necessary to move the Super Star without engine running, bypass valve built into hydrostatic pump must be "open" by turning it counterclockwise. The valve is located on the right side of the pump. An "open" valve allows fluid to pass through the wheels freely. When normal, driven, operation is desired, valve should be "closed" by turning it clockwise. Failure to "close" the valve with engine running means no power to wheels. The machine can be moved for a short distance with the engine off, but we **do not** recommend this as a standard procedure. When towing **do not** tow the machine faster than 2-3 MPH (3-5 km/h) because the drive system may be damaged. The tires may lock up if the machine is towed too fast. If this occurs, stop towing the machine. If the machine must be moved a considerable distance, transport it on a truck or trailer.




TIRE PRESSURE

Caution must be used when inflating a low tire to recommended pressure. Over inflating can cause tires to explode. Tires should be 5 psi (0.35 bar). Improper inflation will reduce tire life considerably.

ENGINE

Change and add oil according to chart below. Do not overfill. Use a high quality detergent oil classified "For Service SJ or higher" SAE 30 oil. Use no special additives with recommended oils. Do not mix oil with gasoline.

SAE VISCOSITY GRADES

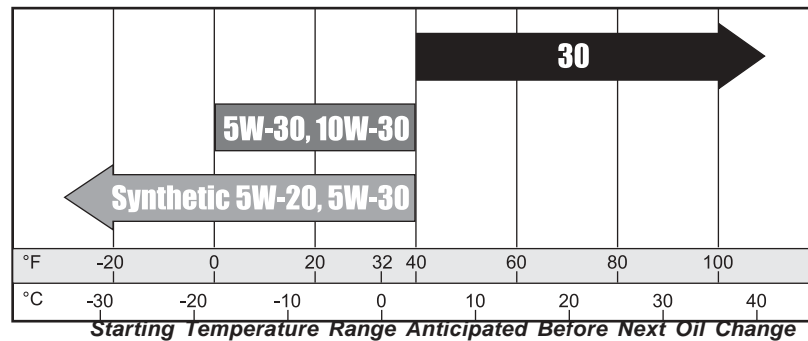

Air cooled engine run hotter than automotive engines. Use of multi-viscosity oils (10W-30, etc.) above 40° F (4° C) will result in high oil consumption and possible engine damage. Check oil level more frequently if using these types of oils.

SAE 30 oil, if used below 40° F (4° C), will result in hard starting and possible engine bore damage due to inadequate lubrication.

HYDRAULIC OIL

1. Use SAE 10W-40 API Service SJ or higher motor oil.
2. For proper warranty, change oil every 500 hours or annually, which ever is first and change filter after the first 20 hours, then at 100 hours, then every 250 hours thereafter.
3. The oil level should be 2" to 2 1/2" from top of tank when fluid is cold. Do not overfill.
4. After changing oil and/or filter, run the machine for a few minutes. Check oil level and for leaks.
5. Always use caution when filling hydraulic oil tank or checking level to keep system free of contaminants. Check and service more frequently when operating in extremely cold, hot or dusty conditions.
6. If natural color of fluid is black or smells burnt, it is possible that an overheating problem exists.
7. If fluid becomes milky, water contamination may be a problem.
8. If either of the above conditions happen, change oil and filter immediately after fluid is cool and find cause. Take fluid level readings when system is cold.
9. In extreme temperatures you can use straight weight oil. We recommend SAE 30W API Service SJ or higher when hot (above 90°F (33°C)) and SAE 10W API Service SJ or higher when cold (below 32°F (0°C) ambient temperature. Use either motor oil or hydraulic oil, but do not mix.
10. Oil being added to the system must be the same as what is already in the tank. Mark tank fill area as to which type you put in.

MAINTENANCE

WHEEL MOUNTING PROCEDURE

1. Turn machine off and remove key.
2. Block one of the other wheels.
3. Loosen nuts slightly on wheel to be removed.
4. Jack up machine being careful not to damage underside of machine.
5. Remove nuts. Remove wheel.
5. Place new wheel on hub lining up bolt holes.
6. Torque nuts to 64-74 ft/lb (87-100 Nm) using a cross pattern. Re-torque after first 10 hours and every 200 hours thereafter.
7. Lower machine to ground and remove blocks and jack.

BATTERY

Batteries normally produce explosive gases which can cause personal injury. Do not allow flames, sparks or any ignited object to come near the battery. When charging or working near battery, always shield your eyes and always provide proper ventilation.

Battery cable should be disconnected before using "Fast Charge".

Charge battery at 15 amps for 10 minutes or 7 amps for 30 minutes. Do not exceed the recommended charging rate. If electrolyte starts boiling over, decrease charging.

Always remove grounded (-) battery clamp first and replace it last. Avoid hazards by:

1. Filling batteries in well-ventilated areas.
2. Wear eye protection and rubber gloves.
3. Avoid breathing fumes when electrolyte is added.
4. Avoid spilling or dripping electrolyte.



WARNING

Battery Electrolyte is an acidic solution and should be handled with care. If electrolyte is splashed on any part of your body, flush all contact areas immediately with liberal amounts of water. Get medical attention immediately.

JUMP STARTING




WARNING

Use of booster battery and jumper cables. Particular care should be used when connecting a booster battery. Use proper polarity in order to prevent sparks.

To jump start (negative grounded battery):

1. Shield eyes.
2. Connect ends of one cable to positive (+) terminals of each battery, first (A) then (B).
3. Connect one end of other cable to negative (-) terminal of "good" battery (C).
4. Connect other end of cable (D) to engine block on unit being started (NOT to negative (-) terminal of battery)

To prevent damage to other electrical components on unit being started, make certain that engine is at idle speed before disconnecting jumper cables.

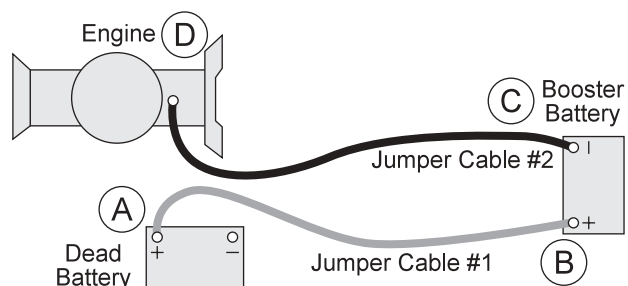



Before servicing or making adjustments to the machine, stop engine, set park break, block wheels and remove key from ignition.



Follow all procedures and ONLY use parts prescribed by the manufacturer. Read the engine manual before maintenance.

| | Daily | As Required | 100 Hours | 200 Hours | 250 Hours | 300 Hours | 400 Hours | Every 500 Hours/Yearly |
|--|-------|-------------|-----------|-----------|-----------|-----------|-----------|------------------------|
| ⌘ Engine Oil | C | R | R | R | R | R | R | R |
| ⌘ Engine Oil Filter | | | R | R | | R | R | R |
| Engine for Leaks and Loose Parts | C | | C | C | | C | C | C |
| ‡ Air Cleaner (Paper Element) | | R | C | C | | C | C | R |
| ‡ Pre-Cleaner (Every 25 hours) | | R | C | C | | C | C | R |
| Spark Plugs | | | | | | | C | R |
| Valve Clearance | | | | | | | | C |
| Idle Speed | | C | | | | | | C |
| Air Cooling System | C | | C | C | | C | C | C |
| Hoses | C | | | | C | | | C |
| * Tire Pressure | C | | C | C | | C | C | C |
| Visual Inspection of Tires | C | | C | C | | C | C | C |
| Fuel Level | C | C | | | | | | |
| Fuel Filter | | R | | | | | | R |
| Hydraulic Oil | C | | C | C | | C | C | R |
| † Hydraulic Oil Filter | | | | | R | | | R |
| Hydraulic System for Leaks and Loose Parts | C | | C | C | | C | C | C |
| Battery Electrolyte Level | | | C | C | | C | C | C |
| Clean Battery Terminals | | | | | C | | | C |
| § Torque Lug Nuts | | | | C | | | C | C |
| Belt Tension and Visual Inspection | | | C | C | | C | C | C |
| Lubricate | | | C | C | | C | C | C |

C=Check or Clean at specified intervals

R=Replace at specified intervals

* Tire pressure: 5 psi (0.35 bar)

† Replace hydraulic filters after the first 20, 100, and every 250 there after.

§ Torque tire nuts after the first 10 hours and every 200 hours there after (64 to 74 ft/lb (87-100 Nm))

⌘ Change Oil and Filter after first 8 hours.

⌘ Change oil every 25 hours when operating under heavy load or in high ambient temperatures.

‡ Clean more often under dusty conditions or when airborne debris is present, replace air cleaner parts, if very dirty.

The suggested maintenance checklist is not offered as a replacement for the manufacturer's engine manual but as a supplement. You must adhere to the guidelines established by the manufacturer for warranty coverage. In adverse conditions such as dirt, mud or extreme temperatures, maintenance should be more frequent.



END USER'S SERVICE CHART

Service

| | Daily | As Required | 25 Hours | 50 Hours | 100 Hours | 200 Hours | 250 Hours | Every 500 Hours/Yearly |
|--|-------|-------------|----------|----------|-----------|-----------|-----------|------------------------|
| ⌘ Engine Oil (Change every 50 hours) | | | | | | | | |
| ⌘ Engine Oil Filter | | | | | | | | |
| Engine for Leaks and Loose Parts | | | | | | | | |
| ‡ Air Cleaner (Paper Element) | | | | | | | | |
| ‡ Pre-Cleaner (Every 25 hours) | | | | | | | | |
| Spark Plugs | | | | | | | | |
| Valve Clearance | | | | | | | | |
| Idle Speed | | | | | | | | |
| Belt Tension and Visual Inspection | | | | | | | | |
| Air Cooling System | | | | | | | | |
| Hoses | | | | | | | | |
| *Tire Pressure | | | | | | | | |
| Visual Inspection of Tires | | | | | | | | |
| Fuel Level | | | | | | | | |
| Fuel Filter | | | | | | | | |
| †Hydraulic Oil | | | | | | | | |
| Hydraulic System for Leaks and Loose Parts | | | | | | | | |
| Battery Electrolyte Level | | | | | | | | |
| Clean Battery Terminals | | | | | | | | |
| §Torque Lug Nuts | | | | | | | | |
| Lubricate | | | | | | | | |

C=Check or Clean at specified intervals

R=Replace at specified intervals

* Tire pressure: 5 psi (0.35 bar)

† Replace hydraulic filters after the first 20, 100, and every 250 there after.

§ Torque tire nuts after the first 10 hours and every 200 hours there after (64 to 74 ft/lb (87-100 Nm))

⌘ Change Oil and Filter after first 8 hours.

£ Change oil every 25 hours when operating under heavy load or in high ambient temperatures.

‡ Clean more often under dusty conditions or when airborne debris is present , replace air cleaner parts, if very dirty.




RAKE LIFT CYLINDER

Completely lower Rake Lift. Remove cotter pin (A) and clevis pin (B). Place attachment lift arms (C) at $\frac{1}{16}$ " above cross member (D) on Rake Lift. Loosen jam nut (E). Twist cylinder extension (F) so clevis pin end of cylinder extension lines up with holes in attachment lift arm. Replace clevis and cotter pins. Tighten jam nut. Raise and lower Rake Lift to check for proper clearance.




When the rear rake attachment is lowered while the machine is in forward motion, the forward speed of the machine will slow drastically. Operator should be prepared for a rapid change in speed.

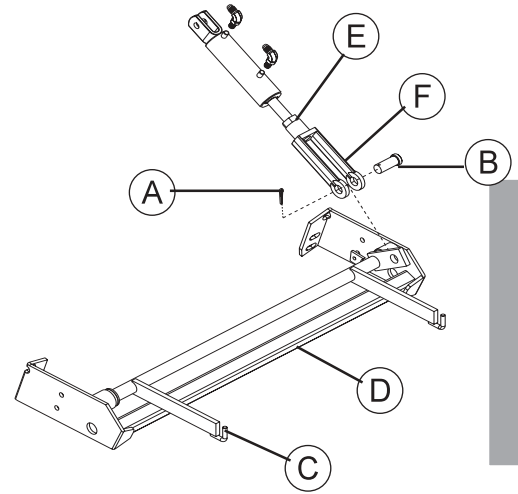

STEERING CHAIN ADJUSTMENT


You will have to remove the nose cone assembly to get at steering sprockets. Steering Sprockets (A) should be level with each other. Check with straight edge. Make any adjustments. Adjust the chain tensioner bolt (B) so that the chain is snug. Tighten all nuts and bolts in place.

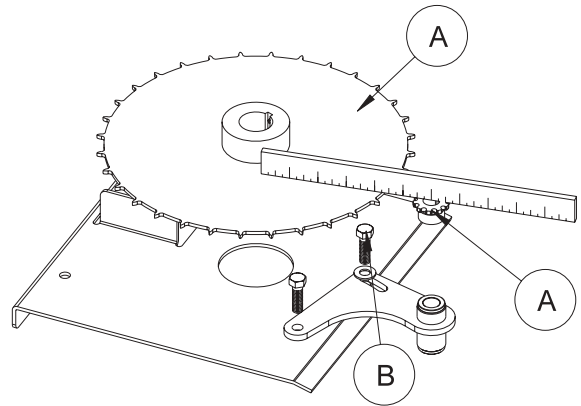

SPEED BOSS

Speed Boss allows the machine to operate at a proper speed while raking sand traps on golf courses. This speed boss has been factory set at an average speed of 3-4 m.p.h. (5-6.5 kph). The Speed Boss will only limit the speed while the rake is lowered into the operating position. The speed setting may be adjusted by turning the Ball Joint (A) counterclockwise to make the machine operate slower or turn clockwise to go faster. Tighten jam nut. Check to make sure nothing is binding and test drive to check desired speed.

For RBS System, Spiker and Grader Box remove the speed boss arm and the speed boss rod from machine so it does not interfere with other operations.

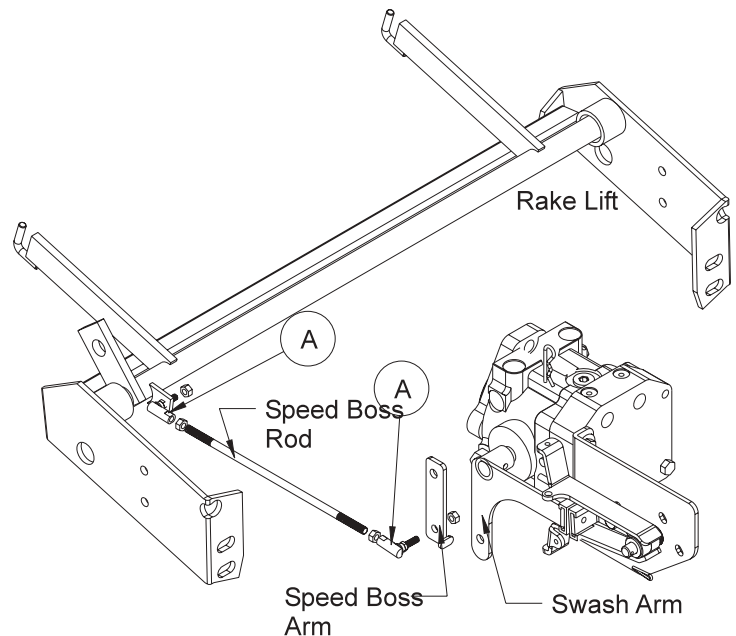


ADJUSTMENTS (CONTINUED)

WHEEL 'CREEP' ADJUSTMENT

'Creep' is when engine is running and hydrostatic transmission is in neutral, but due to inadequate alignment, wheels still move. Do the following procedures to stop this motion.


1. Lift up and support machine so all wheels are off the ground and can turn freely.
2. On the side of the pump there is a creep arm inside a centering arm. Loosen bolt (A).
3. With engine running adjust the creep arm up or down in slot so centering arm centers on the swash arm.
4. Tighten all fasteners and test by using foot pedal linkage to see that the "creep" is removed.
5. Turn engine off and lower machine.

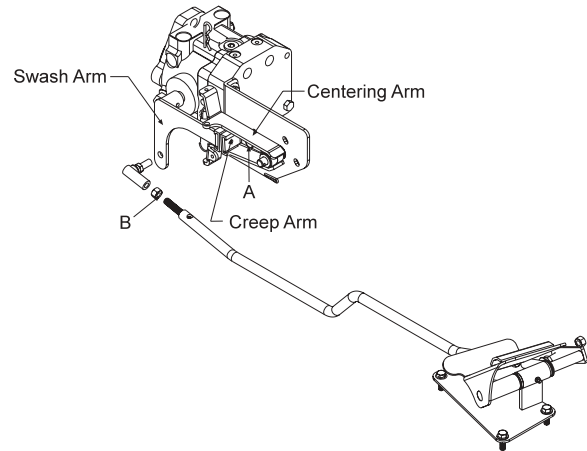

PARK BRAKE


The park brake is located on the right hand side of the machine and operates a brake on the right rear wheel. Push lever forward to engage and pull back to disengage.

To adjust turn the knob on the end of the handle. For further adjustment you may turn the yokes (A) clockwise to tighten and counter clockwise to loosen.

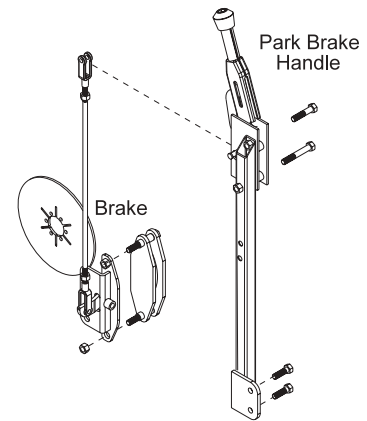

ADJUSTMENT OF BELT TENSIONER


The belt tensioner controls the tension on the belt from the engine to the pump. The proper tension of the idler should be in the second notch on the side of the tensioner. Over tightening the belt will shorten the life of the belt and the machine may not perform to the best of its ability. To adjust belt tensioner, loosen the bolt holding the tensioner (A). Bring idler pulley tight to the belt and turn tensioner into belt to the second notch. Tighten bolt on tensioner.

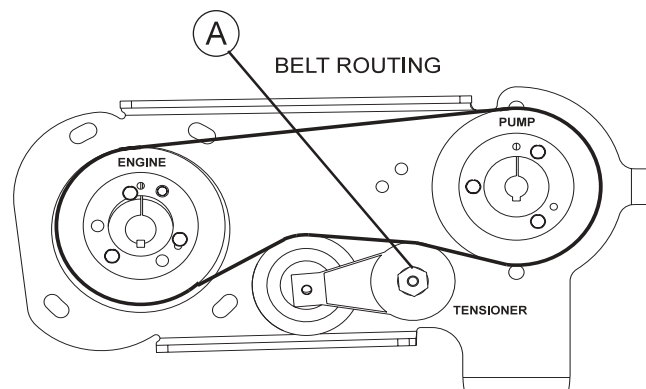

ADJUSTMENTS (CONTINUED)

TO ADJUST FOOT PEDAL THROTTLE CABLE

1. Jack up unit so that all drive wheel are off the ground. (Use jack stands)
2. Start the engine, make certain that the hand throttle is in the idle position (1200 engine RPM).
3. Engine speed must increase as soon as the foot pedal begins to move in either direction. At the full forward position, the engine RPM must be 3600 RPM \pm 100.
4. Minor adjustment can be made by backing out (un-screwing) (Ref A) until you reach full engine RPM with the foot pedal fully depressed in the forward position. Be sure to recheck after the nuts are fully tightened.
5. Major adjustment needs to be made at (Ref B) by pulling the slack out of the cable. Loosen the screw in the wire block that is clamped onto the end of the cable and sliding it up to the cable block that is through the throttle plate. Do not let the throttle plate move to increase idle speed. Tighten the screw.
6. Test run to determine that there is no binding and that engine idle speed is 1200 RPM and that it is 3600 RPM at full forward position of the foot pedal.

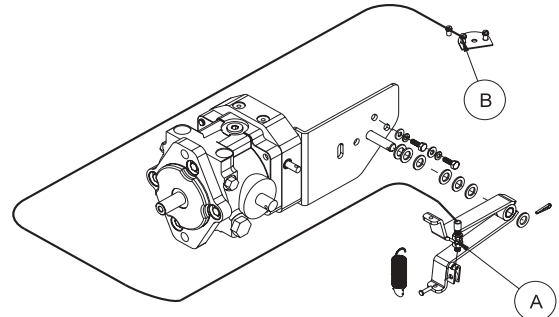

Service

STORAGE

When storing, remove the key from the key switch to avoid unauthorized persons from operating machine.


1. Before storing clean machine thoroughly.
2. Check bolts and nuts, tighten as necessary.
3. Make all repairs that are needed and remove any debris.
4. Remove the battery, adjust the electrolyte level and recharge it. Store the battery in a dry, dark place.
5. Store in a clean and dry area, but NOT near a stove, furnace or water heater which uses a pilot light or any device that can create a spark.
6. Engines stored over 30 days need to be protected or drained of fuel to prevent gum from forming in a fuel system or on essential carburetor parts. Check the engine manual and follow the instructions for the storage of the engine.

WIRING DRAWING

Color Code Chart

| | |
|-----|--------|
| Bl | Blue |
| Br | Brown |
| Y | Yellow |
| Grn | Green |
| O | Orange |
| R | Red |
| B | Black |
| P | Purple |
| W | White |



Diagrams

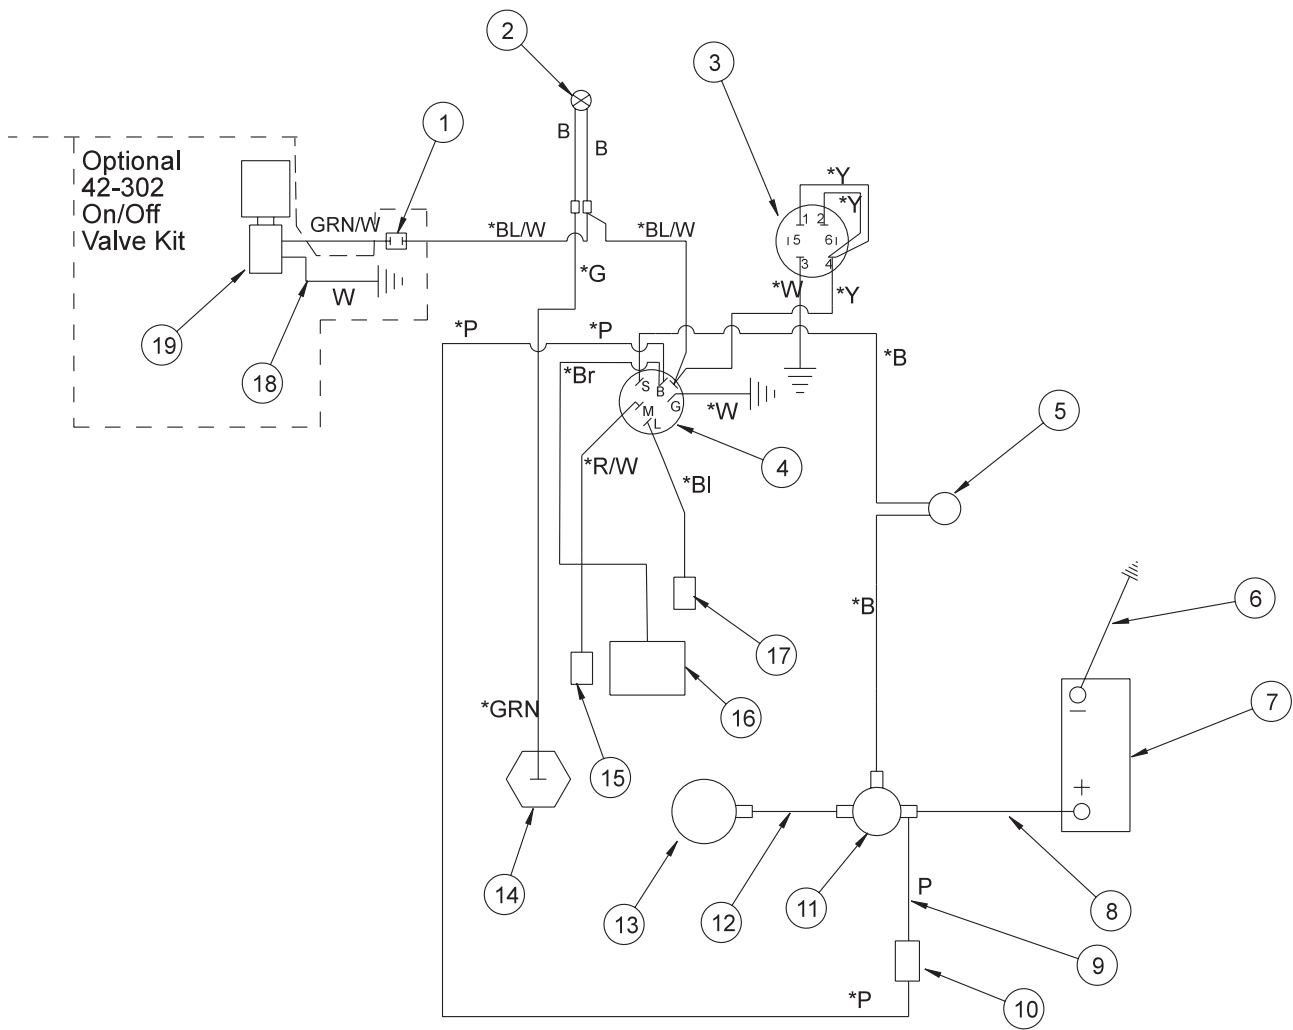


WIRING PARTS LIST

| REF # | PART # | DESCRIPTION | QUANTITY |
|-------|--------|--|----------|
| 1 | 12-003 | Toggle Switch (part of 42-302 Kit) | 1 |
| | 15-472 | Switch Boot | 1 |
| 2 | 50-359 | Oil Pressure Warning Light | 1 |
| 3 | 42-064 | Hour/ Volt Meter Combo | 1 |
| 4 | 13-488 | Ignition Switch (B & S# 496603) | 1 |
| | 76-310 | Key Set (comes with 13-488) | 1 |
| 5 | 14-272 | Seat Switch | 1 |
| 6 | 76-327 | Ground Battery Cable | 1 |
| 7 | | Battery (not included) | |
| 8 | 75-518 | Battery Cable | 1 |
| 9 | 42-252 | Wire, Circuit Breaker to Solenoid | 1 |
| 10 | 8975 | 30 Amp Circuit Breaker | 1 |
| | 8977 | Circuit Breaker Boot | 1 |
| 11 | 13-492 | Solenoid (B & S# 807829) | 1 |
| 12 | 22-017 | Cable Black | 1 |
| 13 | | Starter (on engine) | 1 |
| 14 | 13-491 | Oil Sender (on engine B & S# 491657) | 1 |
| 15 | | Stop Switch Terminal (on engine) | 1 |
| 16 | | Rectifier (on engine) | 1 |
| 17 | | After Fire Solenoid (on engine) | 1 |
| 18 | 76-260 | Ground Wire (part of 42-302 Kit) | 1 |
| 19 | 42-118 | Electric On/Off Valve (part of 42-302 Kit) | 1 |
| | 42-763 | Wire Harness (includes all wire colors with *) | 1 |

HYDRAULIC DRAWING

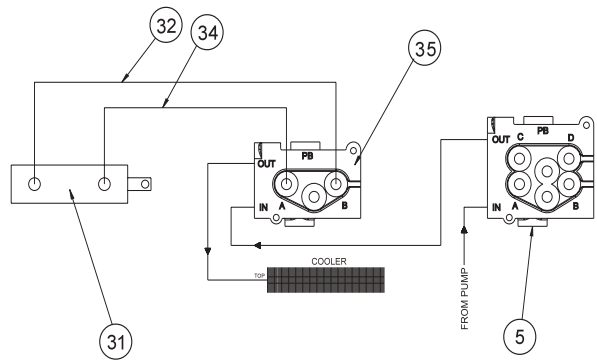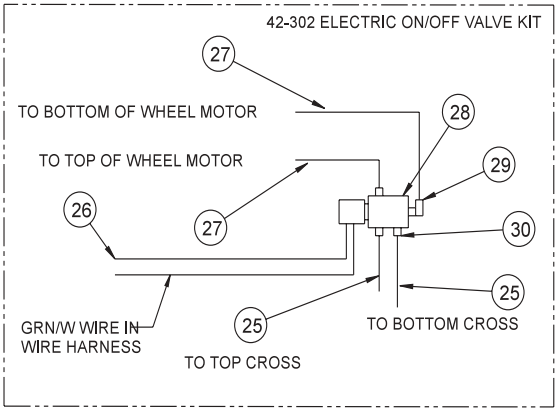


Diagrams

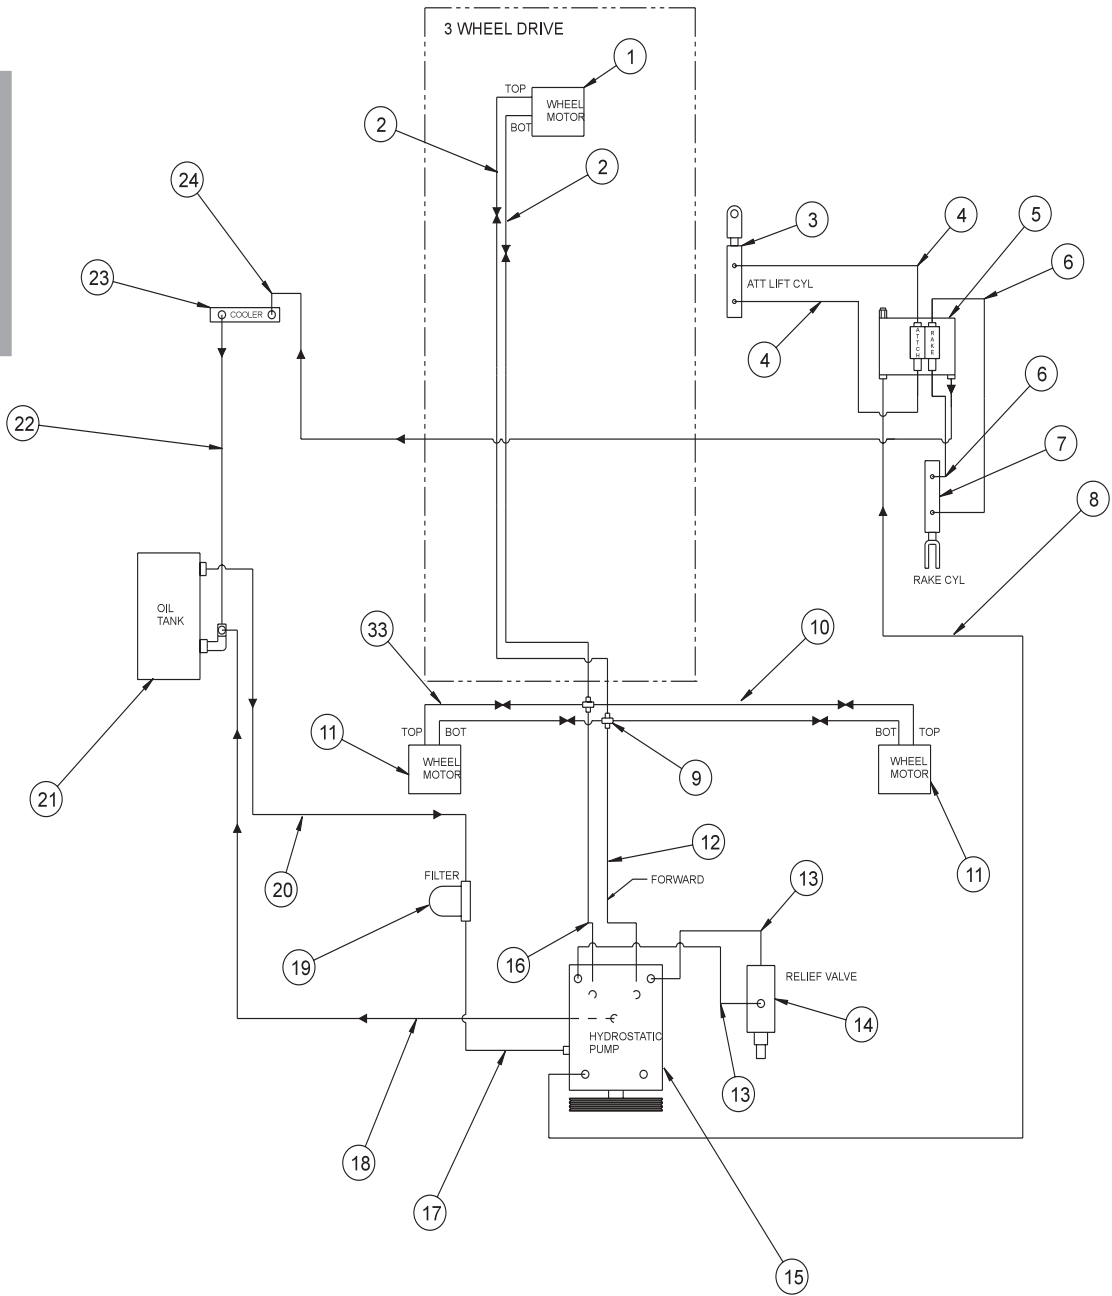

HYDRAULIC PARTSLIST

| REF # | PART # | DESCRIPTION | QUANTITY |
|----------------------------------|---------------------------|--|--------------------------|
| 1 | 42-039 | Front Wheel Motor (3 wheel drive only) | 1 |
| 2 | 42-262 | Hydraulic Hose (3 wheel drive only) | 2 |
| 3 | 10-135 | Hydraulic Cylinder | 1 |
| | 18-154 | Rod End | 1 |
| | HNJ-58-18 | Jam Nut $\frac{5}{8}$ - 18 | 1 |
| 4 | 42-047 | Hydraulic Hose | 2 |
| 5 | 13-729 | 2 - Bank Hydraulic Valve | 1 |
| | 78-417 | Valve Handle | 2 |
| 6 | 42-048 | Hydraulic Hose | 2 |
| 7 | 13-357 | Hydraulic Cylinder | 1 |
| | 42-040 | Yoke End | 1 |
| | HNJ-34-16 | Jam Nut $\frac{3}{4}$ - 16 | 1 |
| 8 | 42-044 | Hydraulic Hose | 1 |
| 9 | 18-342 | Cross | 2 |
| 10 | 42-261 | Hydraulic Tube | 2 |
| 11 | 42-002 | Rear Wheel Motor | 2 |
| 12 | 42-259 | Hydraulic Hose 10 $\frac{3}{4}$ " | 1 |
| 13 | 42-260 | Hydraulic Hose | 2 |
| 14 | 42-192 | Relief Valve | 2 |
| 15 | 34-109 | Variable Pump | 1 |
| 16 | 42-258 | Hydraulic Hose 9" | 1 |
| 17 | 8832-45 | Suction Hose | 1 |
| | 18-222 | Hose Clamp | 2 |
| 18 | 42-787 | Hydraulic Hose | 1 |
| 19 | 23-006 | Oil Filter | 1 |
| | 23-031 | Replacement Filter Only | |
| 20 | 8832-24 | Suction Hose | 1 |
| | 18-222 | Hose Clamp | 2 |
| 21 | 42-005 | Oil Tank | 1 |
| | 13-586 | Filler Breather | 1 |
| 22 | 42-256 | Hydraulic Hose | 1 |
| 23 | 42-265 | Aluminum Oil Cooler | 1 |
| 24 | 42-045 | Hydraulic Hose | 1 |
| 33 | 42-304 | Hydraulic Tube | 2 |
| 42-302 ELECTRIC ON/OFF VALVE KIT | | | |
| 25 | 42-263 | Hydraulic Hose | 2 |
| 26 | 76-260 | Ground Wire | 1 |
| 27 | 42-264 | Hydraulic Hose | 2 |
| 28 | 42-118 | Electric On/Off Valve | 1 |
| 29 | 18-185 | Elbow 90° | 1 |
| 30 | 18-341 | Elbow 45° | 3 |
| HYDRAULIC PLOW | | | |
| 31 | 13-292 | Hydraulic Cylinder | 1 |
| 32 | 43-049 | Hydraulic Hose 18" | 1 |
| 34 | 43-048 | Hydraulic Hose 20" | 1 |
| 35 | 13-731 | Single Bank Valve | 1 |
| HYDRAULIC PRESSURES | | | |
| Pump Displacement | .913 in ³ /rev | Charge Pump Displacement | .33 in ³ /rev |
| Pump Input Speed (up to) | 3600 rpm | Max. Inlet Vacuum | 5 in. Hg |
| Max. Operating Pressure | 3500 psi, 2500 peak psi | Max. Case Pressure | 25 psi |
| Implement Setting | 700-1000 psi | Relief Valve Pressure (set at) | 2500 psi |
| 13-729 Hydraulic Valve (2 bank) | 900 psi | | |

MAINFRAME COMMON DRAWING

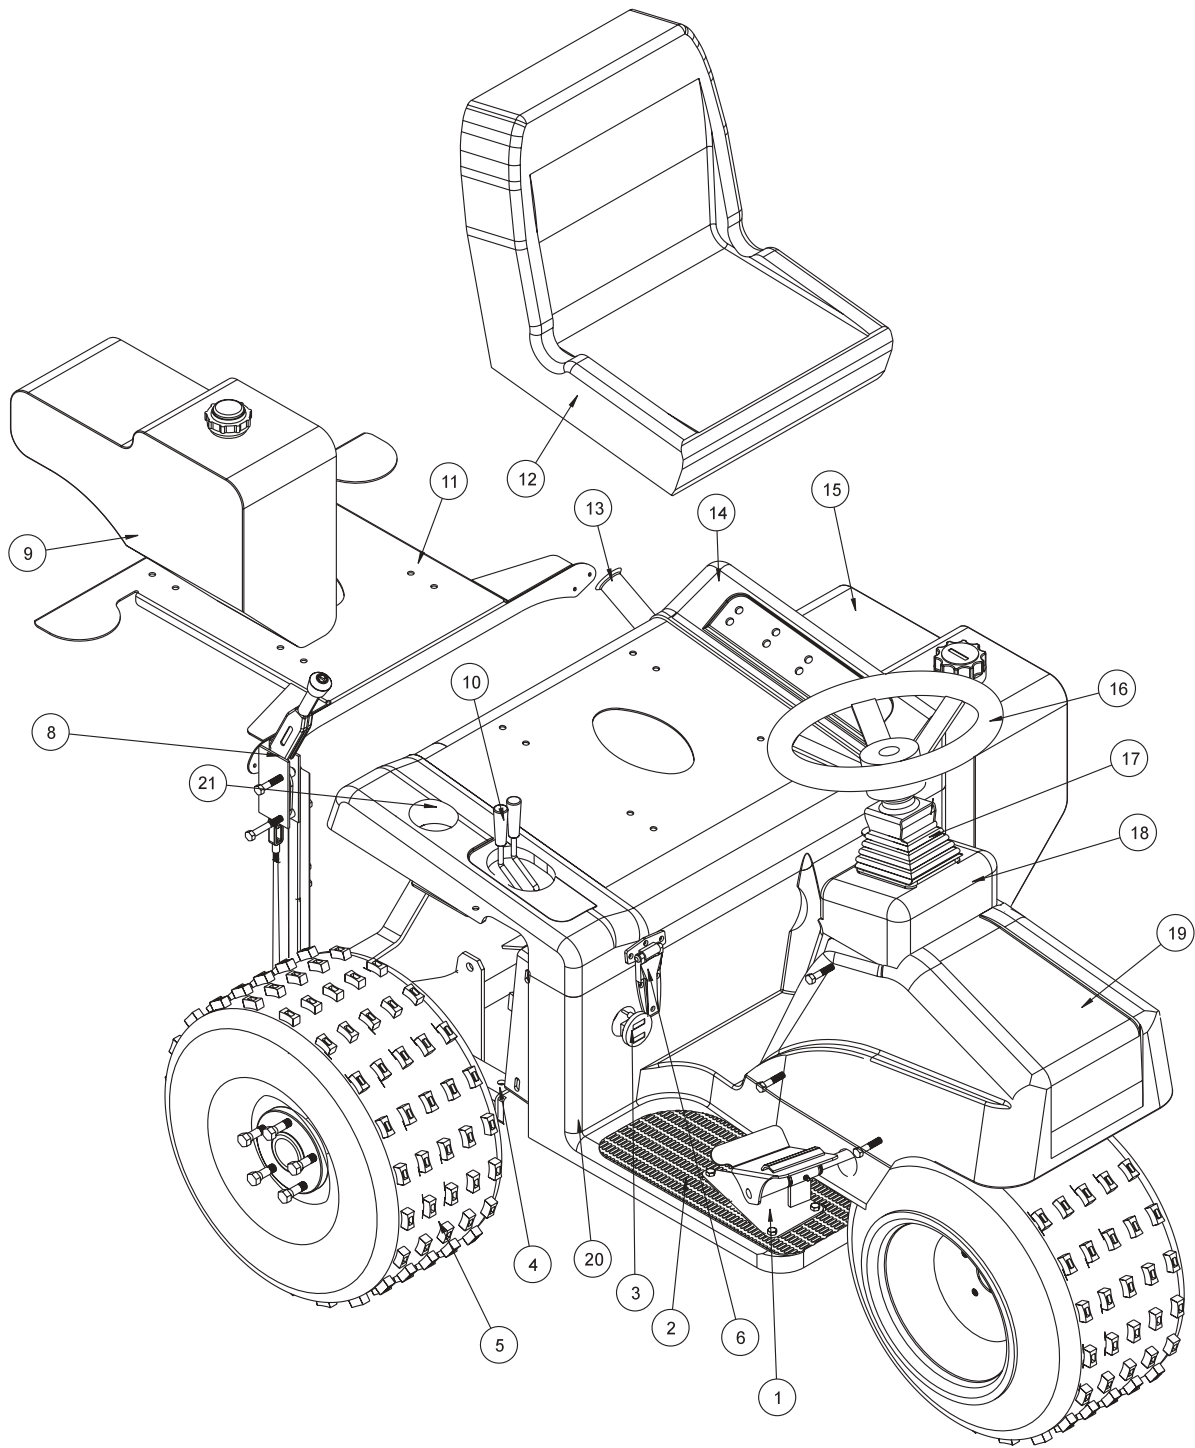

Parts

MAIN PARTS COMMON LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|---------------|-------------------------------------|----------|
| 1 | 42-777 | Foot Pedal | 1 |
| 2 | 42-767 | Right Floor Mat | 1 |
| | 42-768 | Left Floor Mat | 1 |
| 3 | 42-064 | Volt/Hour Meter | 1 |
| 4 | 42-775 | Main Frame | 1 |
| 5* | 42-161 | Knobby Tire and Wheel | 3 |
| | 42-161-01 | Tire 22 x 11 - 10 Knobby Type | 3 |
| | 42-161-02 | Wheel | 3 |
| 6 | 27-055 | Hinge | 2 |
| 8 | 60-106 | Park Brake Lever | 1 |
| 9 | 42-006 | Gas Tank | 1 |
| | 42-014 | Cap | 1 |
| 10 | 78-417 | Valve Handle | 2 |
| 11 | 42-772 | Seat Panel | 1 |
| | 8803-17 | Trim w/ Black Lace | 1 |
| 12 | 14-269 | Adjustable Low Back Seat | 1 |
| 13 | 42-030 | Rake Holder | 1 |
| 14 | 42-779 | Seat Panel (fiberglass) | 1 |
| 15 | 42-005 | Oil Tank | 1 |
| | 13-586 | Filler Breather | 1 |
| 16 | 13-718 | Steering Wheel | 1 |
| 17 | 76-364 | 90° Black Boot (comes with 76-362) | 1 |
| | 76-362 | Tilt Steering Mechanism | 1 |
| 18 | 42-782 | Console (fiberglass) | 1 |
| 19 | 42-781 | Nose Cone (fiberglass) | 1 |
| | HST-14-20-075 | Truss Head Screw $1/4$ - 20 x $3/4$ | 6 |
| | 78-274 | Cage Nuts | 2 |
| | HNTL-14-20 | Lock Nut $1/4$ - 20 | 4 |
| 20 | 42-780 | Floor Panel (fiberglass) | 1 |
| 21 | 42-786 | Plastic Cup Holder | 1 |

*

Front tire and wheel are fluid filled to 80 lbs. total.

Optional Tires

42-158

Tires and Wheel

42-158-01

Tire 23 x 10.5 x 12; 4 ply multitrack

42-158-02

Wheel


8839

Windshield Washer Fluid or Equivalent

45.5 pints



3 WHEEL DRIVE FRONT FORK DRAWING

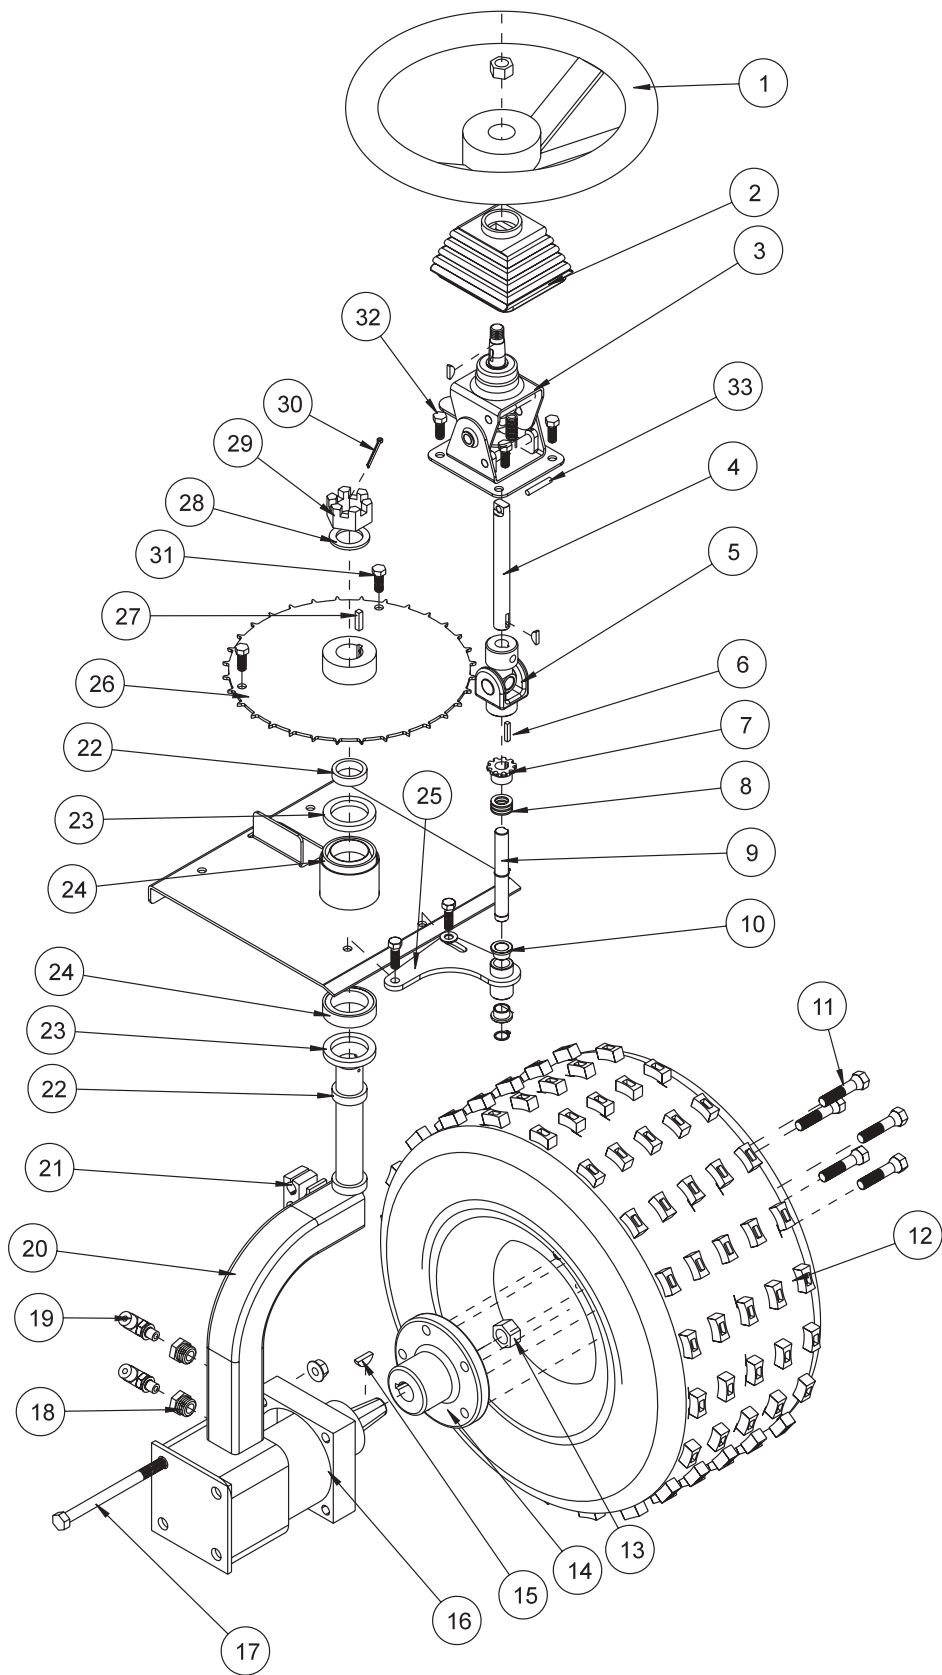


Parts

3 WHEEL DRIVE FRONT FORK PARTSLIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|---------------|---|------------|
| 1 | 13-718 | Steering Wheel 13" | 1 |
| | 13-726 | Center Cap | 1 |
| | 27-077 | Decal, Smithco Round | 1 |
| | HNJ-58-11 | Jam Nut ⁵ / ₈ - 11 | 1 |
| | HWK-316-075 | Woodruff Key ³ / ₁₆ X ³ / ₄ | 1 |
| 2 | 76-364 | Tilt Steering Boot (comes with 76-362) | 1 |
| 3 | 76-362 | Tilt Steering Mechanism | 1 |
| 4 | 42-760 | Top Steering Shaft | 1 |
| | HWK-316-075 | Woodruff Key ³ / ₁₆ X ³ / ₄ | 1 |
| 5 | 60-300 | U-Joint | 1 |
| 6 | HKSQ-316-100 | Machine Key ³ / ₁₆ X ³ / ₁₆ X 1 | 2 |
| 7 | 60-298 | Sprocket | 1 |
| 8 | HMB-58-14 | Machine Bushing ⁵ / ₈ X 14 GA | 3 |
| 9 | 42-034 | Bottom Steering Shaft | 1 |
| | HRR-58 | Snap Ring ⁵ / ₈ | 2 |
| 10 | 76-128 | Flange Bushing (part of 42-266) | 2 |
| 11 | 60-268 | Lug Bolts ¹ / ₂ - 20 x ¹ / ₅ | 5 |
| 12 | 42-161 | Knobby Tire and Wheel | 1 |
| | 42-161-01 | Tire 22 x 11 - 10 Knobby Type | 1 |
| | 42-161-02 | Wheel | 1 |
| | 8839 | Windshield Washer Fluid or Equivalent | 43.5 pints |
| 13 | 42-002-12 | Nut ³ / ₄ - 16 (part of 42-039) | 1 |
| 14 | 42-007 | Hub | 1 |
| 15 | HWK-14-100 | Woodruff Key ¹ / ₄ - 1 (part of 42-039) | 1 |
| 16 | 42-039 | Wheel Motor | 1 |
| | 18-350 | 90° Seal Lok Elbow | 2 |
| 17 | HB-12-13-650 | Bolt ¹ / ₂ - 13 x 6 ¹ / ₂ | 4 |
| | HNTL-12-13 | Lock Nut ¹ / ₂ - 13 | 4 |
| 18 | 18-172 | Reducer | 2 |
| 19 | 18-171 | Seal Lock Elbow | 2 |
| 20 | 42-022 | Front Fork | 1 |
| 21 | 13-652 | Hose Clamp | 1 |
| 22 | 20-141 | Spacer | 2 |
| 23 | 20-142 | Oil Seal | 2 |
| 24 | 20-143 | Bearing | 2 |
| 25 | 42-266 | Chain Tensioner | 1 |
| | HB-38-16-125 | Bolt ³ / ₈ - 16 x 1 ¹ / ₄ | 2 |
| | HW-38 | Washer ³ / ₈ | 1 |
| | HNFL-38-16 | Flange Whiz Lock Nut ³ / ₈ - 16 | 2 |
| 26 | 42-295 | Steering Sprocket | 1 |
| | 8834-37.5 | #35 Roller Chain | 1 |
| | 18-114 | Master Link | 1 |
| 27 | HKSQ-14-100 | Square Key ¹ / ₄ X ¹ / ₄ X 1 | 1 |
| 28 | HMB-114-10 | Machine Bushing 1 ¹ / ₄ X 10GA | 1 |
| 29 | HNA-114-12 | Axle Nut 1 ¹ / ₄ - 12 | 1 |
| 30 | HP-18-200 | Cotter Pin ¹ / ₈ X 2 | 1 |
| 31 | HB-38-16-100 | Bolt ³ / ₈ - 16 x 1 | 2 |
| | HNFL-38-16 | Flange Whiz Lock Nut ³ / ₈ - 16 | 2 |
| 32 | HB-516-18-125 | Bolt ⁵ / ₁₆ - 18 x 1 ¹ / ₄ | 2 |
| | HNTL-516-18 | Lock Nut ⁵ / ₁₆ - 18 | 2 |
| 31 | HRP-14-150 | Roll Pin ¹ / ₄ X 1 ¹ / ₂ | 1 |



2 WHEEL DRIVE FRONT FORK DRAWING

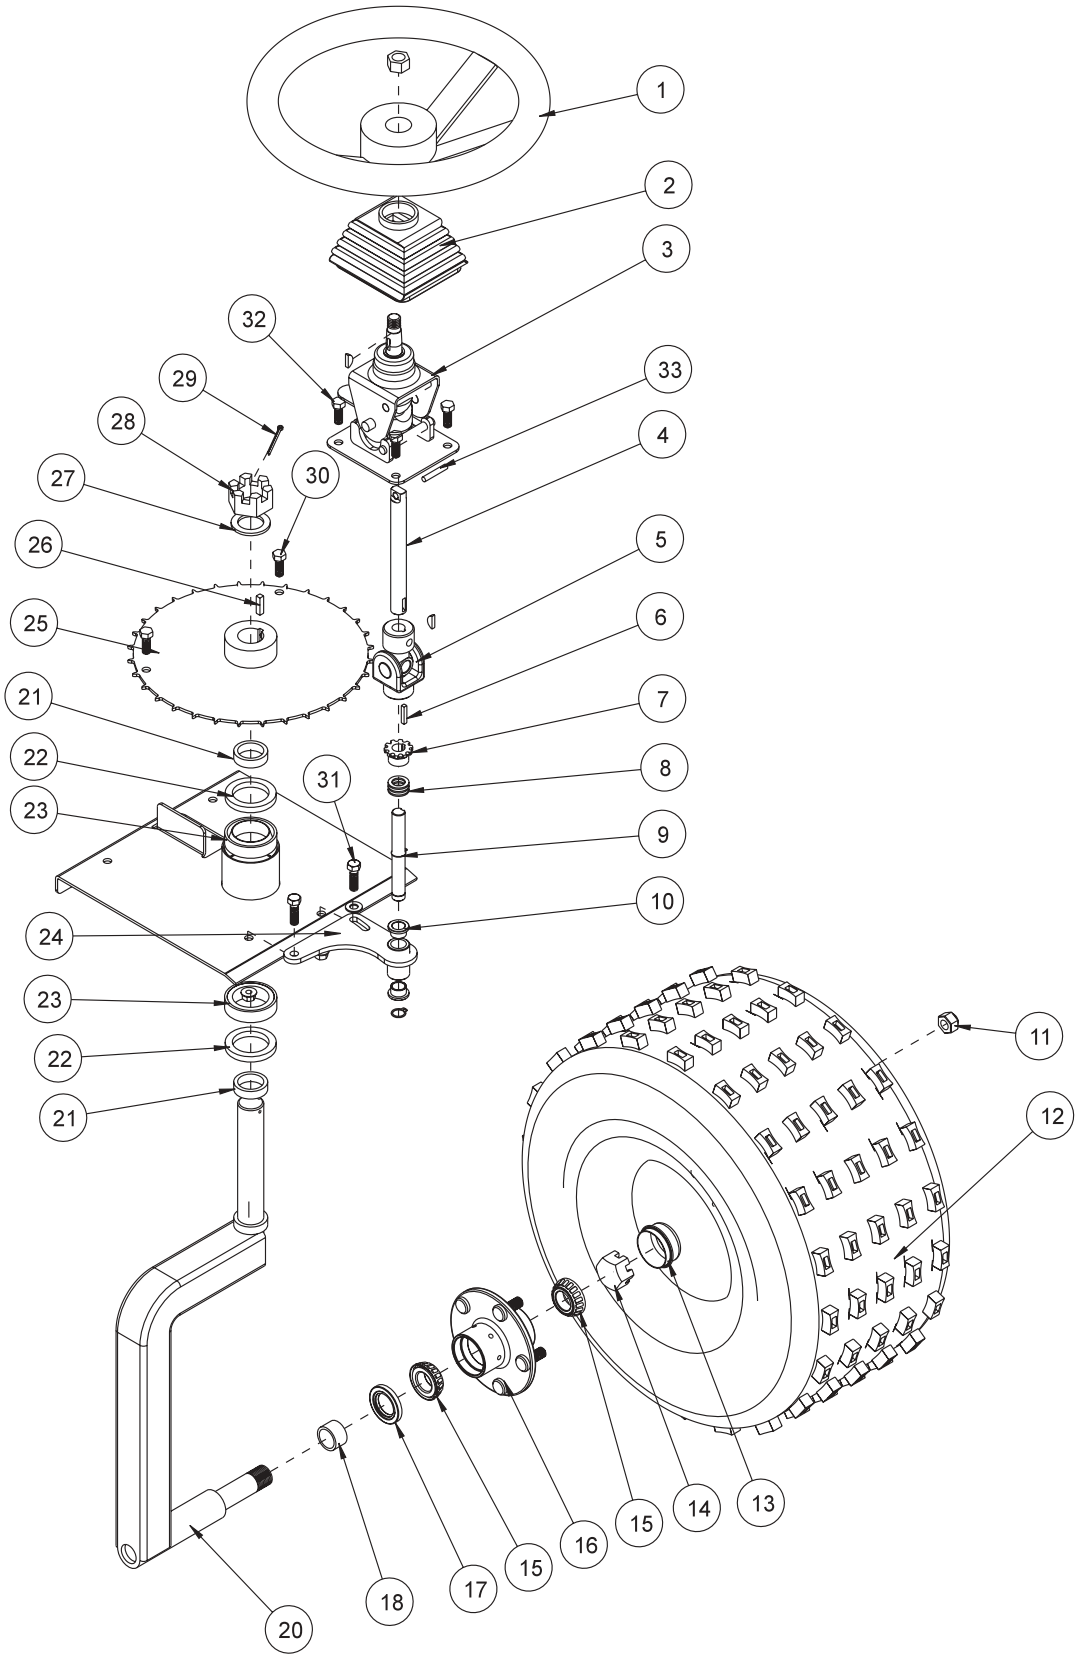


Parts

2 WHEEL DRIVE FRONT FORK PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|---------------|--|------------|
| 1 | 13-718 | Steering Wheel 13" | 1 |
| | 13-726 | Center Cap | 1 |
| | 27-077 | Decal, Smithco Round | 1 |
| | HNJ-58-11 | Jam Nut $\frac{5}{8}$ - 11 | 1 |
| | HWK-316-075 | Woodruff Key $\frac{3}{16}$ x $\frac{3}{4}$ | 1 |
| 2 | 76-364 | Tilt Steering Boot (comes with 76-362) | 1 |
| 3 | 76-362 | Tilt Steering Mechanism | 1 |
| 4 | 42-760 | Top Steering Shaft | 1 |
| | HWK-316-075 | Woodruff Key $\frac{3}{16}$ x $\frac{3}{4}$ | 1 |
| 5 | 60-300 | U-Joint | 1 |
| 6 | HKSQ-316-100 | Machine Key $\frac{3}{16}$ x $\frac{3}{16}$ x 1 | 2 |
| 7 | 60-298 | Sprocket | 1 |
| 8 | HMB-58-14 | Machine Bushing $\frac{5}{8}$ x 14 GA | 3 |
| 9 | 42-034 | Bottom Steering Shaft | 1 |
| | HRR-58 | Snap Ring $\frac{5}{8}$ | 2 |
| 10 | 76-128 | Flange Bushing (part of 42-266) | 2 |
| 11 | HNL-12-20 | Lug Nut $\frac{1}{2}$ - 20 | 5 |
| 12 | 42-161 | Knobby Tire and Wheel | 1 |
| | 42-161-01 | Tire 22 x 11 - 10 Knobby Type | 1 |
| | 42-161-02 | Wheel | 1 |
| | 8839 | Windshield Washer Fluid or Equivalent | 43.5 pints |
| 13 | 80-167 | Dust Cap | 1 |
| 14 | HNA-100-14 | Jam Nut 1 - 14 | 1 |
| | HP-18-150 | Cotter Pin $\frac{1}{8}$ x $1\frac{1}{2}$ | 1 |
| 15 | 11-043 | Bearing | 2 |
| 16 | 80-019 | Hub (includes bearings, seal, dust cap, lug nuts, and studs) | 1 |
| | 27-022-02 | Stud $\frac{1}{2}$ - 20 | 5 |
| 17 | 11-041 | Seal | 1 |
| 18 | 11-042 | Spacer | 1 |
| 20 | 13-448 | Front Fork | 1 |
| 21 | 20-141 | Spacer | 2 |
| 22 | 20-142 | Oil Seal | 2 |
| 23 | 20-143 | Bearing | 2 |
| 24 | 42-266 | Chain Tensioner | 1 |
| 25 | 42-295 | Steering Sprocket | 1 |
| | 8834-37.5 | Roller Chain | 1 |
| | 18-114 | Master Link | 1 |
| 26 | HKSQ-14-100 | Square Key $\frac{1}{4}$ x $\frac{1}{4}$ x 1 | 1 |
| 27 | HMB-114-10 | Machine Bushing $1\frac{1}{4}$ x 10GA | 1 |
| 28 | HNA-114-12 | Axle Nut $1\frac{1}{4}$ - 12 | 1 |
| 29 | HP-18-200 | Cotter Pin $\frac{1}{8}$ x 2 | 1 |
| 30 | HB-38-16-100 | Bolt $\frac{3}{8}$ - 16 x 1 | 2 |
| | HNFL-38-16 | Flange Whiz Lock Nut $\frac{3}{8}$ - 16 | 2 |
| 31 | HB-38-16-125 | Bolt $\frac{3}{8}$ - 16 x $1\frac{1}{4}$ | 2 |
| | HW-38 | Washer $\frac{3}{8}$ | 1 |
| | HNFL-38-16 | Flange Whiz Lock Nut $\frac{3}{8}$ - 16 | 2 |
| 32 | HB-516-18-125 | Bolt $\frac{5}{16}$ - 18 x $1\frac{1}{4}$ | 2 |
| | HNTL-516-18 | Lock Nut $\frac{5}{16}$ - 18 | 2 |
| 31 | HRP-14-150 | Roll Pin $\frac{1}{4}$ x $1\frac{1}{2}$ | 1 |



LINKAGE DRAWING

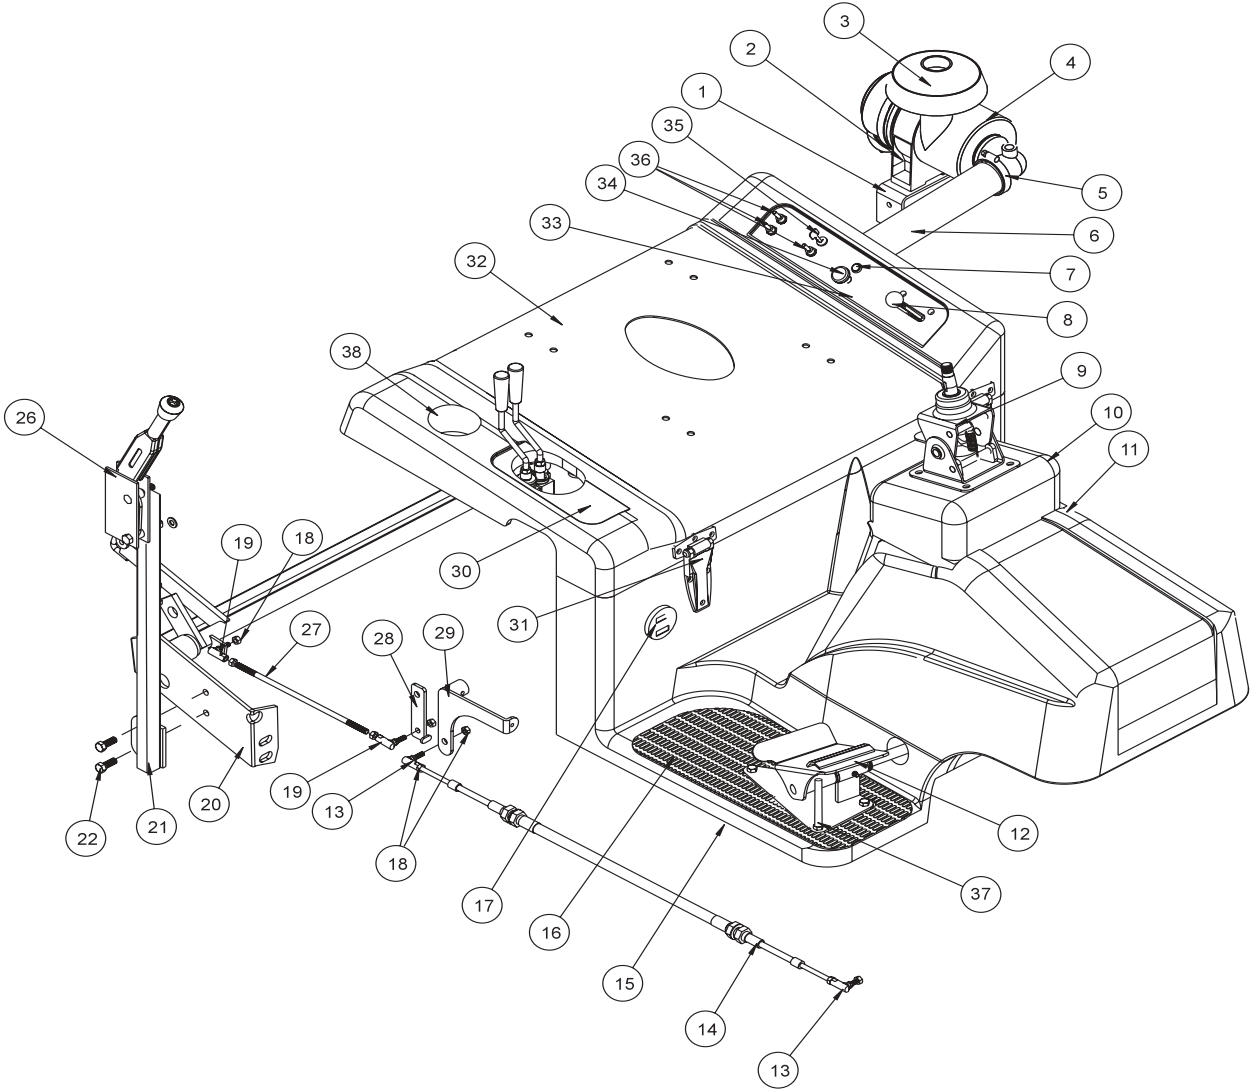


Parts

LINKAGE PARTSLIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|------------------|--|----------|
| 1 | 42-769 | Oil Tank Bracket | 1 |
| | HB-516-18-100 | Bolt $\frac{5}{16}$ - 18 x 1 | 2 |
| | HNFL-516-18 | Flange Whiz Lock Nut $\frac{5}{16}$ - 18 | 2 |
| 2 | 42-076-01 | Band | 1 |
| 3 | 42-076-02 | Hat | 1 |
| 4 | 42-076 | Air Cleaner | 1 |
| | 42-076-03 | Replacement Filter | |
| | 13-603 | Air Cleaner Base (comes with engine) | 1 |
| 5 | 18-123 | Hose Clamp | 2 |
| 6 | 8959-26 | Flex Hose x 26" | 1 |
| | 27-113 | Air Cleaner Hose Elbow | 1 |
| | 42-776 | Air Tube | 1 |
| 7 | 50-359 | Warning Light | 1 |
| 8 | 42-789 | Throttle Cable | 1 |
| | 42-776 | Throttle Bracket | 1 |
| | HSTP-14 -20-075 | Phillips Truss Head Screw $\frac{1}{4}$ - 20 x $\frac{3}{4}$ | 2 |
| | HNFL-14-20 | Flange Whiz Lock Nut $\frac{1}{4}$ - 20 | 2 |
| 9 | 76-362 | Tilt Steering | 1 |
| | 76-364 | Boot Black (comes with 76-362) | 1 |
| 10 | 42-782 | Console (fiberglass) | 1 |
| 11 | 42-781 | Nose Cone (fiberglass) | 1 |
| 12 | 42-777 | Foot Pedal | 1 |
| | HG-14-28-180 | Grease Fitting $\frac{1}{4}$ - 28 x 180° (comes with) | 1 |
| | 13-715 | Pedal Pad | 1 |
| | HB-516-18-150 | Bolt $\frac{5}{16}$ - 18 x $1\frac{1}{2}$ | 2 |
| | HW-516 | Washer $\frac{5}{16}$ | 2 |
| | HNFL-516-18 | Flange Whiz Lock Nut $\frac{5}{16}$ - 18 | 2 |
| 13 | 18-115 | Ball Joint $\frac{1}{4}$ - 28 | 2 |
| 14 | 27-132 | Cable | 1 |
| 15 | 42-780 | Floorboard (fiberglass) | 1 |
| 16 | 42-767 | Right Floor Mat | 1 |
| | 42-768 | Left Floor Mat | 1 |
| 17 | 42-064 | Volt/Hour Meter | 1 |
| 18 | HN-14-28 | Nut $\frac{1}{4}$ -28 | 4 |
| | HWL-14 | Lockwasher $\frac{1}{4}$ | 2 |
| 19 | 21-462 | Ball Joint $\frac{5}{16}$ - 24 | 2 |
| 20 | 42-024 | Rake Lift | 1 |
| 21 | 42-153 | Park Brake Bracket | 1 |
| 22 | HB-38-16-100 | Bolt $\frac{3}{8}$ - 16 x 1 | 2 |
| | HNFL-38-16 | Flange Whiz Lock Nut $\frac{3}{8}$ - 16 | 2 |
| 26 | 60-106 | Park Brake Handle | 1 |
| 27 | 42-267 | Speed Boss Rod | 1 |
| 28 | 42-249 | Speed Boss Arm | 1 |
| 29 | 42-308 | Swash Arm | 1 |
| 30 | 42-765 | Decal, Lift Controls | 1 |
| 31 | 27-055 | Hinge | 2 |
| | HSMFCS-10-32-100 | Machine Screw #10 - 32 x 1 | 6 |
| | HSMFCS-10-32-088 | Machine Screw #10 - 32 x $\frac{7}{8}$ | 6 |
| | HW-10 | Washer #10 | 12 |
| | HWL-10 | Lock Washer #10 | 12 |
| | HN-10-32 | Nut #10 - 32 | 12 |

(Continued on next page)

LINKAGE DRAWING

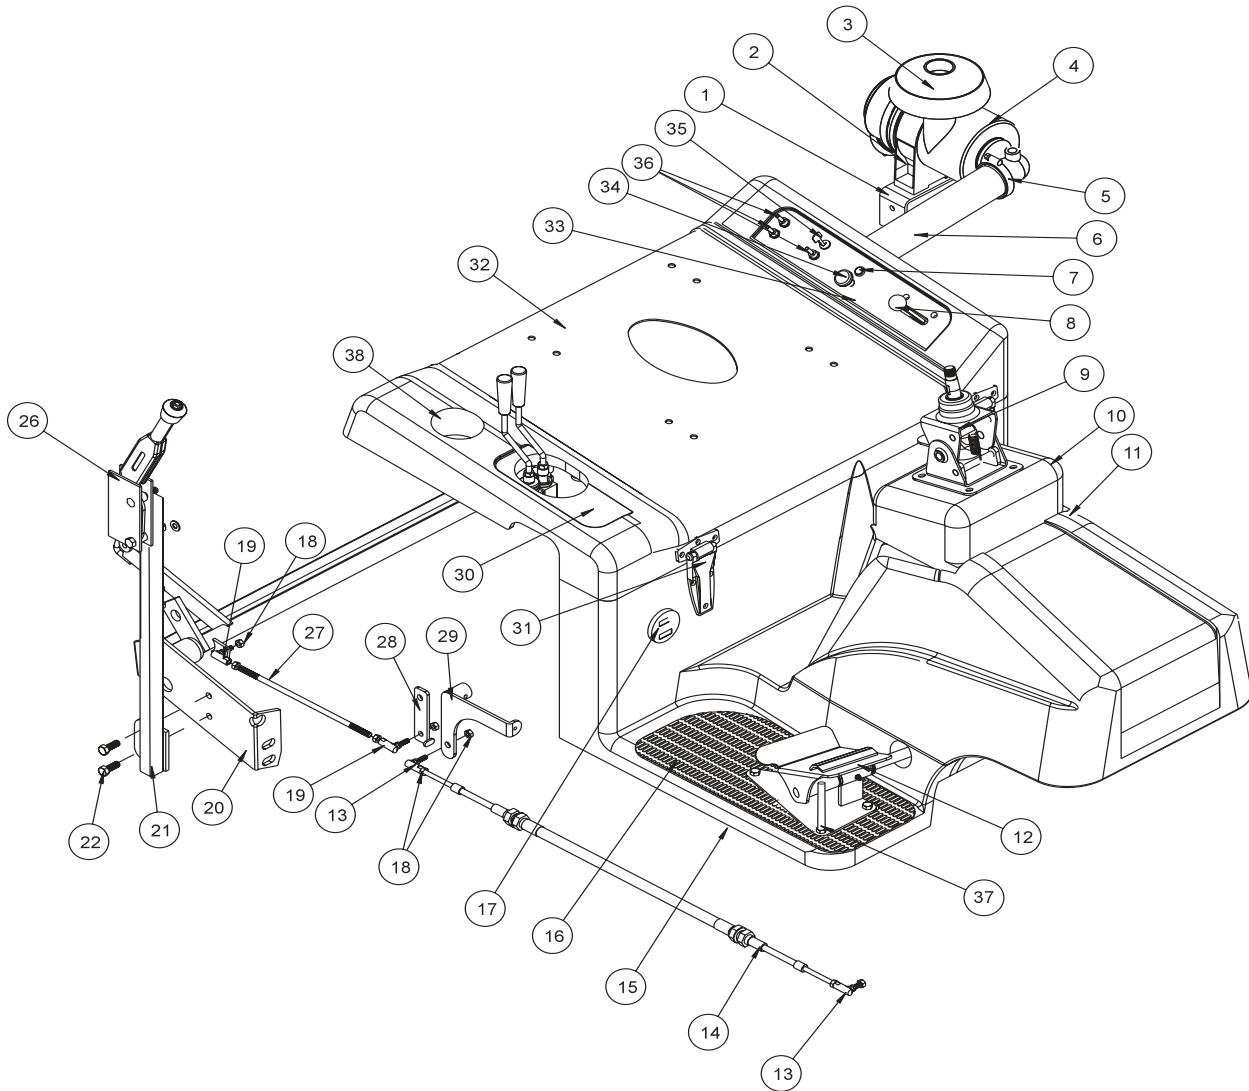


Parts

LINKAGE PARTSLIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|-------------|--|----------|
| 32 | 42-779 | Seat Panel | |
| 33 | 42-764 | Decal, Control Panel | 1 |
| 34 | 42-783 | Choke | 1 |
| 35 | 13-488 | Key Switch (B&S 496603) | 1 |
| | 76-310 | Key Set | 1 |
| 36* | 12-003 | 2W/3W Toggle Switch | 3 |
| | 15-472 | Switch Boot | 3 |
| 37 | 42-313 | Pedal Stop | 1 |
| | HNFL-516-18 | Flange Whiz Lock Nut ⁵ / ₁₆ - 18 | 2 |
| 38 | 42-786 | Plastic Cup Holder | 1 |

* Used with Blower Kit, On/Off Valve and Light Kit

GAS TANK DRAWING

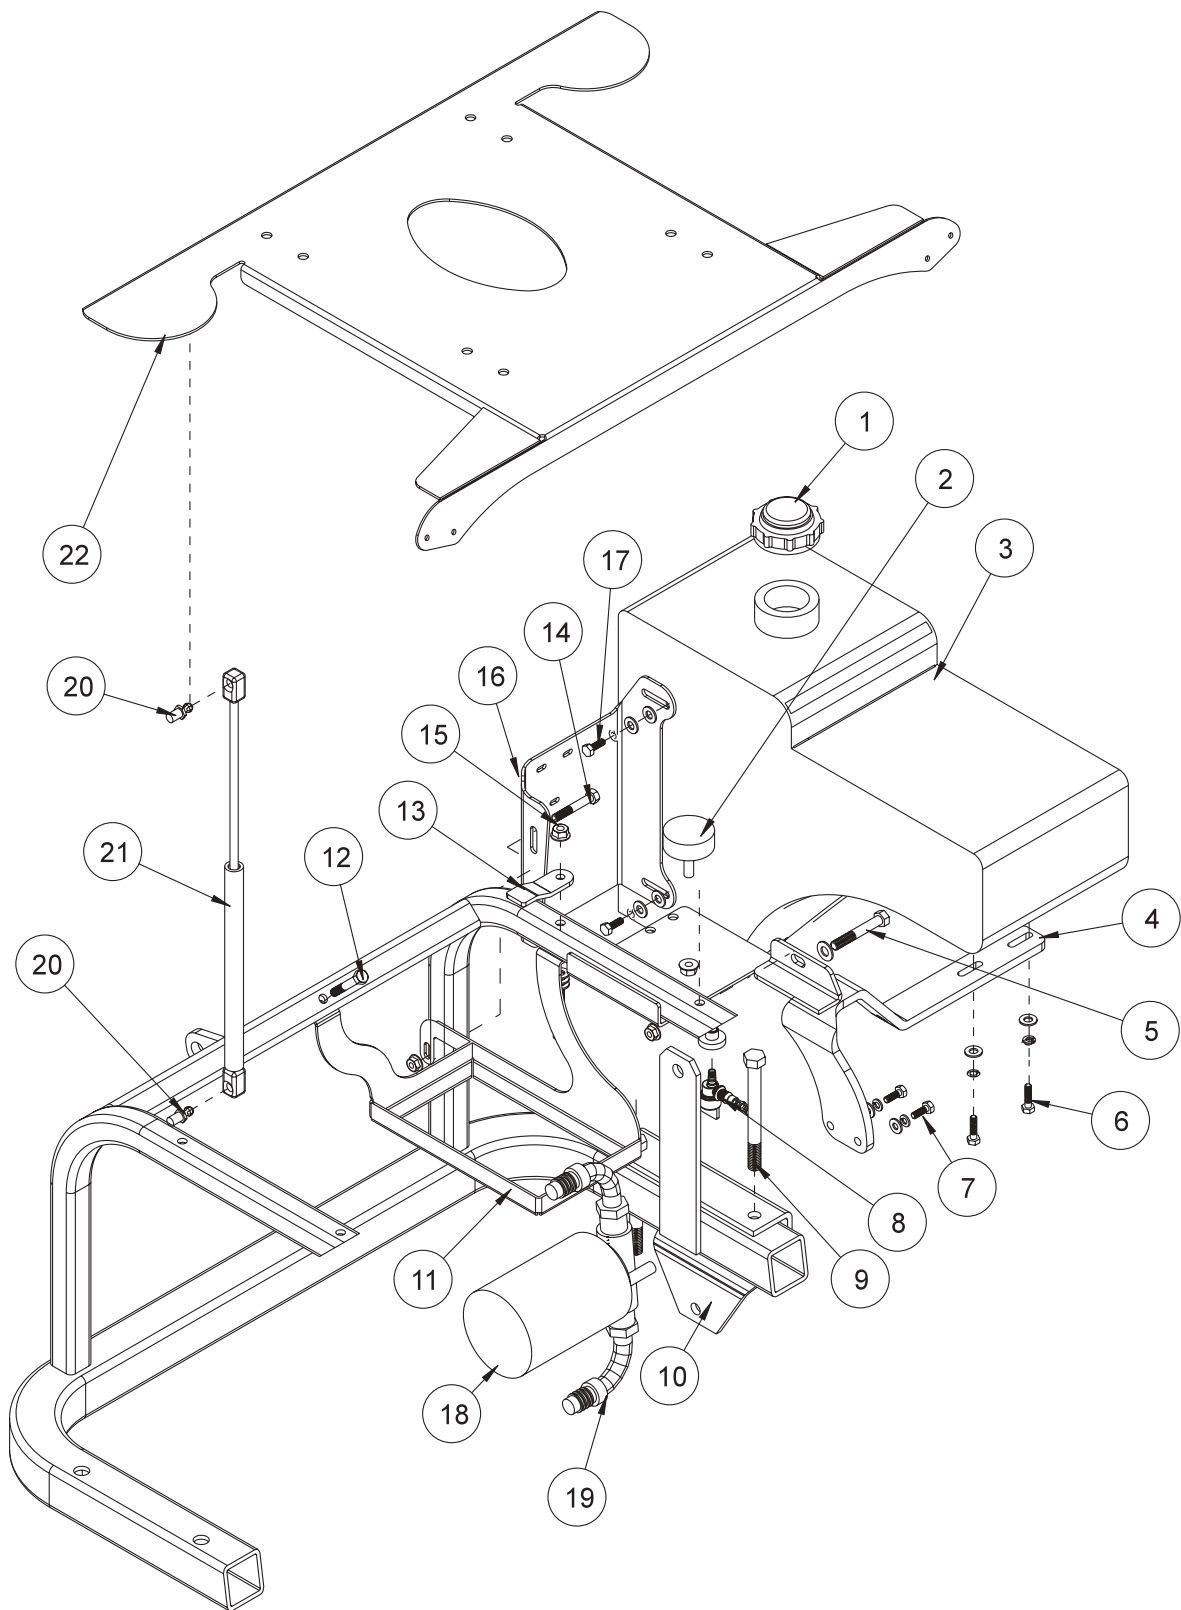


Parts

GAS TANK PARTSLIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|---------------|---|----------|
| 1 | 42-014 | Cap | 1 |
| 2 | 50-081 | Rubber Bumper | 1 |
| | HNFL-38-16 | Flange Whiz Lock Nut $\frac{3}{8}$ - 16 | 1 |
| 3 | 42-006 | Gas Tank | 1 |
| 4 | 42-770 | Right Tank Support | 1 |
| 5 | HB-38-16-250 | Bolt $\frac{3}{8}$ - 16 x $2\frac{1}{2}$ | 1 |
| | HW-38 | Washer $\frac{3}{8}$ | 2 |
| | HNFL-38-16 | Flange Whiz Lock Nut $\frac{3}{8}$ - 16 | 1 |
| 6 | HB-14-20-100 | Bolt $\frac{1}{4}$ - 20 x 1 | 2 |
| | HW-14 | Washer $\frac{1}{4}$ | 2 |
| | HW-516 | Washer $\frac{5}{16}$ | 2 |
| | HWL-14 | Lock Washer $\frac{1}{4}$ | 2 |
| 7 | HB-14-20-075 | Bolt $\frac{1}{4}$ - 20 x $\frac{3}{4}$ | 2 |
| | HWL-14 | Lockwasher $\frac{1}{4}$ | 2 |
| | HW-14 | Washer $\frac{1}{4}$ | 2 |
| 8 | 26-055 | Fuel Shut Off (comes with 42-006) | 1 |
| | 26-054 | Rubber Grommet (comes with 42-006) | 1 |
| | 8800-41 | Fuel Hose | 1 |
| | 18-186 | Hose Clamp | 2 |
| 9 | HB-12-13-500 | Bolt $\frac{1}{2}$ - 13 x 5 | 2 |
| | HNFL-12-13 | Flange Whiz Lock Nut $\frac{1}{2}$ - 13 | 2 |
| 10 | 42-015 | Attachment Mount | 1 |
| 11 | 42-273 | Battery Box | 1 |
| 12 | HB-516-18-200 | Bolt $\frac{5}{16}$ - 18 x 1 | 1 |
| | HNFL-516-18 | Flange Whiz Lock Nut $\frac{5}{16}$ - 18 | 1 |
| 13 | 42-248 | Battery Hold-down | 1 |
| | 15-020 | Grip | 1 |
| 14 | HB-516-18-225 | Bolt $\frac{5}{16}$ - 18 x $2\frac{1}{4}$ | 2 |
| | HNFL-516-18 | Flange Whiz Lock Nut $\frac{5}{16}$ - 18 | 2 |
| 15 | HB-516-18-225 | Bolt $\frac{5}{16}$ - 18 x $2\frac{1}{4}$ | 1 |
| | HW-516 | Washer $\frac{5}{16}$ | 3 |
| | HNFL-516-18 | Flange Whiz Lock Nut $\frac{5}{16}$ - 18 | 1 |
| 16 | 42-773 | Gas Tank Bracket | 1 |
| 17 | HB-14-20-075 | Bolt $\frac{1}{4}$ - 20 x $\frac{3}{4}$ | 2 |
| | HW-14 | Washer $\frac{1}{4}$ | 2 |
| | HWL-14 | Lock Washer $\frac{1}{4}$ | 2 |
| 18 | 23-006 | Oil Filter | 1 |
| | 23-031 | Replacement Filter | 1 |
| 19 | 34-123 | Elbow | 2 |
| 20 | 26-034 | Ball Stud | 2 |
| 21 | 13-569 | Gas Shock | 1 |
| 22 | 42-772 | Seat Panel | 1 |

OIL TANK DRAWING

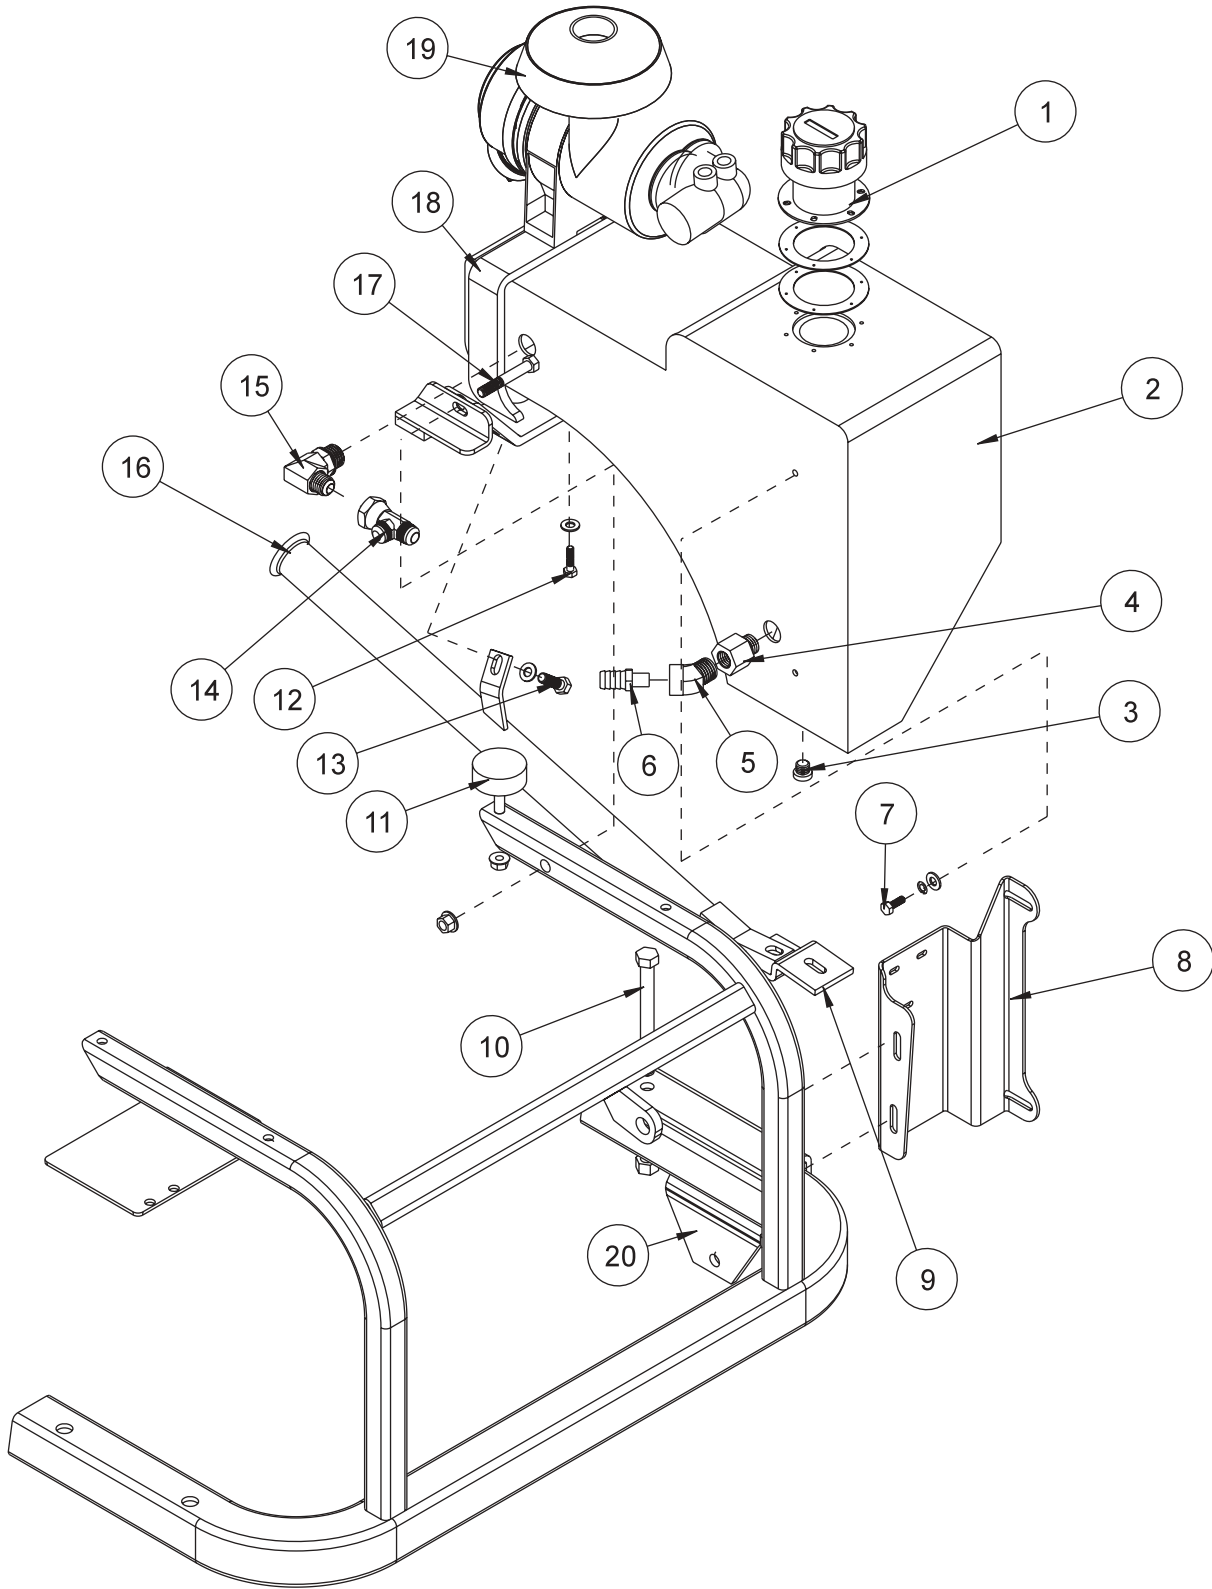

Parts


OIL TANK PARTSLIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|---------------|--------------------------------|----------|
| 1 | 13-586 | Filler Breather | 1 |
| | 13-586-01 | Cap Gasket | 1 |
| | 13-586-02 | Bottom Gasket | 2 |
| | HSM-8-32-050 | Machine Screw #8 - 32 x 1/2 | 6 |
| | HWS-8 | Star Washer #8 | 6 |
| 2 | 42-005 | Oil Tank | 1 |
| 3 | 23-126 | #6 Plug | 1 |
| 4 | 18-240 | Adapter | 1 |
| 5 | 18-072 | 45° Elbow | 1 |
| 6 | 18-133 | Barb Fitting | 1 |
| 7 | HB-14-20-075 | Bolt 1/4 - 20 x 3/4 | 2 |
| | HW-14 | Washer 1/4 | 2 |
| | HWL-14 | Lock Washer 1/4 | 2 |
| 8 | 42-774 | Oil Tank Bracket | 1 |
| | HB-516-18-225 | Bolt 5/16 - 18 x 2 1/4 | 2 |
| | HNFL-516-18 | Flange Whiz Lock Nut 5/16 - 18 | 2 |
| 9 | 42-035 | Tank Support | 1 |
| 10 | HB-12-13-500 | Bolt 1/2 - 13 x 5 | 2 |
| | HNTL-12-13 | Top Lock Nut 1/2 - 13 | 2 |
| 11 | 50-081 | Rubber Bumper | 1 |
| | HNFL-38-16 | Flange Whiz Lock Nut 3/8 - 16 | 1 |
| 12 | HB-14-20-100 | Bolt 1/4 - 20 x 1 | 2 |
| | HW-516 | Washer 5/16 | 2 |
| | HW-14 | Washer 1/4 | 2 |
| | HWL-14 | Lock Washer 1/4 | 2 |
| 13 | HB-38-16-150 | Bolt 3/8 - 16 x 1 1/2 | 1 |
| | HW-38 | Washer 3/8 | 1 |
| | HNFL-38-16 | Flange Whiz Lock Nut 3/8 - 16 | 1 |
| 14 | 18-337 | Tee | 1 |
| 15 | 23-189 | 90° Elbow | 1 |
| 16 | 42-030 | Rake Holder | 1 |
| 17 | HB-38-16-250 | Bolt 3/8 - 16 x 2 1/2 | 1 |
| | HW-38 | Washer 3/8 | 1 |
| | HNFL-38-16 | Flange Whiz Lock Nut 3/8 - 16 | 1 |
| 18 | 42-769 | Left Tank Bracket | 1 |
| 19 | 42-076 | Remote Air Cleaner | 1 |
| 20 | 42-015 | Attachment Mount | 2 |




PUMP AND ENGINE DRAWING

Parts

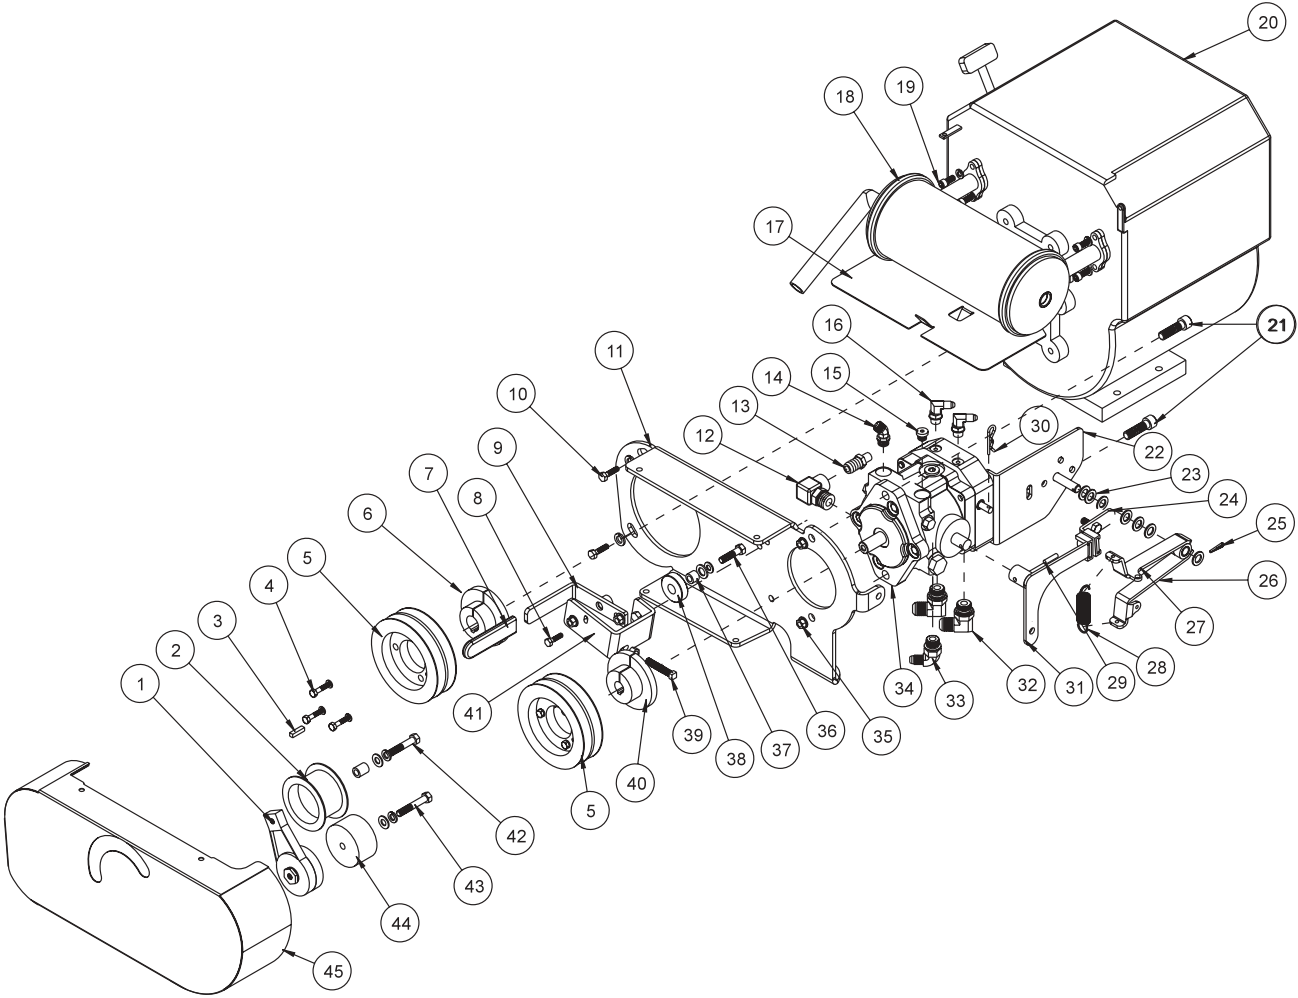

BELT ROUTING

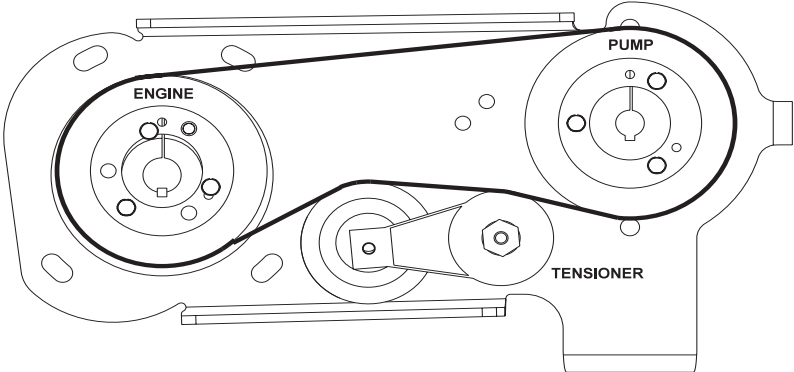


PUMP AND ENGINE PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|------------------|---|----------|
| 1 | 42-327 | Tensioner | 1 |
| 2 | 16-013 | Idler Pulley | 1 |
| | 10-134 | Spacer | 1 |
| | 42-338 | Oilite Bushing | 1 |
| 3 | HKSQ-14-100 | Machine Key $\frac{1}{4} \times \frac{1}{4} \times 1$ | 1 |
| 4 | HB-14-20-125 | Bolt $\frac{1}{4} - 20 \times 1\frac{1}{4}$ (comes with 42-245) | 3 |
| | HW-14 | Lockwasher (comes with 42-245) | 3 |
| 5 | 42-331 | Pulley | 2 |
| | 42-175 | Shoulder Bolt $\frac{3}{8} \times 1\frac{1}{2}$ | 1 |
| | HW-516 | Washer $\frac{5}{16}$ | 1 |
| | HNTL-516-18 | Lock Nut $\frac{5}{16} - 18$ | 1 |
| 6 | 42-245 | Hub 1" | 1 |
| 7 | 15-020 | Grip | 1 |
| 8 | HB-14-20-100 | Bolt $\frac{1}{4} - 20 \times 1$ | 1 |
| | HNFL-14-20 | Flange Whiz Lock Nut $\frac{1}{4} - 20$ | 1 |
| 9 | 42-333 | Handle | 1 |
| 10 | HB-716-14-100 | Bolt $\frac{7}{16} - 14 \times 1$ | 4 |
| | HWL-716 | Lockwasher $\frac{7}{16}$ | 4 |
| 11 | 42-335 | Pump Mount | 1 |
| 12 | 23-130 | Elbow 90° | 1 |
| 13 | 18-133 | Barb Fitting | 1 |
| 14 | 18-188 | Elbow 45° | 1 |
| 15 | 23-126 | Plug | 1 |
| 16 | 18-232 | Elbow 90° | 2 |
| 17 | 42-306 | Heat Shield | 1 |
| | 18-222 | Hose Clamp | 2 |
| 18 | 27-123 | Muffler | 1 |
| | 13-498 | Muffler Clamp | 1 |
| | 13-493 | Tailpipe | 1 |
| 19 | HSSHSM-8-1.25-20 | Metric Cap Screw M8 - 1.25 x 20 | 4 |
| | HWLM-8 | Lockwasher M8 | 4 |
| 20 | 43-024 | Engine B&S 18 HP (3 wheel drive) | 1 |
| | 15-165 | Engine B&S 16 HP (2 wheel drive) | 1 |
| | 15-165-01 | Air Filter Element with Pre-Cleaner (comes with engine) | 1 |
| | 13-531 | Engine Oil Filter (comes with engine) | 1 |
| | 13-491 | Oil Switch (comes with engine) | 1 |
| | 13-492 | Solenoid | 1 |
| 21 | HSSHHS-12-13-175 | Socket Screw $\frac{1}{2} - 13 \times 1\frac{3}{4}$ | 2 |
| 22 | 42-279 | Filter Mount | 1 |
| | HW-38 | Washer $\frac{3}{8}$ | 2 |
| 23 | HMB-12-14 | Machine Bushing $\frac{1}{2} \times 14$ GA | 7 |
| 24 | 42-247 | Creep Arm | 1 |
| | 8946-1.5 | Wear Strip (part of 42-247) | 1 |
| | HRS-316-050 | Rivet (part of 42-247) | 1 |
| | HB-38-16-100 | Bolt $\frac{3}{8} - 16 \times 1$ | 2 |
| | HNFL-38-16 | Flange Whiz Lock Nut $\frac{3}{8} - 16$ | 2 |
| 25 | HP-18-100 | Cotter Pin $\frac{1}{8} \times 1$ | 1 |
| 26 | 42-312 | Bottom Centering Arm | 1 |
| | 18-234 | Bushing (part of 42-312) | 1 |
| 27 | 42-311 | Top Centering Arm | 1 |
| | 18-234 | Bushing (part of 42-311) | 1 |
| NS | 42-344 | Belt | 1 |


(Continued on next page)

PUMP AND ENGINE DRAWING

Parts

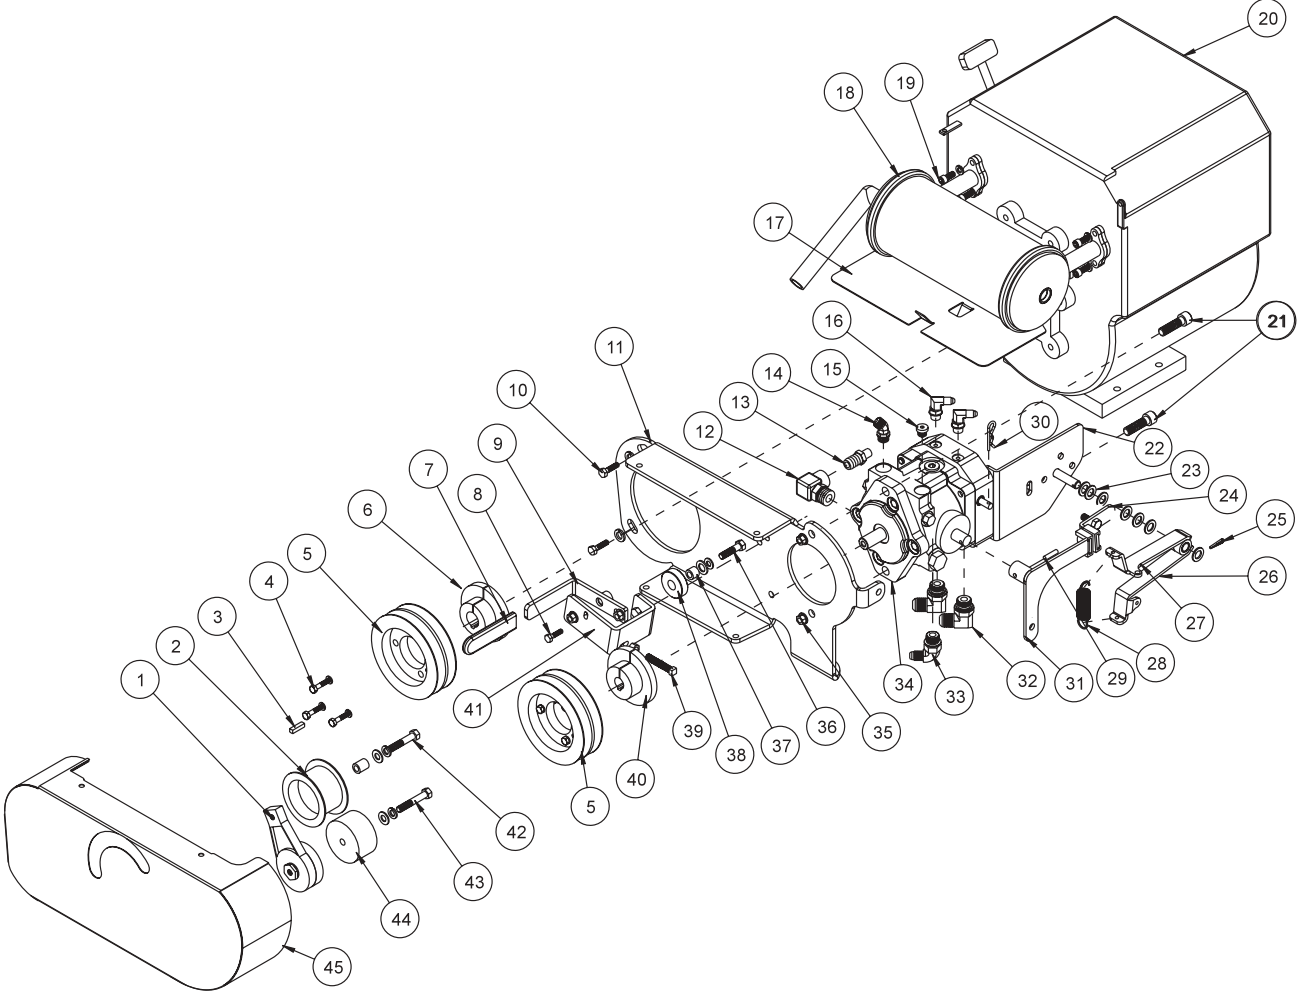


BELT ROUTING
BELT ROUTING

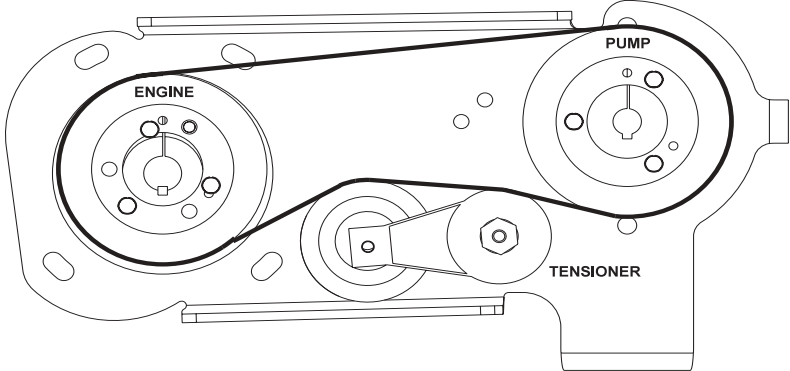

PUMP AND ENGINE PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|----------------|---|----------|
| 28 | 11-050 | Extension Spring | 1 |
| 29 | HRP-14-100 | Roll Pin $\frac{1}{4}$ x 1 | 1 |
| 30 | HHP-18 | Bridge Pin $\frac{1}{8}$ | 1 |
| 31 | 42-308 | Swash Arm | 1 |
| | 8946-1 | Wear Strip (part of 42-308) | 1 |
| | HRS-316-050 | Rivet (part of 42-308) | 1 |
| 32 | 18-174 | Elbow 90° | 2 |
| 33 | 18-185 | Elbow | 1 |
| 34 | 34-109 | Variable Pump | 1 |
| 35 | HNTL-12-13 | Lock Nut $\frac{1}{2}$ - 13 | 2 |
| 36 | HB-38-16-125 | Bolt $\frac{3}{8}$ - 16 x $1\frac{1}{4}$ | 1 |
| | HMB-12-14 | Machine Bushing $\frac{1}{2}$ x 14GA | 1 |
| | HW-38 | Washer $\frac{3}{8}$ | 1 |
| | HNFL-38-16 | Flange Whiz Lock Nut $\frac{3}{8}$ - 16 | 1 |
| 37 | 18-270 | Oilite Bushing | 1 |
| 38 | 14-266 | Bearing | 1 |
| 39 | HSSQ-38-16-200 | Socket Head Square Screw $\frac{3}{8}$ - 16 x 2 | 1 |
| | HN-38-16 | Nut $\frac{3}{8}$ - 16 | 2 |
| 40 | 42-246 | Hub $\frac{3}{4}$ | 1 |
| | HWK-316-075 | Woodruff Key | 1 |
| 41 | 42-334 | Latch Bracket | 1 |
| | HB-38-16-125 | Bolt $\frac{3}{8}$ - 16 x $1\frac{1}{4}$ | 2 |
| | HNTL-38-16 | Top Lock Nut $\frac{3}{8}$ - 16 | 2 |
| 42 | HB-38-16-200 | Bolt $\frac{3}{8}$ - 16 x 2 | 1 |
| | HW-38 | Washer $\frac{3}{8}$ | 1 |
| | HWL-3/8 | Lockwasher $\frac{3}{8}$ | 1 |
| 43 | HB-38-16-275 | Bolt $\frac{3}{8}$ - 16 x $2\frac{3}{4}$ | 1 |
| | HW-38 | Washer $\frac{3}{8}$ | 1 |
| | HWL-3/8 | Lockwasher $\frac{3}{8}$ | 1 |
| 44 | 42-329 | Spacer | 1 |
| 45 | 42-337 | Belt Guard | 1 |
| NS | 42-344 | Belt | 1 |

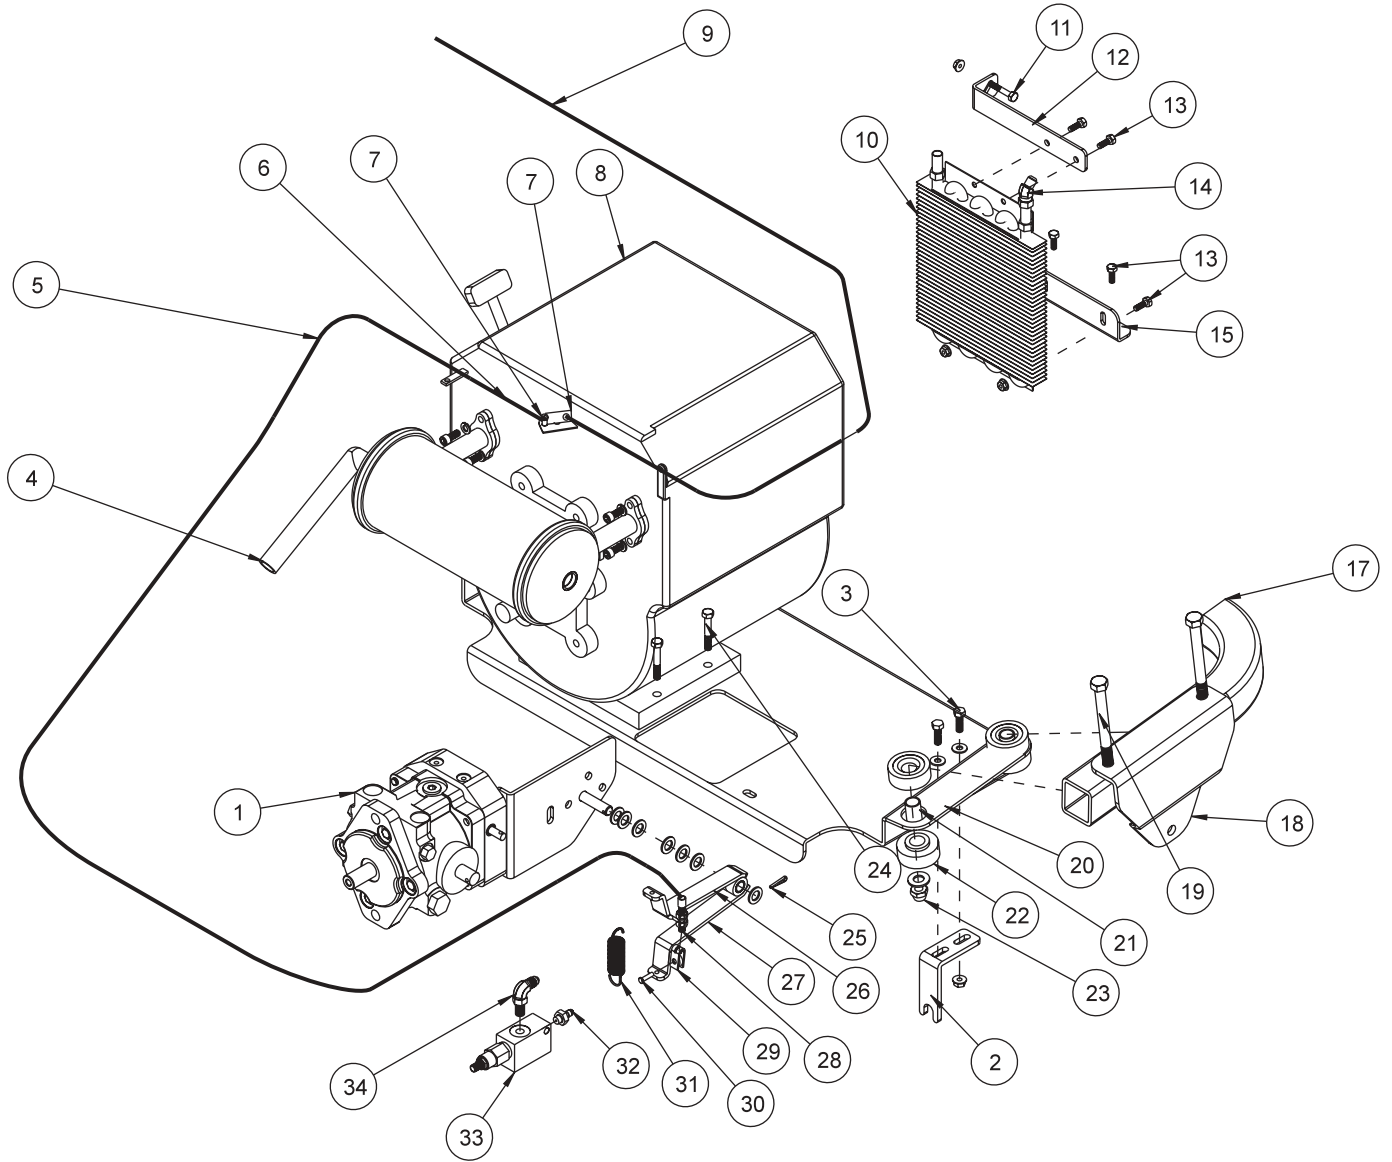


ENGINE PARTS LIST

| REF # | PART # | DESCRIPTION | QUANTITY |
|-------|---------------|---|----------|
| 1 | 34-109 | Variable Pump | 1 |
| 2 | 42-307 | Cable Bracket | 1 |
| 3 | HB-516-18-100 | Bolt $\frac{5}{16}$ - 18 x 1 | 2 |
| | HW-516 | Washer $\frac{5}{16}$ | 2 |
| | HNTL-516-18 | Lock Nut $\frac{5}{16}$ - 18 | 2 |
| 4 | 27-123 | Muffler | 1 |
| 5 | 17-152 | Conduit | 1 |
| 6 | 17-151 | Cable | 1 |
| 7 | 21-161 | Wire Block | 4 |
| 8 | 43-024 | Engine B&S 18 hp (3 wheel drive) | 1 |
| | 15-165 | Engine B&S 16 hp (2 wheel drive) | 1 |
| 9 | 42-789 | Throttle (hand) | 1 |
| 10 | 42-265 | Aluminum Oil Cooler | 1 |
| 11 | HB-14-20-150 | Bolt $\frac{1}{4}$ - 20 x $1\frac{1}{2}$ | 1 |
| | HNFL-14-20 | Flange Whiz Lock Nut $\frac{1}{4}$ -20 | 1 |
| 12 | 42-771 | Top Cooler Bracket | 1 |
| 13 | HB-14-20-075 | Bolt $\frac{1}{4}$ - 20 x $\frac{3}{4}$ | 4 |
| | HNFL-14-20 | Flange Whiz Lock Nut $\frac{1}{4}$ - 20 | 4 |
| 14 | 18-214 | Elbow 45° | 1 |
| 15 | 42-275 | Bottom Cooler Bracket | 1 |
| 17 | | Main Frame | |
| 18 | 42-015 | Attachment Mount | 2 |
| 19 | HB-12-13-500 | Bolt $\frac{1}{2}$ -13 x 5 | 4 |
| 20 | 42-269 | Engine Plate | 1 |
| 21 | 60-168 | Spacer | 4 |
| 22 | 60-107 | Rubber Bushing | 8 |
| 23 | HNTL-12-13 | Lock Nut $\frac{1}{2}$ - 13 | 4 |
| | HW-12 | Washer $\frac{1}{2}$ | 4 |
| 24 | HB-516-18-225 | Bolt $\frac{5}{16}$ - 18 x $2\frac{1}{4}$ | 4 |
| | HNFL-516-18 | Flange Whiz Lock Nut $\frac{5}{16}$ - 18 | 4 |
| 25 | HP-18-100 | Cotter Pin $\frac{1}{8}$ x 1 | 1 |
| | HMB-12-14 | Machine Bushing $\frac{1}{2}$ x 14 GA | 7 |
| 26 | 42-311 | Top Centering Arm | 1 |
| | 18-234 | Bushing (part of 42-311) | 1 |
| 27 | 42-312 | Bottom Centering Arm | 1 |
| | 18-234 | Bushing (part of 42-312) | 1 |
| 28 | 17-155 | Retainer | 1 |
| | HN-516-24 | Nut $\frac{5}{16}$ - 24 | 2 |
| 29 | 17-153 | Clevis | 1 |
| 30 | HCP-14-075 | Clevis Pin $\frac{1}{4}$ x $\frac{3}{4}$ | 1 |
| | HP-332-075 | Cotter Pin $\frac{3}{32}$ x $\frac{3}{4}$ | 1 |
| 31 | 11-050 | Extension Spring | 1 |
| 32 | 18-169 | Adapter | 1 |
| 33 | 42-192 | Relief Valve | 1 |
| 34 | 18-168 | Elbow | 1 |



REAR AXLE DRAWING

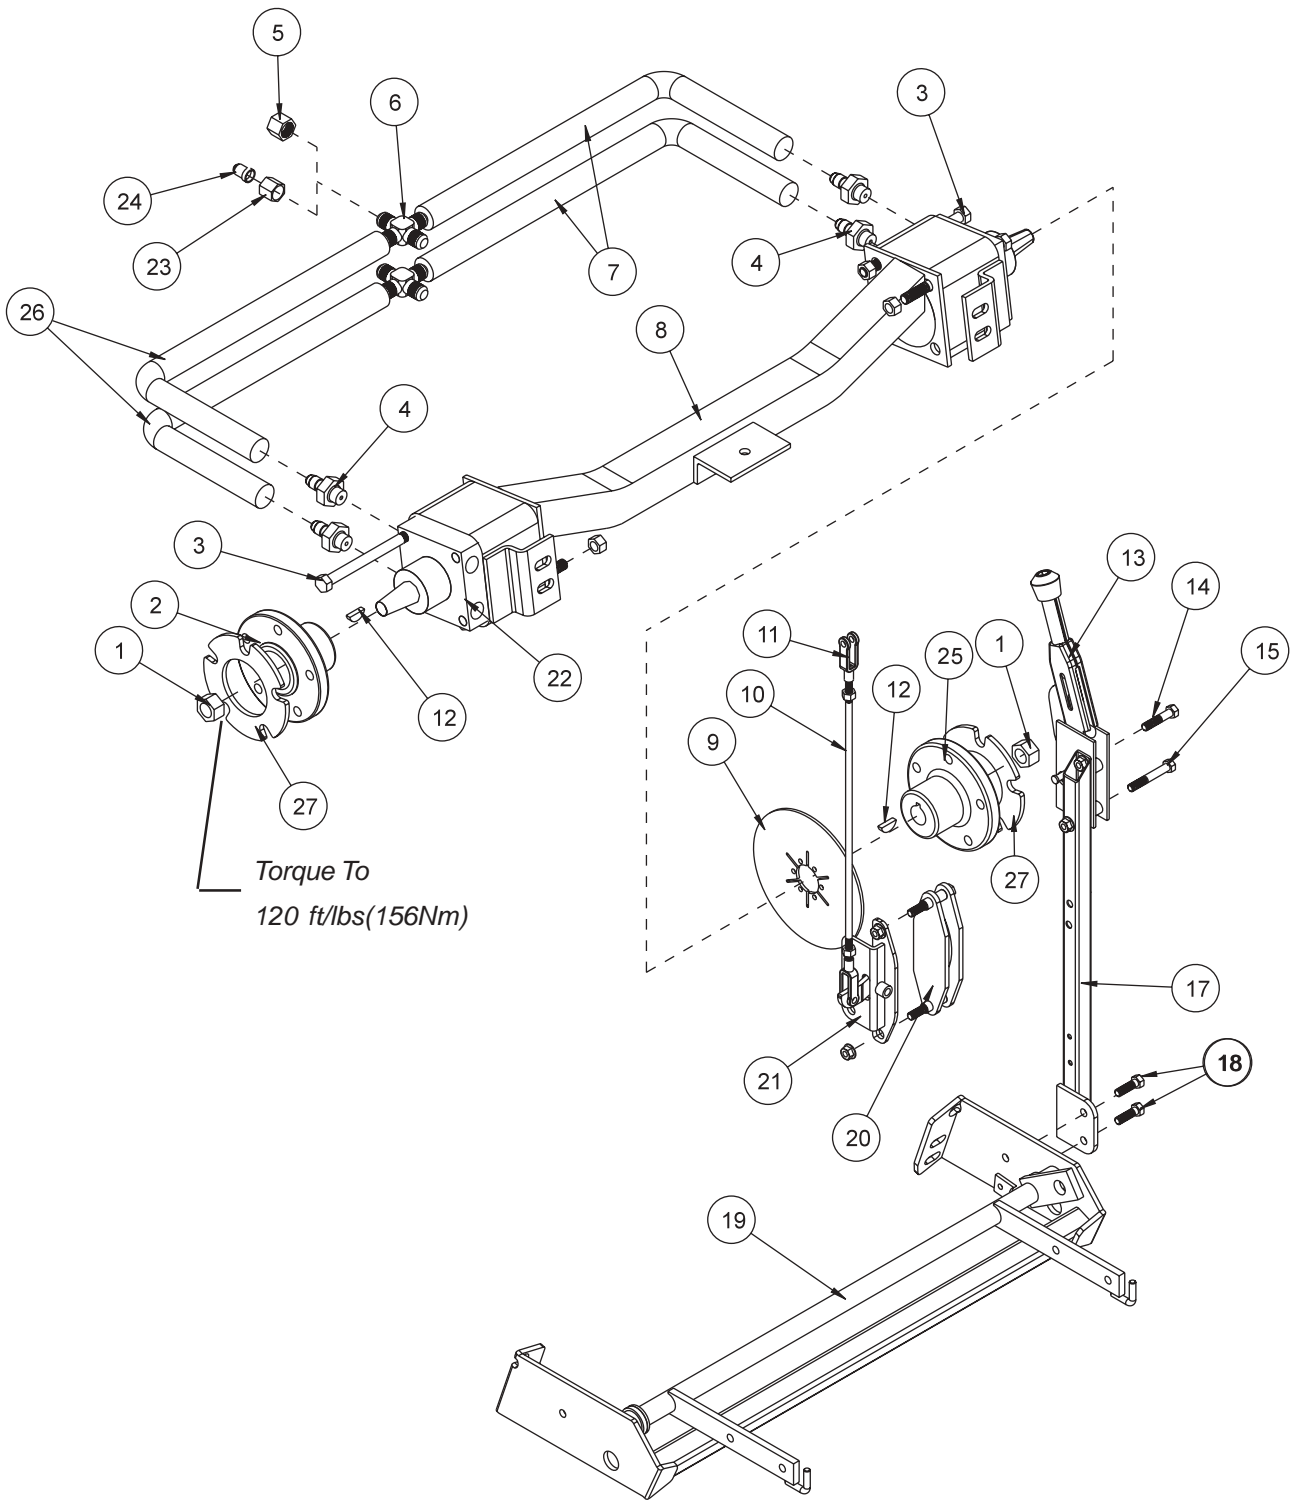


Parts

REAR AXLE PARTSLIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------------|---|----------|
| 1 | 42-002-12 | Nut $\frac{3}{4}$ - 16 (part of 42-002) | 2 |
| 2 | 42-007 | Hub | 1 |
| 3 | HB-12-13-650 | Bolt $\frac{1}{2}$ - 13 x $6\frac{1}{2}$ | 8 |
| | HNTL-12-13 | Top Lock Nut $\frac{1}{2}$ - 13 | 8 |
| 4 | 18-343 | Adapters | 4 |
| 5 | 18-344 | Caps (2WD ONLY) | 2 |
| 6 | 18-342 | Cross | 2 |
| 7 | 42-261 | $\frac{1}{2}$ " Hydraulic Tube x $27\frac{1}{2}$ " | 2 |
| 8 | 42-775 | Main Frame | 1 |
| 9 | 50-041 | Brake Disk | 1 |
| | 42-176 | Low Head Cap Screw $\frac{1}{4}$ - 20 x $\frac{3}{4}$ | 6 |
| 10 | 42-155 | Brake Rod | 1 |
| | HN-516-24 | Nut $\frac{5}{16}$ - 24 | 2 |
| 11 | 11-100 | Linkage Yoke | 2 |
| | HCP-516-100 | Clevis Pin $\frac{5}{16}$ x 1 | 2 |
| | HP-18-100 | Cotter Pin $\frac{1}{8}$ x 1 | 2 |
| 12 | HWK-14-100 | Woodruff Key $\frac{1}{4}$ x 1 (part of 42-002) | 2 |
| 13 | 60-106 | Brake Lever | 1 |
| 14 | HB-38-16-175 | Bolt $\frac{3}{8}$ - 16 x $1\frac{3}{4}$ | 1 |
| | HNFL-38-16 | Flange Whiz Lock Nut $\frac{3}{8}$ - 16 | 1 |
| 15 | HB-38-16-250 | Bolt $\frac{3}{8}$ - 16 x $2\frac{1}{2}$ | 1 |
| | HNFL-38-16 | Flange Whiz Lock Nut $\frac{3}{8}$ - 16 | 1 |
| 17 | 42-153 | Park Brake Bracket | 1 |
| 18 | HB-38-16-100 | Bolt $\frac{3}{8}$ -16 x 1 | 2 |
| | HNFL-38-16 | Flange Whiz Lock Nut $\frac{3}{8}$ - 16 | 2 |
| 19 | 42-024 | Rake Lift | 1 |
| 20 | 50-042 | Brake Caliper | 1 |
| 21 | 42-151 | Brake Bracket | 1 |
| 22 | 42-002 | Wheel Motor | 2 |
| 23 | 23-120 | $\frac{1}{2}$ " Tube Nut (3WD only) | 2 |
| 24 | 34-128 | Reducer (3WD only) | 2 |
| 25 | 42-157 | Right-hand Hub | 1 |
| 26 | 42-304 | $\frac{1}{2}$ " Hydraulic Tube x 27" | 2 |
| 27 | 42-305 | Shim | 2 |



RAKELIFT DRAWING

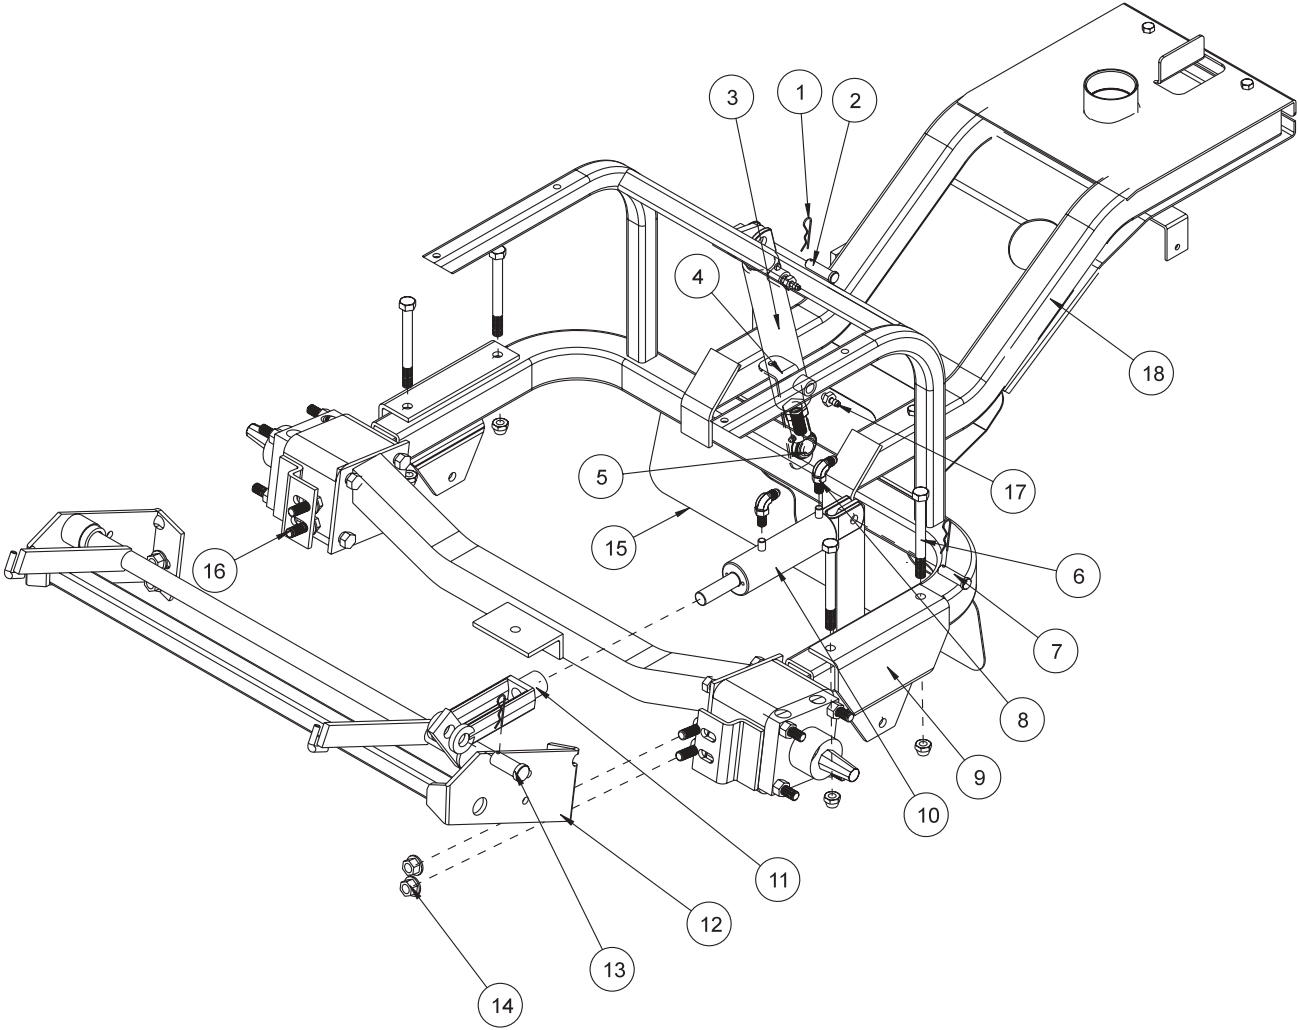


Parts

RAKE LIFT PARTSLIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------------|---|----------|
| 1 | HHP-18 | Bridge Pin $\frac{1}{8}$ | 3 |
| 2 | HCP-58-175 | Clevis Pin $\frac{5}{8}$ - $1\frac{3}{4}$ | 1 |
| 3 | 10-135 | Hydraulic Cylinder | 1 |
| | HNJ-58-18 | Jam Nut $\frac{5}{8}$ - 18 | 1 |
| 4 | 42-217 | Cylinder Mount | 1 |
| 5 | 18-154 | Rod End | 1 |
| | HG-14-28-180 | Grease Fitting $\frac{1}{4}$ - 28 x 180° | 1 |
| 6 | HB-12-13-500 | Bolt $\frac{1}{2}$ - 13 x 5 | 4 |
| | HNTL-12-13 | Top Lock Nut $\frac{1}{2}$ - 13 | 4 |
| 7 | HCP-12-150 | Clevis Pin $\frac{1}{2}$ - $1\frac{1}{2}$ | 1 |
| 8 | 18-168 | 90° Elbow | 2 |
| 9 | 42-015 | Attachment Mount | 2 |
| 10 | 13-357 | Hydraulic Cylinder | 1 |
| | HNJ-34-16 | Jam Nut $\frac{3}{4}$ - 16 | 1 |
| 11 | 42-040 | Yoke | 1 |
| 12 | 42-024 | Rake Lift | 1 |
| 13 | HCP-34-200 | Clevis Pin $\frac{3}{4}$ x 2 | 1 |
| 14 | HNFL-12-13 | Flange Whiz Lock Nut $\frac{1}{2}$ - 13 | 4 |
| | HW-12 | Washer $\frac{1}{2}$ | 4 |
| 15 | 42-590 | Mud Guard | 1 |
| 16 | HB-12-13-150 | Bolt $\frac{1}{2}$ - 13 x $1\frac{1}{2}$ | 4 |
| 17 | 18-169 | Adapter | 2 |
| 18 | 42-775 | Main Frame | 1 |

13-729 2-BANK HYDRAULIC VALVE DRAWING

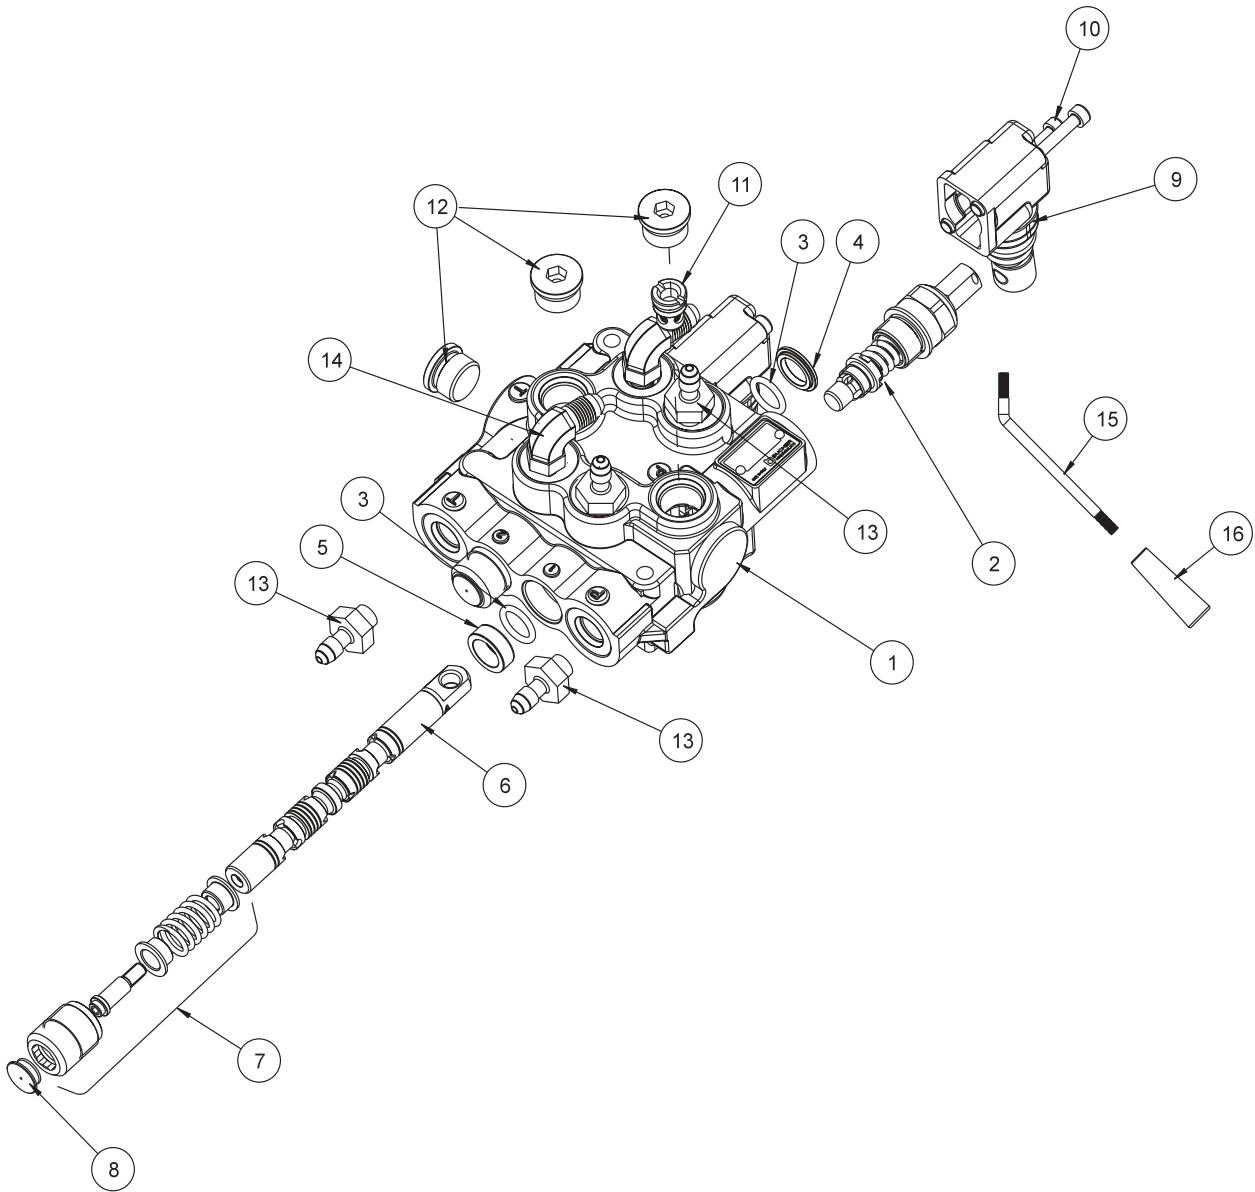


Parts

13-729 2-BANK HYDRAULIC VALVE PARTSLIST

| REF # | PART # | DESCRIPTION | QUANTITY |
|-------------|-----------|---|----------|
| 1* | 78-415-01 | Body (complete with spacer and check valve) | 1 |
| 2* | 78-415-02 | Spool HDM10 | 1 |
| 3* | 78-415-03 | O-Ring Seal | 6 |
| 4* | 78-415-04 | Flanged Washer HDM10 | 3 |
| 5* | 78-415-05 | Spacer | 3 |
| 6* | 78-415-06 | A Type Spool HDS11 | 3 |
| 7* | 78-415-11 | Positioner | 2 |
| 8* | 78-415-08 | Plug | 3 |
| 9* | 78-415-09 | Lever Group HDS11 | 3 |
| 10* | 78-415-10 | Metric Socket Screw M5 x .8 x 45 | 6 |
| 11* | 78-415-12 | Check Valve Assembly HDM12 | 1 |
| 12* | 78-415-13 | ³ / ₄ - 16 SAE 8 Screw Plug | 3 |
| 13 | 18-166 | Adapter ¹ / ₄ - ³ / ₈ SAE | 4 |
| 14 | 18-168 | Elbow 3/8 Straight Thread | 2 |
| 15 | 78-418 | Bent Handle | 2 |
| 16 | | Tapered Knob | 3 |
| * 13-729 | | 2 – Bank Hydraulic Valve (includes all * items) | |

34-109 VARIABLE PUMP DRAWING

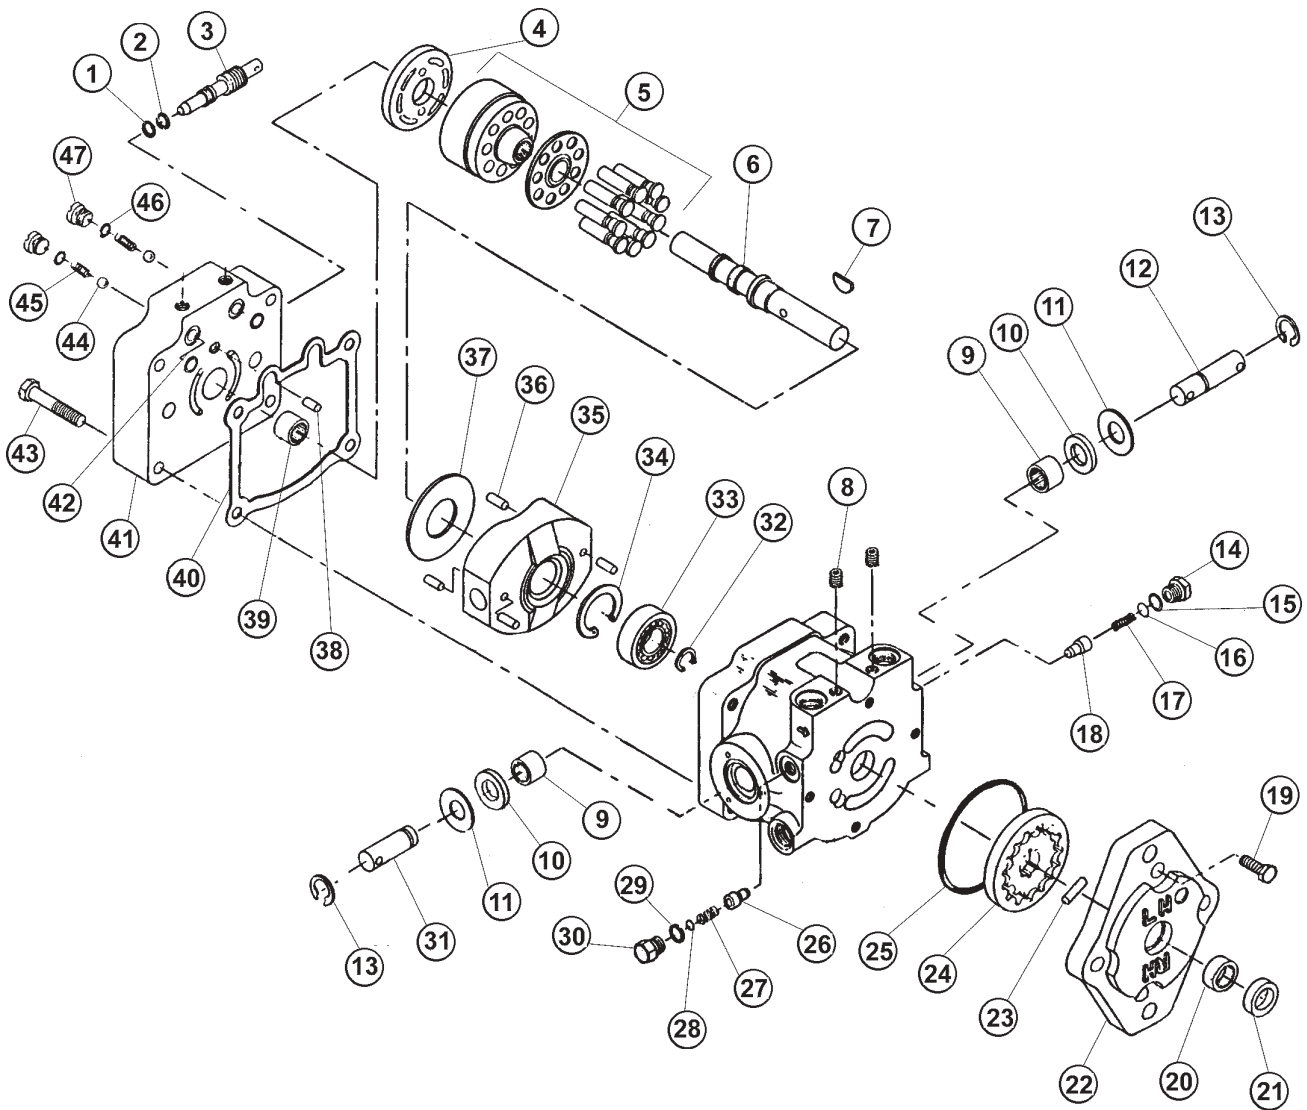


Parts

34-109 VARIABLE PUMP PARTS LIST

| REF # | PART # | DESCRIPTION | QUANTITY |
|-------|-----------|---|----------|
| 1 | 14-222 | O-Ring | 1 |
| 2 | 14-130 | Ring | 1 |
| 3 | 13-110-01 | By-Pass Valve | 1 |
| 4 | 34-109-01 | Valve Plate | 1 |
| 5† | | Cylinder Block | 1 |
| 6 | 14-084 | Pump Shaft with Bearing | 1 |
| 7 | 14-131 | Woodruff Key | 1 |
| 8 | 13-110-05 | Pipe Plug | 2 |
| 9 | 14-069 | Needle Bearing | 2 |
| 10* | 14-014 | Lip Seal | 2 |
| 11 | 14-113 | Washer | 2 |
| 12 | 14-220 | Truncated Shaft (long 2 holes) | 1 |
| 13 | 14-105 | Retaining Ring | 2 |
| 14 | 13-110-10 | Plug | 1 |
| 15* | | O-Ring | 1 |
| 16 | 14-235 | Shim Pack Kit | 1 |
| 17 | 14-263 | Release Valve Spring | 1 |
| 18 | 13-110-11 | Release Valve Cone | 1 |
| 19§ | 13-110-14 | Hex Head Screw | 4 |
| 20§ | 14-129 | Needle Bearing | 1 |
| 21*§ | 14-054 | Lip Seal | 1 |
| 22§ | 13-110-13 | Charge Pump Housing | 1 |
| 23§ | 14-135 | Straight Pin | 1 |
| 24§ | 14-136 | Gerotor Assembly | 1 |
| 25*§ | | O-Ring | 1 |
| 26 | 14-235 | Release Valve Cone | 1 |
| 27 | 14-234 | Check Release Valve Spring | 1 |
| 28 | 34-109-03 | Shim Pack Kit | 1 |
| 29* | | O-Ring | 1 |
| 30 | 13-110-10 | Plug | 1 |
| 31 | 14-212 | Truncated Shaft (short 1 hole) | 1 |
| 32 | 14-133 | Retaining Ring | 1 |
| 33 | 14-128 | Ball Bearing | 1 |
| 34 | 14-132 | Retaining Ring | 1 |
| 35 | 14-221 | Variable Swash Plate | 1 |
| 36 | 14-216 | Spring Pin | 3 |
| 37 | 14-114 | Thrust Plate | 1 |
| 38 | 14-215 | Pin | 1 |
| 39 | | Roller Bearing (comes with 14-084 Ref# 6) | 1 |
| 40* | 14-107 | Gasket | 1 |
| 41† | | Pump End Cap | 1 |
| 42* | | O-Ring | 2 |
| 43 | 13-110-04 | Hex Head Screw | 4 |
| 44▣ | 13-110-09 | Ball | 2 |
| 45▣ | 13-110-08 | Check Valve Spring | 2 |
| 46*▣ | | O-Ring | 2 |
| 47▣ | 13-110-07 | Check Valve Plug | 2 |

- * 14-098 Seal Kit 1
- † Parts are not available. Replace with new unit.
- § 13-110-15 Charge Pump 1
- ▣ 13-110-16 Check Valve Kit 2


42-039 FRONT WHEEL MOTOR (4.0 C.I.) DRAWING

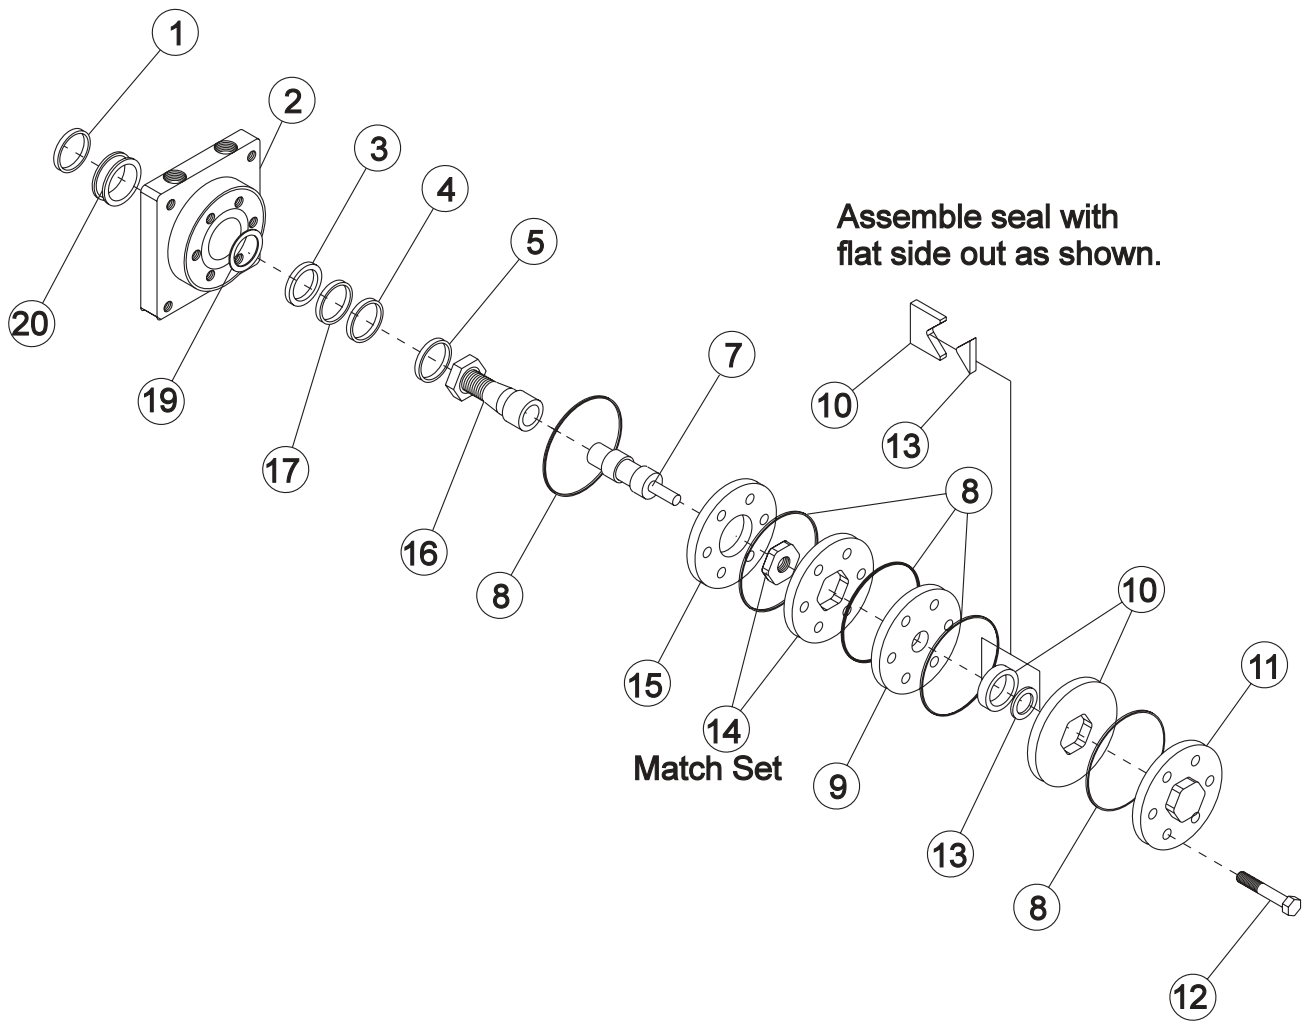

42-039 FRONT WHEEL MOTOR (4.0 C.I.) PARTSLIST

| REF # | PART # | DESCRIPTION | QUANTITY |
|-------|------------|------------------------------------|----------|
| 1* | | Water & Dirt Seal | 1 |
| 2 | 42-002-01 | Service Housing Assembly | 1 |
| 4 | 42-002-02 | Thrust Bearing | 1 |
| 5 | 42-002-03 | Inner Bearing | 1 |
| 7 | 42-039-01 | Drive Link | 1 |
| 8* | | Ring Seal | 5 |
| 9 | 42-002-05 | Manifold | 1 |
| 10 | 42-002-06 | Commutator Assembly (matched set) | 1 |
| 11 | 42-002-07 | End Cap | 1 |
| 12 | 42-039-02 | Bolt | 5 |
| 13* | | Commutator Seal (matches with #10) | 1 |
| 14 | 42-039-03 | Rotor Set (matched set) | 1 |
| 15 | 42-002-10 | Wear Plate | 1 |
| 16 | 42-002-11 | Coupling Shaft | 1 |
| | HWK-14-100 | Woodruff Key 1/4 x 1 | 1 |
| | 42-002-12 | Nut 3/4 - 16 | 1 |
| 17 | 42-002-13 | Thrust Washer | 1 |
| 19* | | Backup Ring | 1 |
| 20 | 42-002-14 | Outer Bearing | 1 |
| * | 42-002-15 | Seal Kit | 1 |



42-002 REAR WHEEL MOTOR (8.0 C.I.) DRAWING

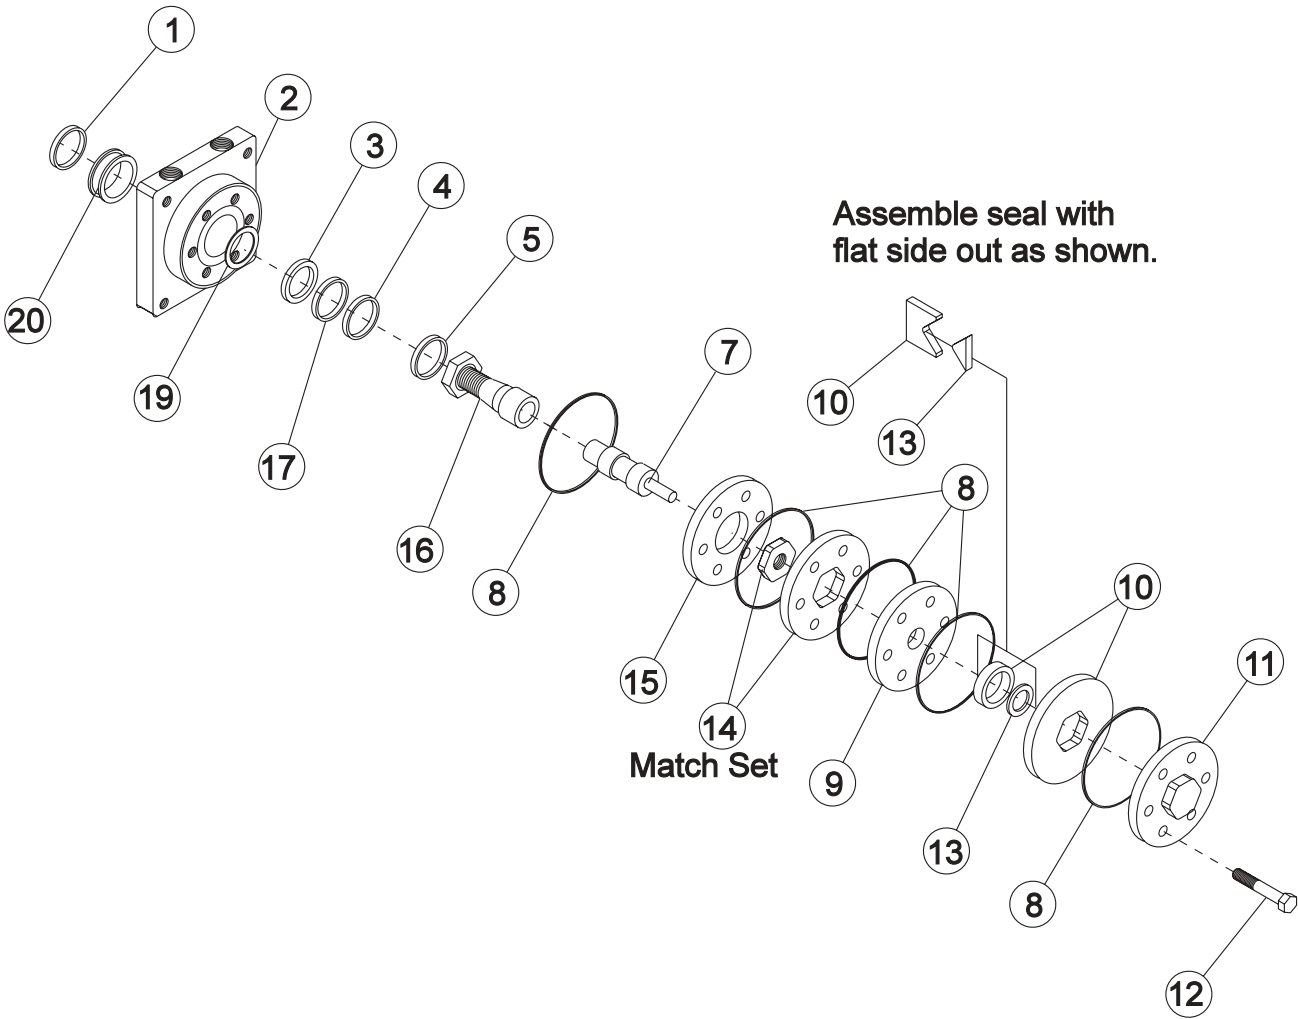

42-002 REAR WHEEL MOTOR (8.0 C.I.) PARTSLIST

| REF # | PART # | DESCRIPTION | QUANTITY |
|-------|------------|------------------------------------|----------|
| 1* | | Water & Dirt Seal | 1 |
| 2 | 42-002-01 | Service Housing Assembly | 1 |
| 4 | 42-002-02 | Thrust Bearing | 1 |
| 5 | 42-002-03 | Inner Bearing | 1 |
| 7 | 42-002-04 | Drive Link | 1 |
| 8* | | Ring Seal | 5 |
| 9 | 42-002-05 | Manifold | 1 |
| 10 | 42-002-06 | Commutator Assembly (matched set) | 1 |
| 11 | 42-002-07 | End Cap | 1 |
| 12 | 42-002-08 | Bolt | 5 |
| 13* | | Commutator Seal (matches with #10) | 1 |
| 14 | 42-002-09 | Rotor Set (matched set) | 1 |
| 15 | 42-002-10 | Wear Plate | 1 |
| 16 | 42-002-11 | Coupling Shaft | 1 |
| | HWK-14-100 | Woodruff Key 1/4 x 1 | 1 |
| | 42-002-12 | Nut 3/4 - 16 | 1 |
| 17 | 42-002-13 | Thrust Washer | 1 |
| 19* | | Backup Ring | 1 |
| 20 | 42-002-14 | Outer Bearing | 1 |
| * | 42-002-15 | Seal Kit | 1 |

42-302 ELECTRIC ON - OFF VALVE DRAWING

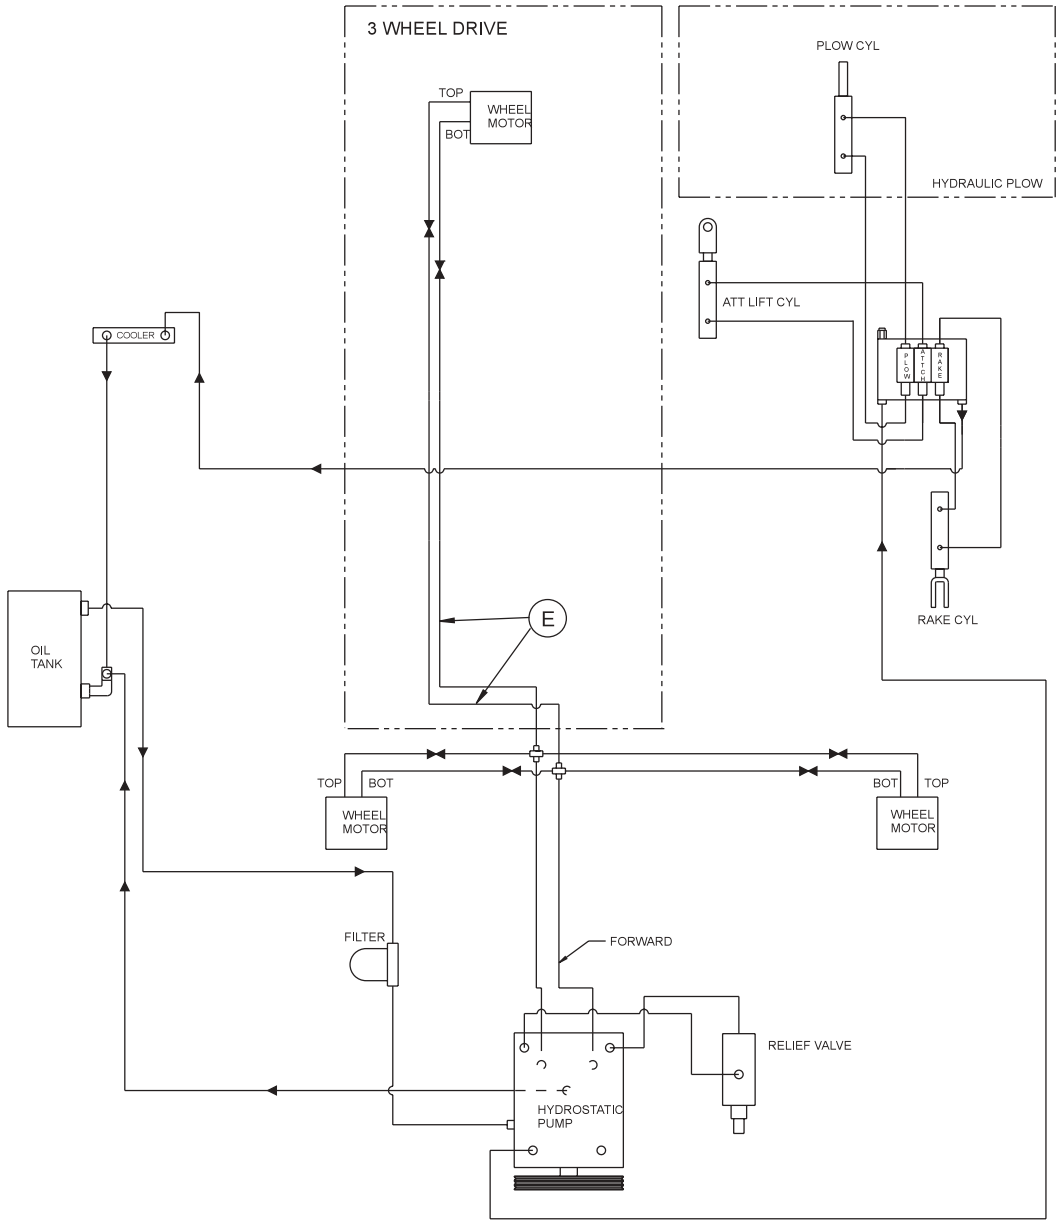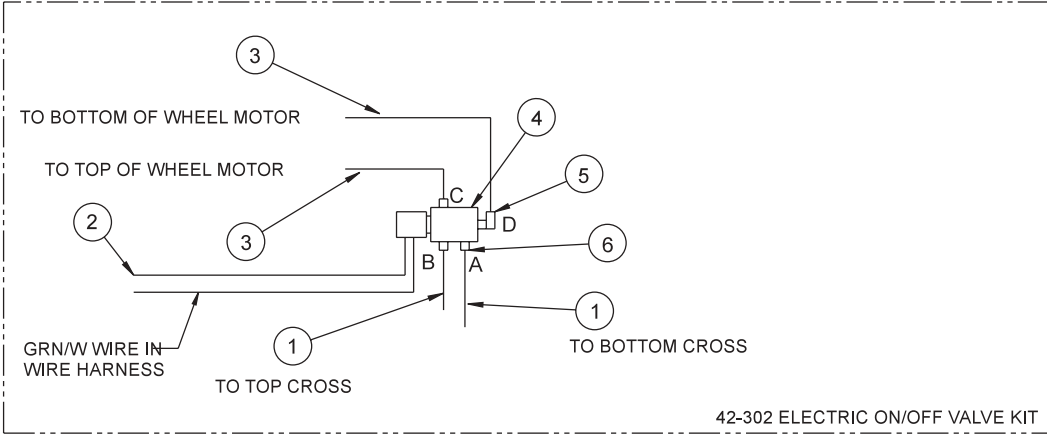

Accessories


42-302 ELECTRIC ON - OFF VALVE PARTS LIST

| REF # | PART # | DESCRIPTION | QUANTITY |
|-------|--------------|-------------------------------|----------|
| 1 | 42-263 | Hydraulic Hose | 2 |
| 2 | 76-260 | Wire, Ground | 1 |
| 3 | 42-264 | Hydraulic Hose | 2 |
| 4 | 42-118 | Electric On/Off Valve | 1 |
| | HB-14-20-200 | Bolt 1/4 - 20 x 2 | 2 |
| | HNFL-14-20 | Flange Whiz Lock Nut 1/4 - 20 | 2 |
| 5 | 18-185 | Elbow 90° | 1 |
| 6 | 18-341 | Elbow 45° | 3 |

INSTALLATION INSTRUCTIONS

1. Shut off machine and let engine cool. Remove key, disconnect negative (-) battery cable and pull spark plug wires..
2. Assemble the fittings into the electric on/off valve. With valve lying on bench with solenoid to the left, install the three 45° elbows (Ref 6) in the two ports closest to you and one port furthest from you. Install the one 90° elbow (Ref 5) in the right hand port.
3. Install two 42-264 hydraulic hoses (Ref 3) on C and D. Tighten.
4. Install two 42-263 hydraulic hoses (Ref 1) on A and B. Be sure straight end of hose is on the valve with the fitting going backward. Tighten.
5. Remove mud guard and place a drain pan under the cross fittings that the hoses from the front wheel motor go to.
6. Disconnect the two hoses going to the front wheel motor at the cross, then at the front wheel motor and remove.
7. Remove the cover plate from the fiber glass.
8. Feed two 42-264 hydraulic hoses (Ref 3) up through bearing plate, through the 3" hole, and out to the front fork. Connect to the front wheel motor with the hose from D to the bottom of the wheel motor and C to the top.
9. Bolt valve to bearing plate with solenoid to your left side. Use the 1/4 -20 x 2 bolt and flange whiz lock nut. Be sure to fasten the ground wire on one of the mounting bolts and the other end on one terminal of the solenoid valve.
10. Connect the two 42-263 hydraulic hoses (Ref 1) from the valve to the cross with the hose from A to the bottom cross and B to the top cross.
11. Install toggle switch on control panel. Uncoil green and white stripe wire from frame and hook on end to the toggle switch and the other end to the terminal on electric on/off valve. Install the loose end of the blue/white wire to the toggle switch.
12. Route hose and secure with 22-069 nylon ties. Reinstall mud guard.
13. Reconnect the negative (-) ground battery cable to battery and spark plug wires.
14. Make sure that everything is clear of the machine. Start the machine, test on/off valve for proper operation.
15. Check for hydraulic leaks.
16. Shut off machine, double check all fastener and fittings, be sure they are tight.
17. Reinstall cover plate.
18. Check hydraulic fluid, level should be 2 to 2 1/2 inches below the top of the tank when cold. Add if necessary.

42-302 ELECTRIC ON - OFF VALVE WIRING

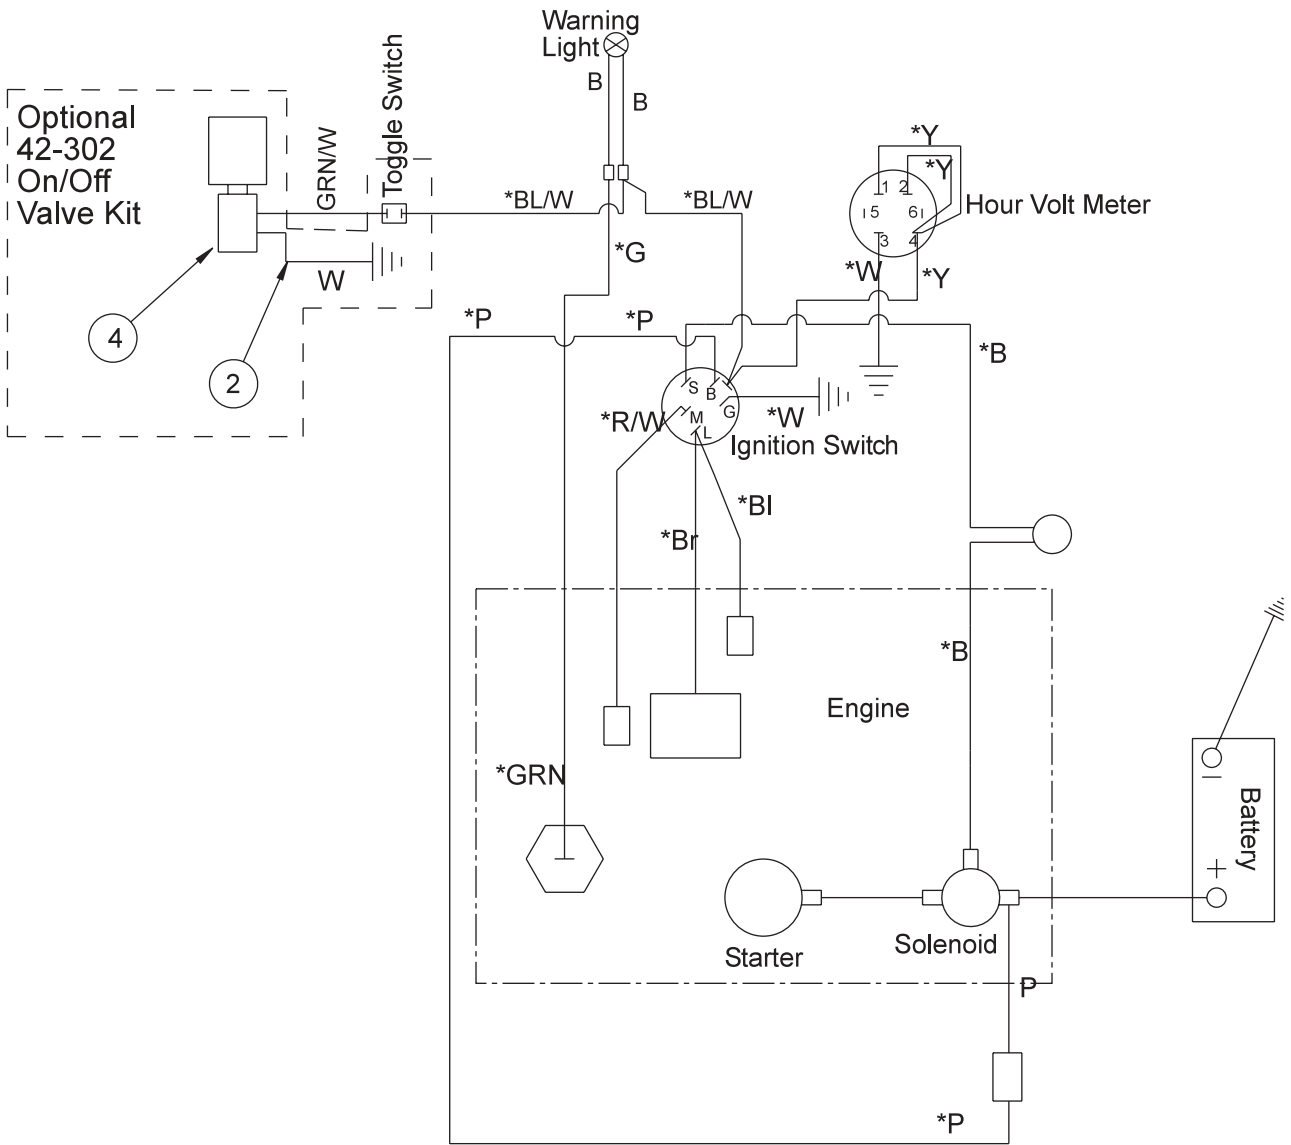

Accessories

42-302 ELECTRIC ON - OFF VALVE PARTS LIST


| REF # | PART # | DESCRIPTION | QUANTITY |
|-------|--------------|-------------------------------|----------|
| 1 | 42-263 | Hydraulic Hose | 2 |
| 2 | 76-260 | Wire, Ground | 1 |
| 3 | 42-264 | Hydraulic Hose | 2 |
| 4 | 42-118 | Electric On/Off Valve | 1 |
| | HB-14-20-200 | Bolt 1/4 - 20 x 2 | 2 |
| | HNFL-14-20 | Flange Whiz Lock Nut 1/4 - 20 | 2 |
| 5 | 18-185 | Elbow 90° | 1 |
| 6 | 18-341 | Elbow 45° | 3 |

INSTALLATION INSTRUCTIONS

1. Shut off machine and let engine cool. Remove key, disconnect negative (-) battery cable and pull spark plug wires..
2. Assemble the fittings into the electric on/off valve. With valve lying on bench with solenoid to the left, install the three 45° elbows (Ref 6) in the two ports closest to you and one port furthest from you. Install the one 90° elbow (Ref 5) in the right hand port.
3. Install two 42-264 hydraulic hoses (Ref 3) on C and D. Tighten.
4. Install two 42-263 hydraulic hoses (Ref 1) on A and B. Be sure straight end of hose is on the valve with the fitting going backward. Tighten.
5. Remove mud guard and place a drain pan under the cross fittings that the hoses from the front wheel motor go to.
6. Disconnect the two hoses going to the front wheel motor at the cross, then at the front wheel motor and remove.
7. Remove the cover plate from the fiber glass.
8. Feed two 42-264 hydraulic hoses (Ref 3) up through bearing plate, through the 3" hole, and out to the front fork. Connect to the front wheel motor with the hose from D to the bottom of the wheel motor and C to the top.
9. Bolt valve to bearing plate with solenoid to your left side. Use the 1/4-20 x 2 bolt and flange whiz lock nut. Be sure to fasten the ground wire on one of the mounting bolts and the other end on one terminal of the solenoid valve.
10. Connect the two 42-263 hydraulic hoses (Ref 1) from the valve to the cross with the hose from A to the bottom cross and B to the top cross.
11. Install toggle switch on control panel. Uncoil green and white stripe wire from frame and hook on end to the toggle switch and the other end to the terminal on electric on/off valve. Install the loose end of the blue/white wire to the toggle switch.
12. Route hose and secure with 22-069 nylon ties. Reinstall mud guard.
13. Reconnect the negative (-) ground battery cable to battery and spark plug wires.
14. Make sure that everything is clear of the machine. Start the machine, test on/off valve for proper operation.
15. Check for hydraulic leaks.
16. Shut off machine, double check all fastener and fittings, be sure they are tight.
17. Reinstall cover plate.
18. Check hydraulic fluid, level should be 2 to 2 1/2 inches below the top of the tank when cold. Add if necessary.



13-731 SINGLE BANK HYDRAULIC VALVE DRAWING

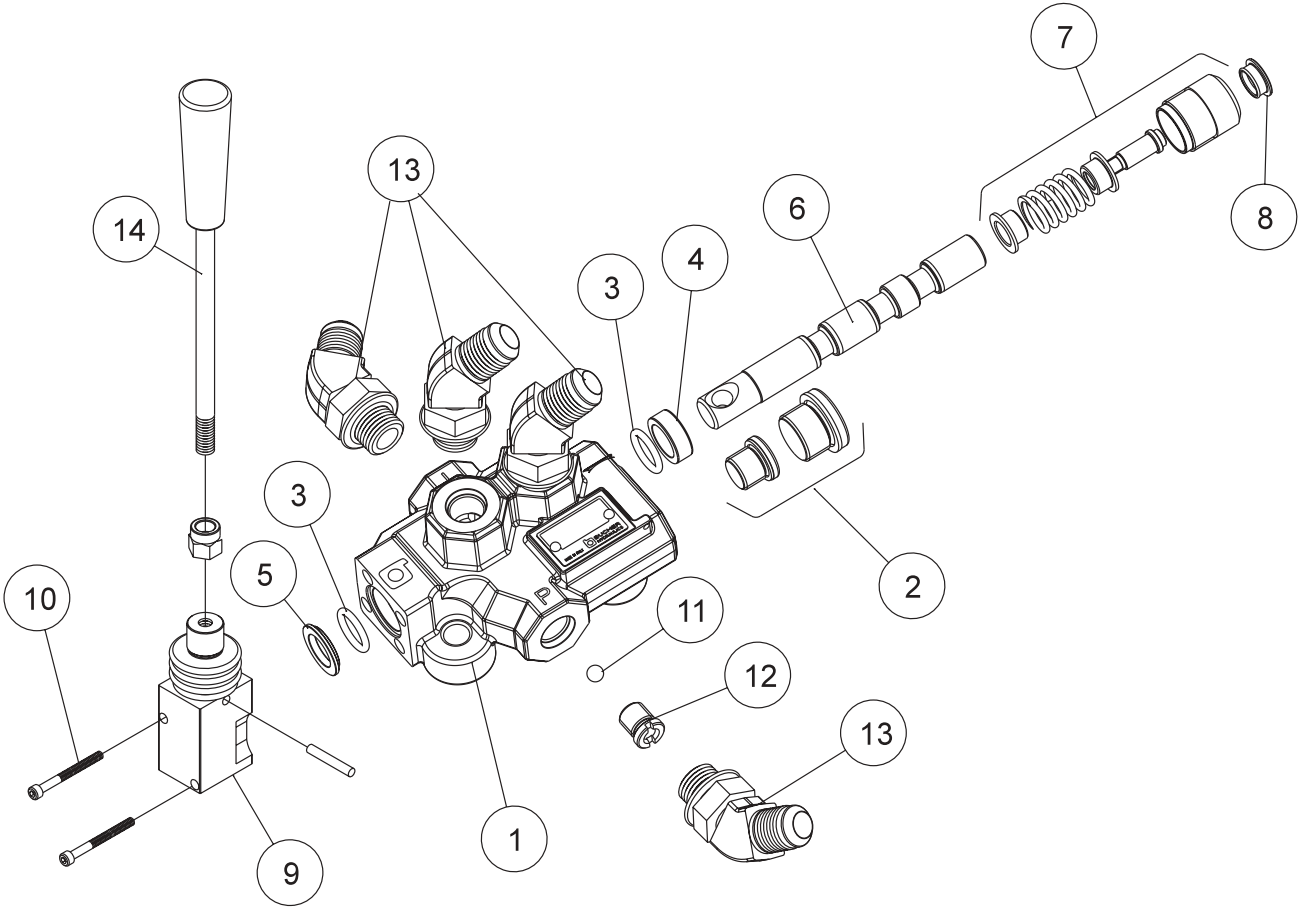


Accessories


13-731 SINGLE BANK HYDRAULIC VALVE PARTSLIST

| REF # | PART # | DESCRIPTION | QUANTITY |
|--------|---------------------|---|------------|
| 1* | 13-731-01 | Actuator Housing Assembly | 1 |
| 2* | 13-731-02 | Valve Plug | 1 |
| 3*† | 78-415-03 | O-Ring Seal | 2 |
| 4*† | 78-415-05 | Spacer | 3 |
| 5* | 78-415-04 | Flanged Washer HDM10 | 3 |
| 6* | 13-731-03 | Spool | 1 |
| 7* | 78-415-11 | Positioner | 1 |
| 8* | 78-415-08 | Plug | 3 |
| 9* | 78-415-09 | Lever Group HDS11 | 3 |
| 10* | 78-415-10 | Metric Socket Screw M5 x .8 x 45 | 2 |
| 11* | 13-731-04 | 1/4" Ball | 1 |
| 12*† | 13-731-05 | Check Valve | 1 |
| 13 | 18-188 | 45° ELbow | 4 |
| 14 | 78-417 | Straight Handle | 1 |
| * † | 13-731 13-731-01 | Single Bank Hydraulic Valve (includes all * items) Actuator Housing Assembly | 1 per Bank |

43-003 HYDRAULIC SAND FLOW DRAWING

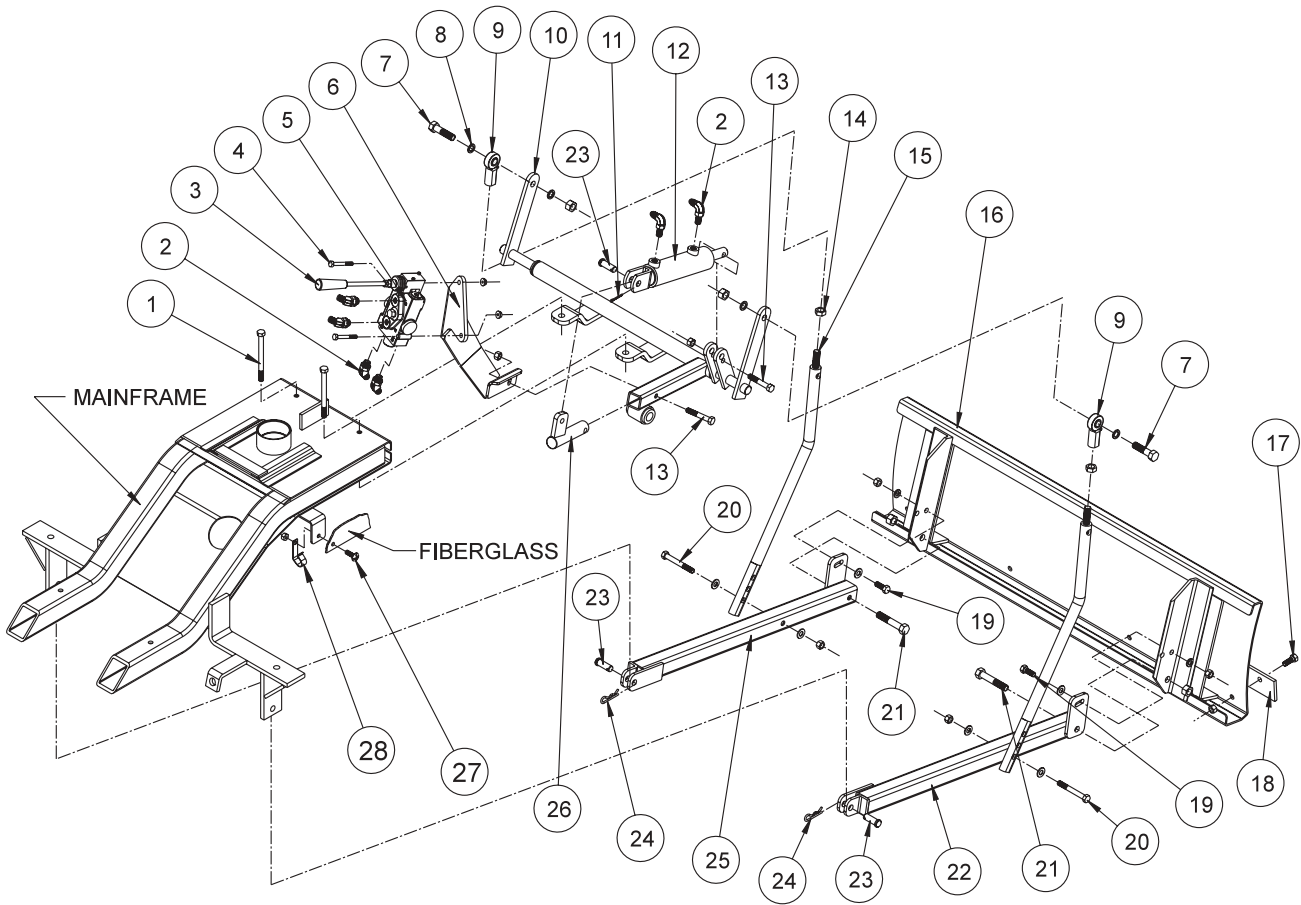

HYDRAULIC VALVE PLUMBING DRAWING

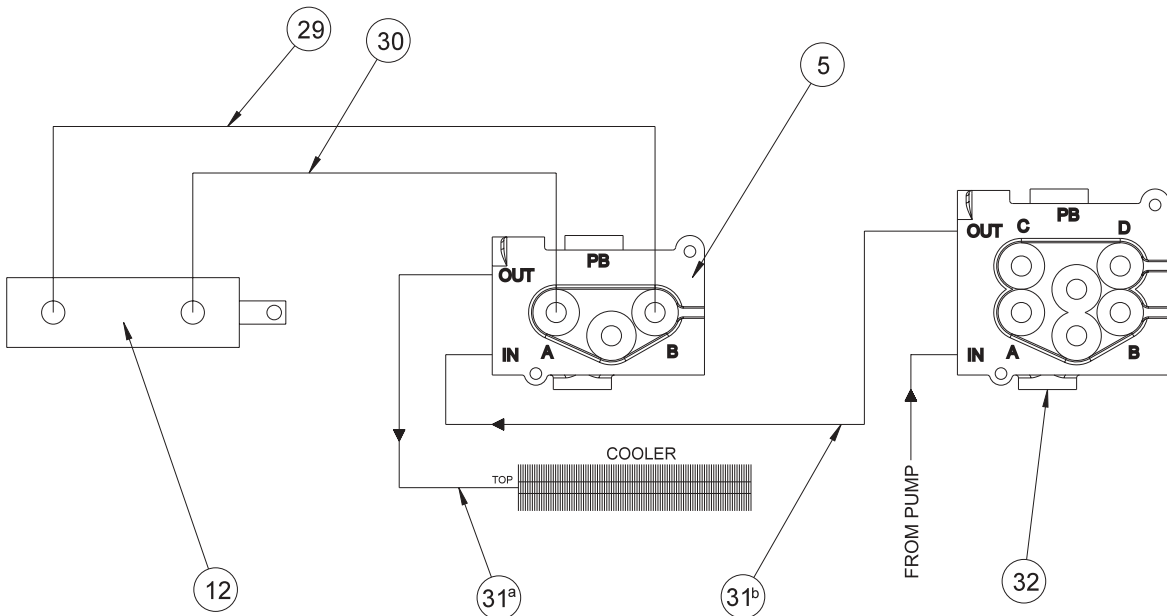


Accessories


43-003 HYDRAULIC SAND PLOW PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|-----------------------|-----------------|---|----------|
| 1 | HB-38-16-350 | Bolt, $\frac{3}{8}$ - 16 x $3\frac{1}{2}$ (Part of machine) | 2 |
| | HW-38 | Washer, $\frac{3}{8}$ | 2 |
| | HNTL-38-16 | Lock Nut, $\frac{3}{8}$ - 16 | 2 |
| 2 | 18-188 | 45° Elbow | 6 |
| 3 | 42-225 | Straight Handle Kit | 1 |
| 4 | HB-14-20-200 | Bolt, $\frac{1}{4}$ - 20x 2 | 2 |
| | HNFL-14-20 | Flange Whiz-Lock Nut, $\frac{1}{4}$ - 20 | 2 |
| 5 | 43-046 | Single Bank Hydraulic Valve | 1 |
| 6 | 43-050 | Valve Mount | 1 |
| 7 | HB-12-13-200 | Bolt, $\frac{1}{2}$ - 13 x 2 | 2 |
| | HNTL-12-13 | Lock Nut, $\frac{1}{2}$ - 13 | 2 |
| 8 | HMB-12-14 | Machine Bushing, $\frac{1}{2}$ x 14GA | 4 |
| 9 | 80-006 | Rod End | 2 |
| 10 | 42-346 | Lift Assembly | 1 |
| 11 | HP-18-100 | Cotter Pin, $\frac{1}{8}$ x 1 | 1 |
| 12 | 13-292 | Hydraulic Cylinder | 1 |
| 13 | HB-38-16-200 | Bolt, $\frac{3}{8}$ - 16 x 2 | 2 |
| | HNTL-38-16 | Lock Nut, $\frac{3}{8}$ - 16 | 2 |
| 14 | HNJ-12-20 | Jam Nut, $\frac{1}{2}$ - 20 | 2 |
| 15 | 27-073 | Lift Rod | 2 |
| 16 | 27-017 | Aluminum Sand Plow Blade | 1 |
| 17 | HB-38-16-100 | Bolt, $\frac{3}{8}$ - 16 x 1 | 4 |
| | HNTL-38-16 | Lock Nut, $\frac{3}{8}$ - 16 | 4 |
| 18 | 13-167 | Wear Blade | 1 |
| 19 | HB-38-16-100 | Bolt, $\frac{3}{8}$ - 16 x 1 | 2 |
| | HW-38 | Washer, $\frac{3}{8}$ | 2 |
| | HWL-38 | Lockwasher, $\frac{3}{8}$ | 2 |
| | HN-38-16 | Nut, $\frac{3}{8}$ - 16 | 2 |
| 20 | HB-38-16-300 | Bolt, $\frac{3}{8}$ - 16 x 3 | 2 |
| | HW-38 | Washer, $\frac{3}{8}$ | 4 |
| | HNTL-38-16 | Lock Nut, $\frac{3}{8}$ - 16 | 2 |
| 21 | HB-12-13-300 | Bolt, $\frac{1}{2}$ - 13 x 3 | 2 |
| | HNTL-12-13 | Lock Nut, $\frac{1}{2}$ - 13 | 2 |
| 22 | 27-050 | Right Pusher Bar | 1 |
| 23 | HCP-12-150 | Clevis Pin, $\frac{1}{2}$ x $1\frac{1}{2}$ | 3 |
| 24 | HHP-18 | Bridge Pin, $\frac{1}{8}$ | 2 |
| 25 | 27-049 | Left Pusher Bar | 1 |
| 26 | 42-096 | Cylinder Lift | 1 |
| 27 | HSTP-516-18-100 | Machine Screw, $\frac{5}{16}$ - 18 x 1 (on machine) | 1 |
| 28 | HLC-A-58 | Loom Clamp | 1 |
| 29 | 43-049 | Hose, 18" | 1 |
| 30 | 43-048 | Hose, 20" | 1 |
| 31 ^{a&b} | 43-047 | Hose, 57 $\frac{1}{2}$ " | 2 |
| 32 | 42-220 | 2-Bank Valve (on machine) | |

43-003 HYDRAULIC SAND PLOW DRAWING

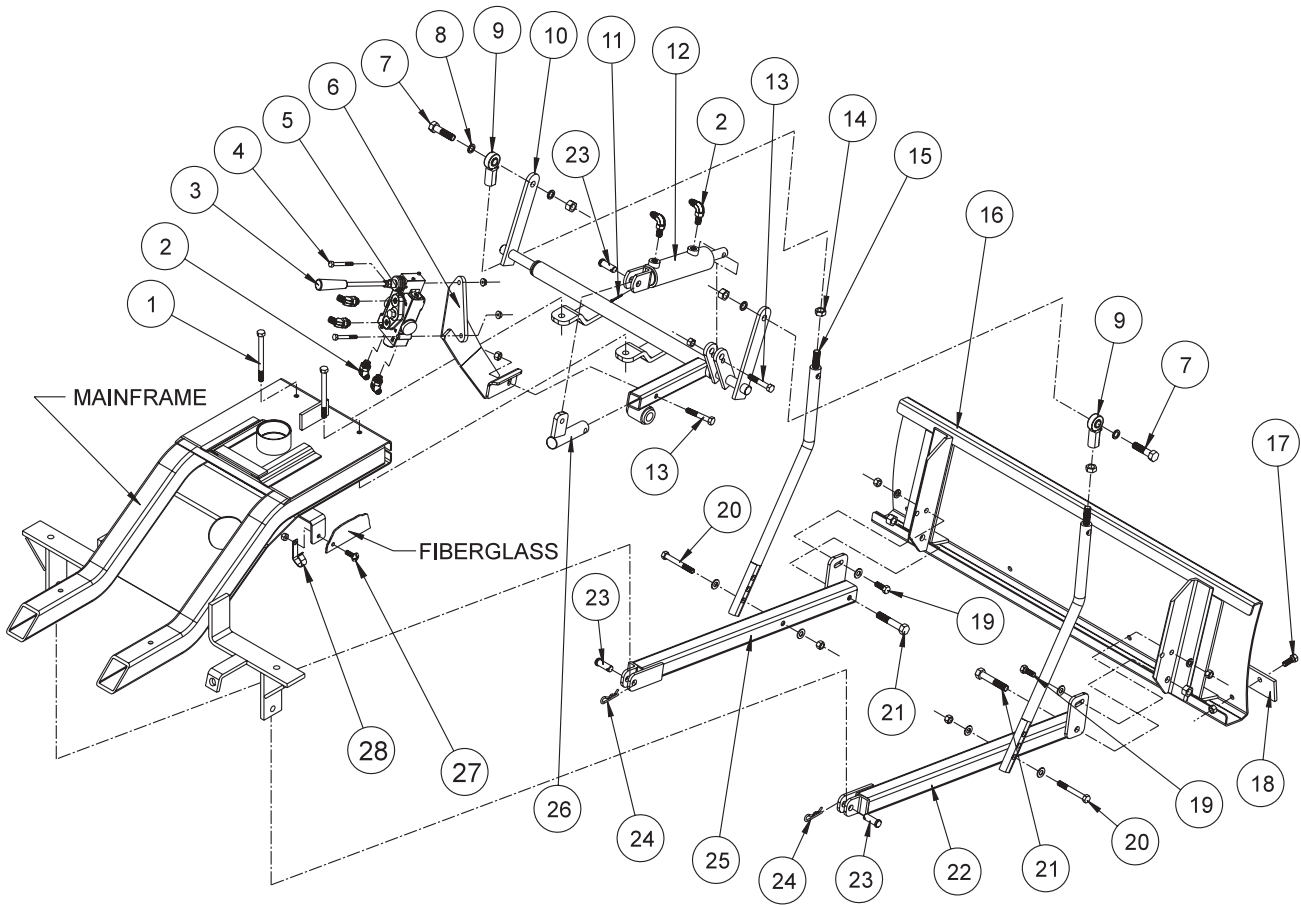

HYDRAULIC VALVE PLUMBING DRAWING

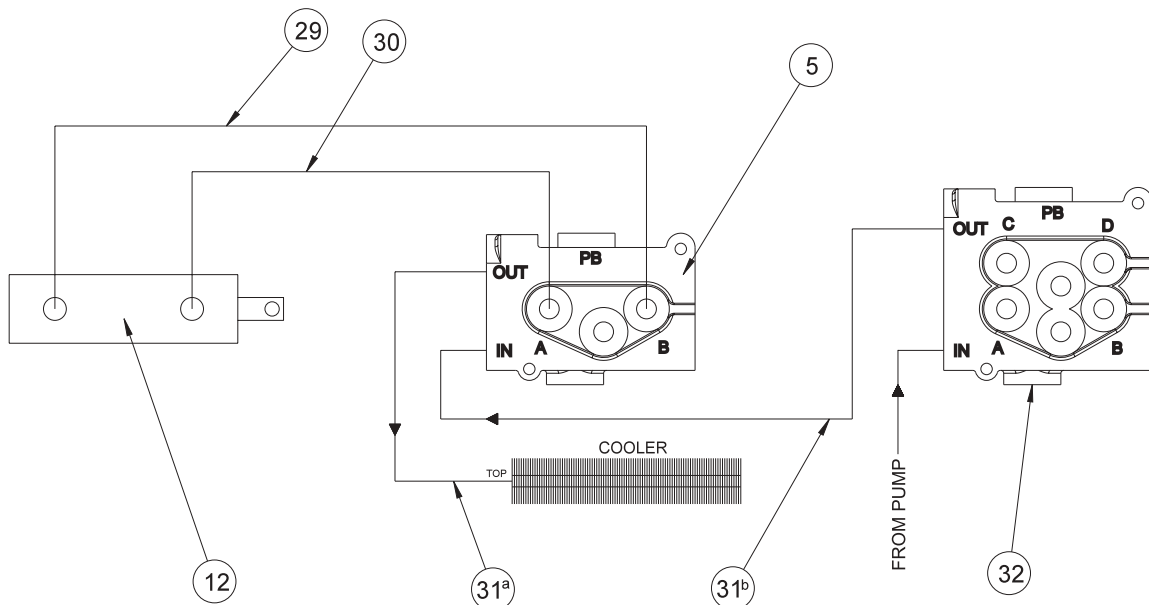


Accessories

43-003 HYDRAULIC SAND PLOW INSTRUCTIONS

1. Assemble Pusher Bars (Ref # 22 and 25) to Plow Blade (Ref # 16) using one $\frac{3}{8}$ -16 x 1 Bolt (Ref # 19) and one $\frac{3}{8}$ -16 x 3 Bolt (Ref #21) per Pusher Bar. There are 2 holes to bolt (Ref # 19) hardware in. Using hole closest to the blade will result in a shallow cut, whereas using the hole furthest from the blade will result in a deeper cut. The slot on the pusher bar is for a more fine tuned adjustment.
2. Assemble the Lift Assembly (Ref # 10) to the Main Frame using the two studs that are under the frame and below the front of the console.
3. Place Cylinder Lift (Ref # 26) into the tube on Lift Assembly (Ref # 10) with the tab pointing up hold with a $\frac{3}{8}$ -16 x 2 Bolt (Ref # 13), assemble the Valve Mount (Ref # 6) onto this bolt on the outside of the tube and secure both with one $\frac{3}{8}$ -16 Nut. Using a $\frac{3}{8}$ -16 x 2 Bolt mount the Hydraulic Cylinder (Ref # 12) to the Lift Assembly and secure with one $\frac{3}{8}$ -16 Nut. Connect the other end of the Hydraulic Cylinder to the Cylinder Lift using $\frac{1}{2}$ x $1\frac{1}{2}$ Clevis Pin (Ref # 23) and $\frac{1}{8}$ x 1 Cotter Pin (Ref #11).
4. Thread one $\frac{1}{2}$ - 20 Jam Nut (Ref # 14) onto each Lift Rod (Ref # 15) followed by the Rod Ends (Ref # 9). Adjust to equal lengths. Bolt Lift Rods to Lift Arms on Lift Assembly (Ref # 10) with Rod Ends to the outside. Bolt from outside with the $\frac{1}{2}$ " Machine Bushing (Ref # 8) between Rod End and Lift Arm and secure with $\frac{1}{2}$ -13 Lock Nut.
5. Slide the Plow/Pusher Bar Assembly under machine and connect to machine. Secure using $\frac{1}{2}$ x $1\frac{1}{2}$ Clevis Pins (Ref # 23) and $\frac{1}{8}$ " Bridge Pins (Ref # 24).
6. To connect Lift Rods (Ref # 15) to Pusher Bars start by lifting up the Plow Blade. Using one $\frac{3}{8}$ -16 x 3 Bolt (Ref # 20) and two $\frac{3}{8}$ " Washers assembly the Lift Rods to the Right (Ref #22) and Left (Ref # 25) Pusher Bars using the bottom hole in the Lift Rods as illustrated. Secure each with one $\frac{3}{8}$ -16 Lock Nut.
7. To fine tune the height of the blade off ground; turn the Rod Ends (Ref # 9) on the Lift Rods (Ref # 15). Turning the Rod Ends counter-clockwise will increase down pressure. Turning them clockwise will decrease down pressure.
8. Thread four of the 45° Elbow fittings (Ref # 2) into the Single Bank Valve (Ref # 5), one each in the **A** port, **B** port, **IN** port and **OUT** port. Thread the remaining two 45° Elbow fittings into the ports on the Hydraulic Cylinder (Ref # 12). Make sure the fittings on the Hydraulic Cylinder are pointing towards the machine.
9. Connect the 57 $\frac{1}{2}$ " Hoses (Ref # 31) to the fittings on the Single Bank Hydraulic Valve (Ref #5). One to the **IN** port and one to the **OUT** port. Next connect the 18" Hose (Ref # 27) to the fitting in the **B** port and connect the 20" Hose (Ref # 28) to the fitting in the **A** port.
10. Mount the Single Bank Hydraulic Valve (Ref # 5) to the Valve Mount (Ref # 6) as illustrated using the two $\frac{1}{4}$ - 20 x 2 Bolts (Ref # 4). Secure with the two $\frac{1}{4}$ - 20 Flange Whiz-Lock Nuts. Connect the Straight Handle Kit (Ref # 3) to the Valve. Reference *Single Bank Hydraulic Valve Drawing* on page 6 for a detailed view of the Valve.
11. Route the 18" Hose (Ref # 29) from the **B** port on the Single Bank Hydraulic Valve (Ref # 5) to the rear port on the Hydraulic Cylinder. Route the 20" Hose (Ref # 30) from the **A** port on the Single Bank Hydraulic Valve to the front port on the Cylinder.
12. Disconnect the negative (-) ground battery cable from the battery. Place a drain pan under the valve on the machine. **ENGINE MUST BE COOL BEFORE DISCONNECTING THE HOSES.**
13. Disconnect the hose from the **OUT** port on the 2 Bank Valve (Ref # 32) and the **top** port on the Oil Cooler. Discard this hose, it will not be used. Connect the 57 $\frac{1}{2}$ " Hose (Ref # 31^a) from the **OUT** port on the Single Bank Valve to the top port on the Oil Cooler. Connect the other 57 $\frac{1}{2}$ " Hose (Ref # 31^b) from the **IN** port of the Single Bank Valve to the **OUT** port of the 2 Bank Valve. Tie up Hoses using $\frac{5}{8}$ Loom Clamp (Ref # 28). Route 57 $\frac{1}{2}$ " Hoses under the body and along the frame avoiding any pinch points. Fasten to the frame using the 14 $\frac{1}{2}$ " Nylon Ties.
14. Reconnect the negative (-) ground battery cable to battery.
15. Make sure that everything is clear of the machine. Start the machine, work the valve so that the plow will both raise and lower. Also, do this with both the attachment lift and the rake lift. Work the lift a number of times until all air works out of the plow circuit and the cylinder works smoothly. At this time look for hydraulic leaks. If there are leaks, turn engine off and repair, start up and check again.
16. Check the hydraulic oil level. The level should be 2" to 2 $\frac{1}{2}$ " below the top of the tank. If more is needed, use SAE 10W-40 API service SG motor oil.

42-011-AB ALUMINUM SAND PLOW DRAWING

42-011-SB STEEL SAND PLOW DRAWING

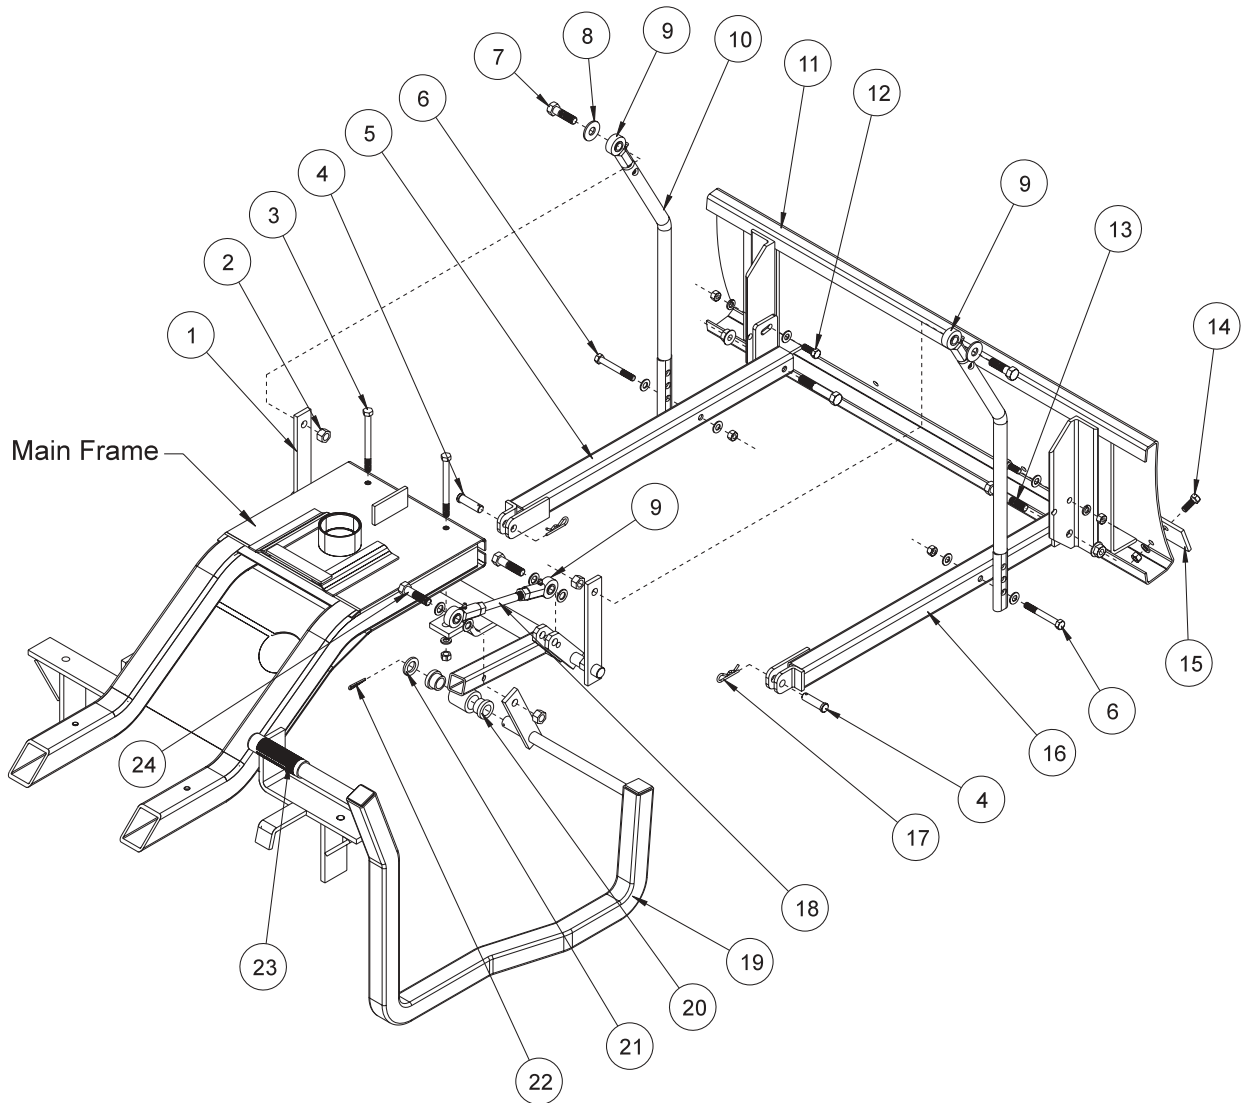

Accessories

42-011 SAND PLOW PARTS LIST


| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------------|--|----------|
| 1 | 42-346 | Lift Assembly (includes Ref# 20) | 1 |
| 2 | HNTL-12-13 | Lock Nut 1/2 - 13 | 2 |
| 3 | HB-38-16-350 | Bolt 3/8 - 16 x 3 1/2 (part of main frame) | 2 |
| | HWL-38 | Lock Washer 3/8 | 2 |
| | HN-38-16 | Nut 3/8 - 16 | 2 |
| 4 | HCP-12-150 | Clevis Pin 1/2 x 1 1/2 | 2 |
| 5 | 27-049 | Left Pusher Bar | 1 |
| 6 | HB-38-16-300 | Bolt 3/8 - 16 x 3 | 2 |
| | HW-38 | Washer 3/8 | 4 |
| | HNTL-38-16 | Lock Nut 3/8 - 16 | 2 |
| 7 | HB-12-13-200 | Bolt 1/2 - 13 x 2 | 2 |
| 8 | HMB-12-14 | Machine Bushing 1/2 x 14GA | 8 |
| 9 | 80-006 | Rod End | 4 |
| | HNJ-12-20 | Jam Nut 1/2 - 20 | 4 |
| 10 | 27-073 | Lift Rod | 2 |
| 11 | 27-017 | Aluminum Sand Plow Blade | 1 |
| | 13-352 | Steel Sand Plow Blade | 1 |
| 12 | HB-38-16-100 | Bolt 3/8 - 16 x 1 | 2 |
| | HW-38 | Washer 3/8 | 2 |
| | HWL-38 | Lock Washer 3/8 | 2 |
| | HN-38-16 | Nut 3/8 - 16 | 2 |
| 13 | HB-12-13-300 | Bolt 1/2 - 13 x 3 | 2 |
| | HNTL-12-13 | Lock Nut 1/2 - 13 | 2 |
| 14 | HB-38-16-100 | Bolt 3/8 - 16 x 1 | 4 |
| | HWL-38 | Lock Washer 3/8 | 4 |
| | HN-38-16 | Nut 3/8 - 16 | 4 |
| 15 | 13-167 | Wear Blade | 1 |
| 16 | 27-050 | Right Pusher Bar | 1 |
| 17 | HHP-18 | Bridge Pin 1/8 | 2 |
| 18 | 42-348 | Rod | 1 |
| 19 | 42-347 | Lift Handle | 1 |
| 20 | 18-221 | Flange Bushing | 2 |
| 21 | HMB-34-14 | Machine Bushing 3/4 - 14GA | 1 |
| 22 | HP-18-150 | Cotter Pin 1/8 x 1 1/2 | 1 |
| 23 | 15-019 | Grip | 1 |
| 24 | HB-12-13-200 | Bolt 1/2 - 13 x 2 | 2 |

INSTALLATION INSTRUCTIONS

- Assemble the pusher bars (Ref 5 and 16) to the plow (Ref 11) using hardware (Ref 12 & 13). There are 2 holes to bolt the hardware in. Using hole closest to the blade will result in a shallow cut, whereas using the hole furthest from the blade will result in a deeper cut. The slot on the pusher bar is for fine tuned adjustment.
- Assemble the lift assembly (Ref 1) to the main frame using the two studs that are under the frame and below the front of the console.
- Attach the lift handle (Ref 19) to the lift assembly using cotter pin and machine bushing (Ref 21 & 22). Using rod and yoke (Ref 18 & 9) attach the handle to the lift assembly.
- Put rod ends (Ref 9) onto lift rods (Ref 10) with jam nut first. Adjust to equal lengths. Bolt lift rods to lift arms with ball joints to the outside. Bolt from outside with the 1/2" machine bushing between rod end and lift arm and the 1/2 -13 nylon lock nut on the inside. Use (Ref 7) hardware.
- Slide Plow under machine and connect to machine. Use clevis pin and bridge pin (Ref 4 & 17).
- Lift up the plow. Using the top hole in the lift rod as a starting point hook on the pusher bars. Use (Ref 6) hardware. The three holes in the lift rods are for adjusting the hand lever. The top hole moves the lever forward and holds the blade with the most clearance. Each hole down moves the lever to the rear of the machine and decreases blade clearance by approximately one inch.
- For fine tuning of blade height off ground twist rod end (Ref 9) on rod (Ref 18). Twisting the rod end out will increase down pressure. Twisting the rod end onto the rod will decrease down pressure.



42-136 60" SAND PLOW DRAWING

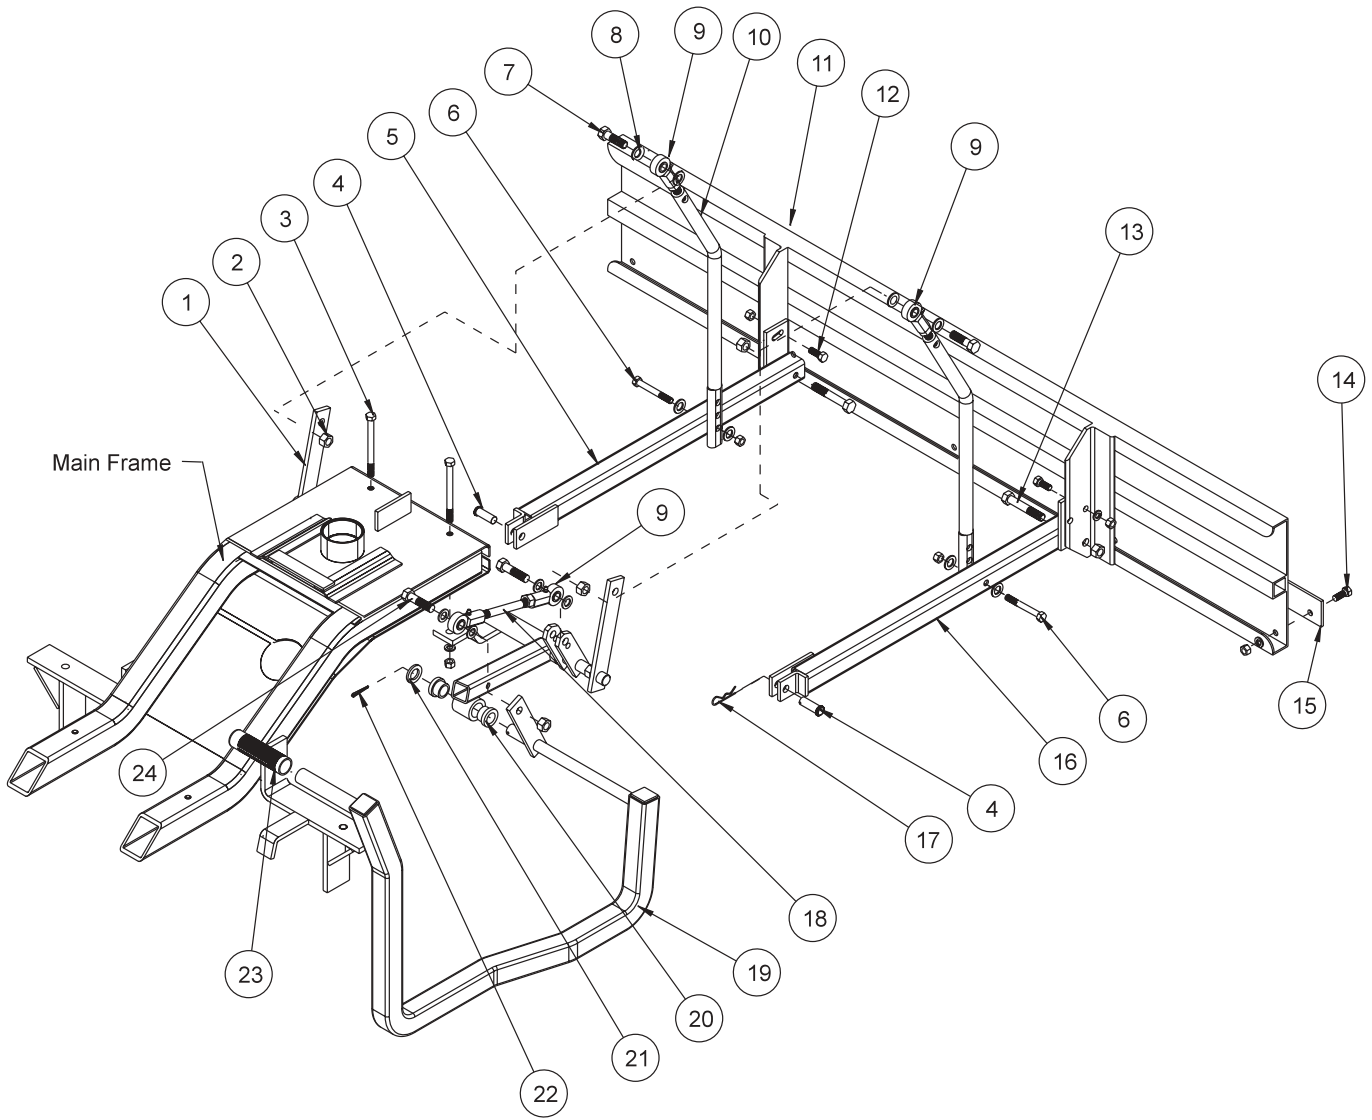

Accessories

42-136 60" SAND PLOW PART LIST



| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------------|--|----------|
| 1 | 42-092 | Lift Assembly (includes Ref# 20) | 1 |
| 2 | HNTL-12-13 | Lock Nut 1/2 - 13 | 4 |
| 3 | HB-38-16-350 | Bolt 3/8 - 16 x 3 1/2 (part of main frame) | 2 |
| | HWL-38 | Lock Washer 3/8 | 2 |
| | HN-38-16 | Nut 3/8 - 16 | 2 |
| 4 | HCP-12-150 | Clevis Pin 1/2 x 1 1/2 | 2 |
| 5 | 27-049 | Left Pusher Bar | 1 |
| 6 | HB-38-16-300 | Bolt 3/8 - 16 x 3 | 2 |
| | HW-38 | Washer 3/8 | 4 |
| | HNTL-38-16 | Lock Nut 3/8 - 16 | 2 |
| 7 | HB-12-13-200 | Bolt 1/2 - 13 x 2 | 2 |
| 8 | HMB-12-14 | Machine Bushing 1/2 x 14GA | 8 |
| 9 | 80-006 | Rod End | 4 |
| | HNJ-12-20 | Jam Nut 1/2 - 20 | 4 |
| 10 | 27-073 | Lift Rod | 2 |
| 11 | 35-011 | Aluminum Plow Blade 60" | 1 |
| 12 | HB-38-16-100 | Bolt 3/8 - 16 x 1 | 2 |
| | HW-38 | Washer 3/8 | 2 |
| | HWL-38 | Lock Washer 3/8 | 2 |
| | HN-38-16 | Nut 3/8 - 16 | 2 |
| 13 | HB-12-13-300 | Bolt 1/2 - 13 x 3 | 2 |
| | HNTL-12-13 | Lock Nut 1/2 - 13 | 2 |
| 14 | HB-38-16-100 | Bolt 3/8 - 16 x 1 | 5 |
| | HWL-38 | Lock Washer 3/8 | 5 |
| | HN-38-16 | Nut 3/8 - 16 | 5 |
| 15 | 35-012 | Wear Blade | 1 |
| 16 | 27-050 | Right Pusher Bar | 1 |
| 17 | HHP-18 | Bridge Pin 1/8 | 2 |
| 18 | 42-094 | Rod | 1 |
| 19 | 42-093 | Lift Handle | 1 |
| 20 | 18-221 | Flange Bushing | 2 |
| 21 | HMB-34-14 | Machine Bushing 3/4 - 14GA | 1 |
| 22 | HP-18-150 | Cotter Pin 1/8 x 1 1/2 | 1 |
| 23 | 15-019 | Grip | 1 |
| 24 | HB-12-13-200 | Bolt 1/2 - 13 x 2 | 2 |

INSTALLATION INSTRUCTIONS


- Assemble pusher bars (Ref 5 and 16) to plow (Ref 11) using hardware (Ref 12 & 13). There are 2 holes to bolt the hardware in. Using hole closest to the blade will result in a shallow cut, whereas using the hole furthest from the blade will result in a deeper cut. The slot on the pusher bar is for fine tuned adjustment.
- Assemble the lift assembly (Ref 1) to the main frame using the two studs that are under the frame and below the front of the console.
- Attach the lift handle (Ref 19) to the lift assembly using cotter pin and machine bushing (Ref 21 & 22). Using rod and yoke (Ref 18 & 9) attach the handle to the lift assembly.
- Put rod ends (Ref 9) onto lift rods (Ref 10) with jam nut first. Adjust to equal lengths. Bolt lift rods to lift arms with ball joints to the outside. Bolt from outside with the 1/2" machine bushing between rod end and lift arm and the 1/2 -13 nylon lock nut on the inside. Use (Ref 7) hardware.
- Slide plow under machine and connect to machine. Use clevis pin and bridge pin (Ref 4 & 17).
- Lift up the plow. Using the top hole in the lift rod as a starting point hook on the pusher bars. Use (Ref 6) hardware. The three holes in the lift rods are for adjusting the hand lever. The top hole moves the lever forward and holds the blade with the most clearance. Each hole down moves the lever to the rear of the machine and decreases blade clearance by approximately one inch.
- For fine tuning of blade height off ground twist rod end (Ref 9) on rod (Ref 18). Twisting the rod end out will increase down pressure. Twisting the rod end onto the rod will decrease down pressure.



42-315 LIGHT KIT - FRONT LIGHT MOUNT DRAWING

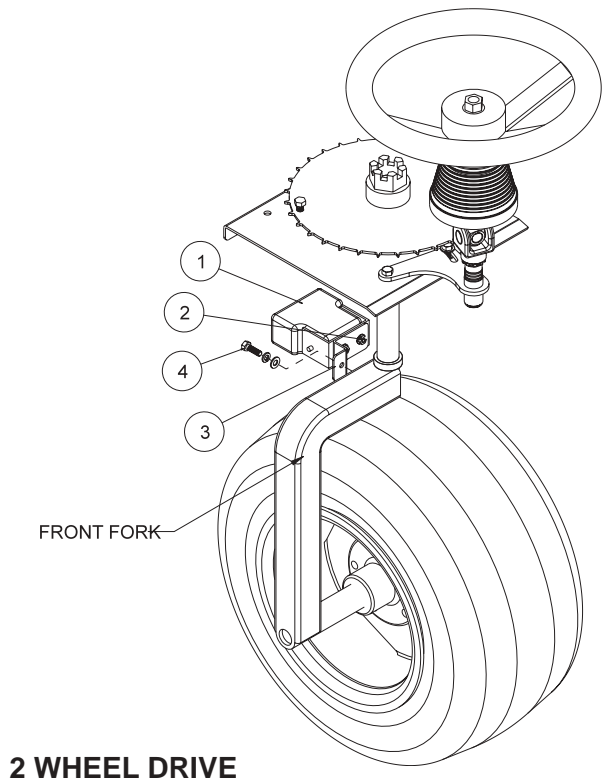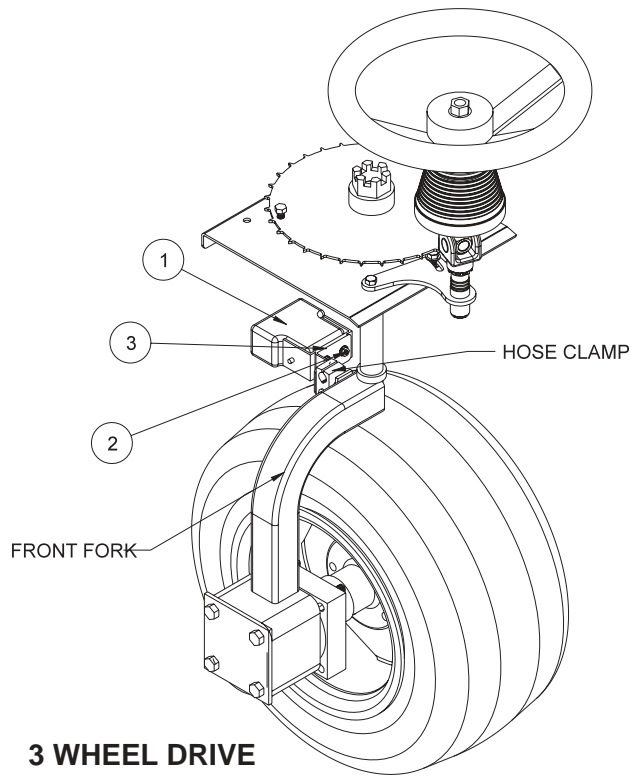

REAR LIGHT MOUNT DRAWING

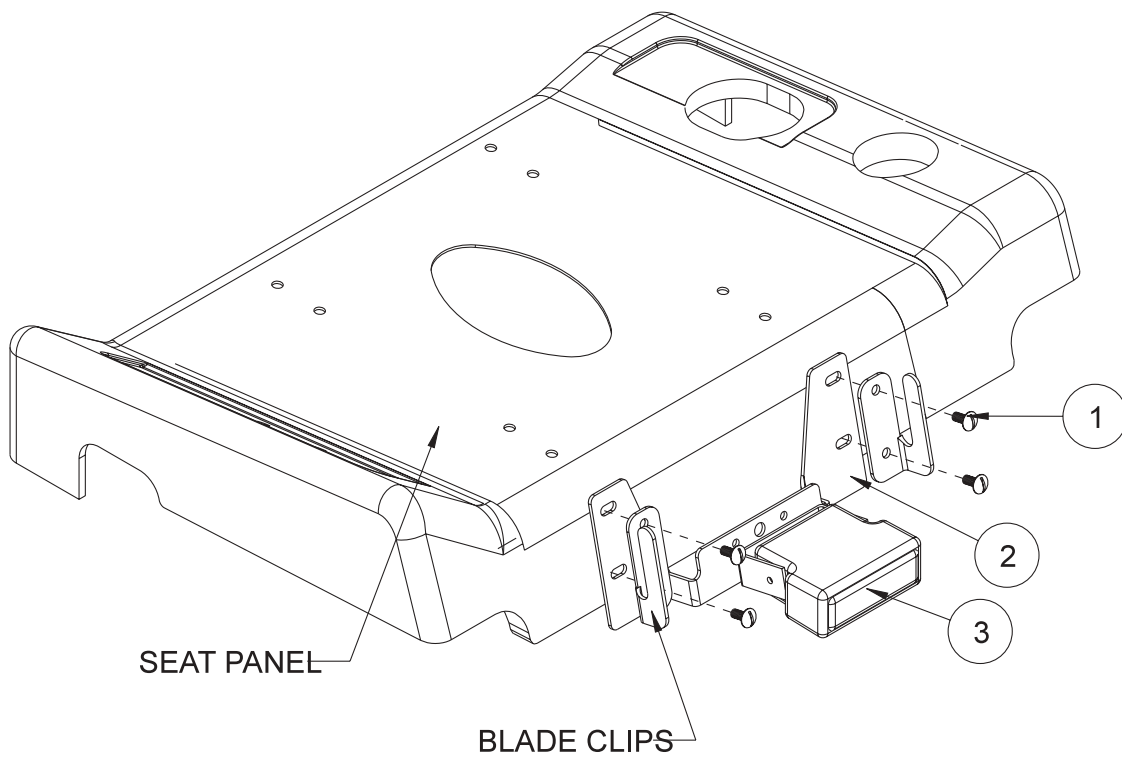

Accessories

42-315 LIGHT KIT PART LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|----------------|---|----------|
| 1 | 42-317 | Front Light | 1 |
| 2 | HSTP-14-20-075 | Phillips Machine Screw $\frac{1}{4}$ - 20 x $\frac{3}{4}$ | 2 |
| | HNFL-14-20 | Flange Whiz Lock Nut $\frac{1}{4}$ - 20 | 2 |
| 3 | 42-323 | Front Light Mount | 1 |
| 4 | HB-516-18-100 | Bolt $\frac{5}{16}$ - 18 x 1 (2 WD Only) | 1 |
| | HW-516 | Washer $\frac{5}{16}$ (2 WD Only) | 1 |
| | HWL-516 | Lockwasher $\frac{5}{16}$ (2 WD Only) | 1 |

FRONT LIGHT INSTALLATION

SUPER STAR 3 WHEEL DRIVE FRONT LIGHT INSTALLATION

1. Remove bolt and strong back from hose clamp on front of front fork. Place front light mount (Ref 3) on hose clamp and replace bolt and strong back.
2. Bolt front light (Ref 1) to front light mount, using the $\frac{1}{4}$ - 20 machine screws and whiz lock nuts. Be sure wires are macup.

SUPER STAR 2 WHEEL DRIVE FRONT LIGHT INSTALLATION

1. You will have to drill and tap a $\frac{5}{16}$ - 18 hole in the front fork approximately 1" from the end, and centered, where the steering shaft is welded.
2. Bolt front light mount (Ref 3) to the front fork using the $\frac{5}{16}$ - 18 bolt, lockwasher and washer (Ref 4).
3. Bolt front light (Ref 1) to front light mount, using the $\frac{1}{4}$ - 20 machine screws and whiz lock nuts. Be sure wires are up.

REAR LIGHT PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|----------------|---|----------|
| 1 | HST-516-18-075 | Truss Head Screw $\frac{5}{16}$ - 18 x $\frac{3}{4}$ | 4 |
| | HNFL-516-18 | Flange Whiz Lock Nut $\frac{5}{16}$ - 18 | 4 |
| 2 | 42-322 | Rear Light Mount | 1 |
| 3 | 42-316 | Rear Light | 1 |
| | HSTP-14-20-075 | Phillips Machine Screw $\frac{1}{4}$ - 20 x $\frac{3}{4}$ | 2 |
| | HNFL-14-20 | Flange Whiz Lock Nut $\frac{1}{4}$ - 20 | 2 |

REAR LIGHT INSTALLATION

NOTE: NOTE: If your machine has a 42-210 Grader Blade, you will have to remove the blade clips from the back of the seat panel to install rear light.


1. Install rear light mount (Ref 2) on back of seat panel. If you have the blade clips, put the rear light mount between the blade clips and the seat panel. Then use the $\frac{5}{16}$ - 18 truss head screws and whiz lock nuts (Ref 1) to hold in place.
2. Install light (Ref 3) with wires up on the rear light mount using two $\frac{1}{4}$ - 20 machine screws and whiz lock nuts.



Do not touch lights. Very Hot.



42-315 LIGHT KIT WIRING DRAWING

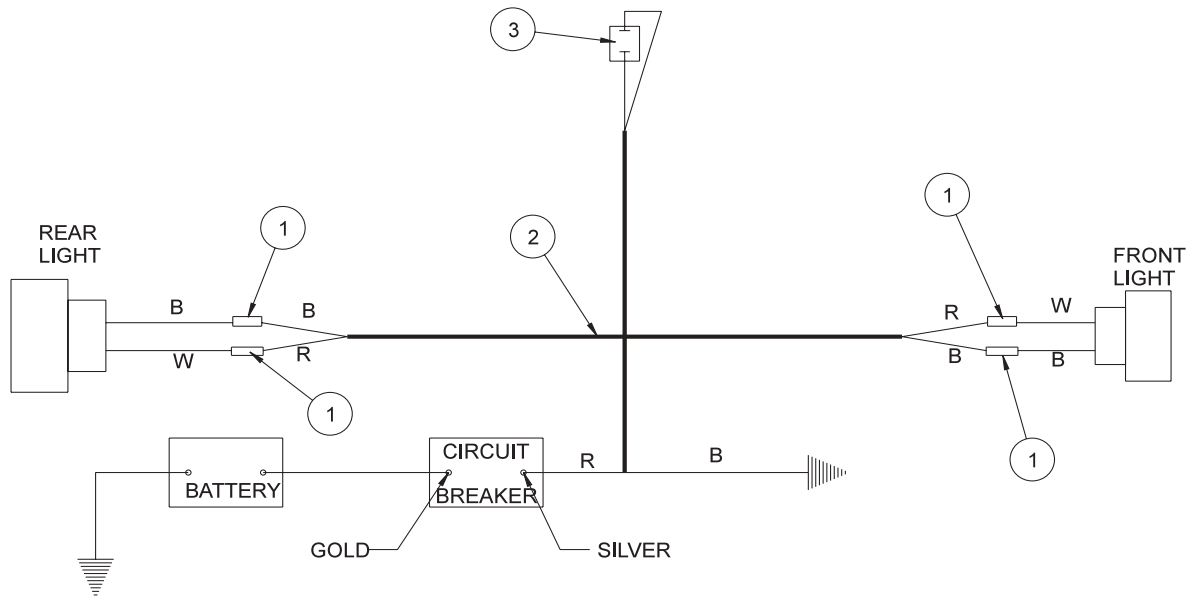

Accessories

42-315 LIGHT KIT WIRING PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------|------------------|----------|
| 1 | 8875 | Bullet Terminal | 4 |
| | 8963 | Heat Shrink 1/4" | 4 |
| 2 | 42-319 | Wire Harness | 1 |
| | HLC-58 | Loom Clamp 5/8" | 2 |
| 3 | 12-003 | Toggle Switch | 1 |
| | 15-472 | Switch Boot | 1 |


WIRING INSTALLATION

1. Remove nut from left hand seat studs and place two loom clamps (HLC-58) onto seat stud. Hold in place with the nut.
2. Drill a 1/2" hole in fiberglass control panel 1" from 2WD/3WD toggle switch. (NOTE: Use 2WD/3WD hole if not being used).
3. Hook red wire from the wire harness to toggle switch. Place toggle switch (Ref 3) into hole. Install switch boot.
4. Run wire harness (Ref 2) to the front light. Snip the factory installed ends on headlight wires and install the heat shrink and the bullet terminal (Ref 1) provided. Plug in wire harness to front head light. Do the same to the rear light.
5. Run the red wire to the silver post of the circuit breaker and the black to the ground battery wire on the engine.
6. Hook wire harness up in the loom clamps installed earlier.
7. Rotate front wheel to stop. Check for wire routing and interference. Place warning decal on lights.
8. Test headlights before putting machine into service.



Do not touch lights. Very Hot.

42-223 ADJUSTABLE DISC EDGER DRAWING

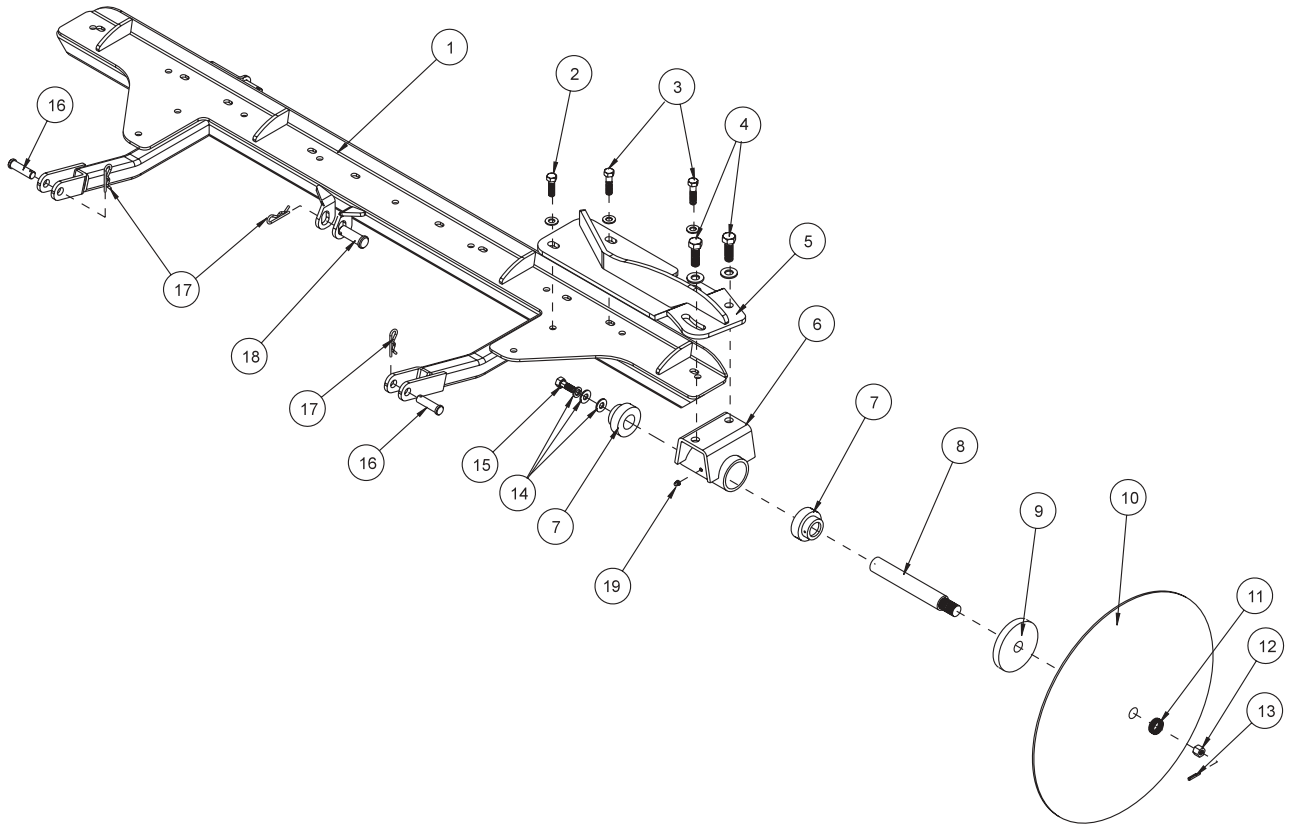

Accessories



42-223 ADJUSTABLE DISC EDGER PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------------|---|----------|
| 1 | 42-203 | Attachment Lift Assembly | 1 |
| 2 | HB-38-16-125 | Bolt $\frac{3}{8}$ - 16 x $1\frac{1}{4}$ | 1 |
| | HW-38 | Washer $\frac{3}{8}$ | 1 |
| | HNTL-38-16 | Lock Nut $\frac{3}{8}$ -16 | 1 |
| 3 | HB-38-16-150 | Bolt $\frac{3}{8}$ - 16 x $1\frac{1}{2}$ | 2 |
| | HW-38 | Washer $\frac{3}{8}$ | 2 |
| | HNTL-38-16 | Lock Nut $\frac{3}{8}$ - 16 | 2 |
| 4 | HB-12-13-150 | Bolt $\frac{1}{2}$ - 13 x $1\frac{1}{2}$ | 2 |
| | HW-12 | Washer $\frac{1}{2}$ | 2 |
| | HNTL-12-13 | Lock Nut $\frac{1}{2}$ - 13 | 2 |
| 5 | 42-224 | Edger Mount | 1 |
| 6 | 13-203 | Spindle | 1 |
| 7 | 21-169 | Bearing and Collar | 2 |
| 8 | 13-206 | Spindle Shaft | 1 |
| 9 | 13-205 | $\frac{1}{2}$ Disc Flange | 1 |
| 10 | 13-204 | Disc | 1 |
| 11 | HMB-34-10 | Machine Bushing $\frac{3}{4}$ x 10GA | 4 |
| 12 | HNA-34-16 | Axle Nut $\frac{3}{4}$ - 16 | 1 |
| 13 | HP-18-150 | Cotter Pin $\frac{1}{8}$ x $1\frac{1}{2}$ | 1 |
| 14 | HWL-38 | Washer $\frac{3}{8}$ | 1 |
| | HW-516 | Washer $\frac{5}{16}$ | 1 |
| | HW-716 | Washer $\frac{7}{16}$ | 1 |
| 15 | HB-38-16-100 | Bolt $\frac{3}{8}$ -16 x 1 | 1 |
| 16 | HCP-12-200 | Clevis Pin $\frac{1}{2}$ x 2 | 2 |
| 17 | HHP-18 | Bridge Pin $\frac{1}{8}$ | 3 |
| 18 | HCP-58-250 | Clevis Pin $\frac{5}{8}$ x $2\frac{1}{2}$ | 1 |
| 19 | HG-14-28-180 | Grease Fitting $\frac{1}{4}$ - 28 x 180 | 1 |

INSTALLATION INSTRUCTIONS

- For initial assembly, bolt spindle assembly (Ref 6) to the edger mount (Ref 5). Use the $\frac{1}{2}$ - 13 bolts, washers and lock nuts (Ref 4) to hold in place.
- Make sure the $\frac{1}{2}$ " disc flange (Ref 9) is on the spindle shaft (Ref 8) up to the shoulder. Then place the disc (Ref 10) onto the shaft, curved towards the spindle housing, followed by four machine bushings (Ref 11), and the axle nut (Ref 12).
- Tighten axle nut and slide in the cotter pin (Ref 13).
- The edger mount mounts onto the attachment lift assembly (Ref 1). Use the $\frac{3}{8}$ bolts, washers and lock nuts (Ref 2 and 3) with the $1\frac{1}{4}$ " bolt going into the last hole on the mount plate.
- The Edger mounts under the center of the trap rake.
- Place the handle and linkage onto the empty linkage port of the two bank valve on the machine.
- Start the engine and lower the cylinder for the attachment lift FULLY. Stop engine.
- Slide Edger under the trap rake from the right side.
- Position the lift arms on the attachment lift assembly to the lift brackets on the machine. Hold in place with $\frac{1}{2}$ x 2 clevis pin and bridge pins (Ref 16 and 17).
- Attach the cylinder to the center tab on the attachment lift assembly using the $\frac{5}{8}$ x $2\frac{1}{2}$ clevis pin and bridge pin (Ref 17 and 18).
- Start engine and test lift and Edger to make sure all works well.

42-750 CART PATH AND SIDEWALK EDGER DRAWING

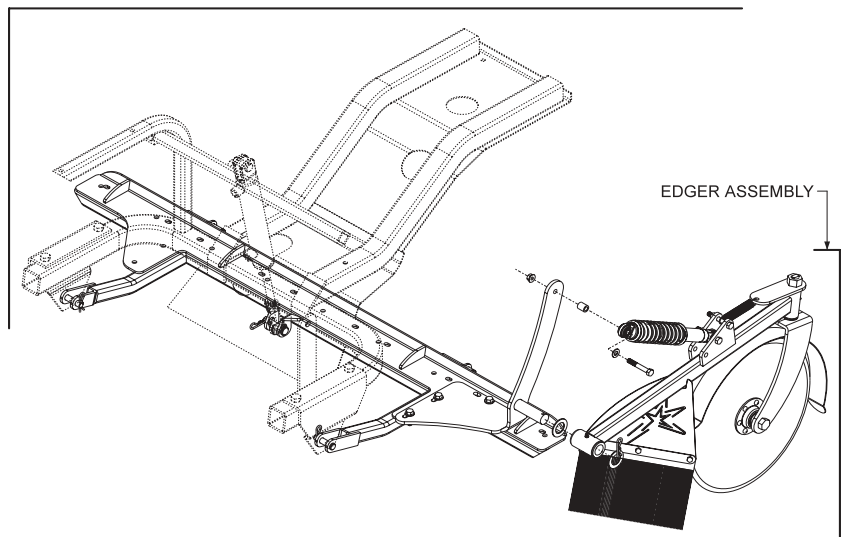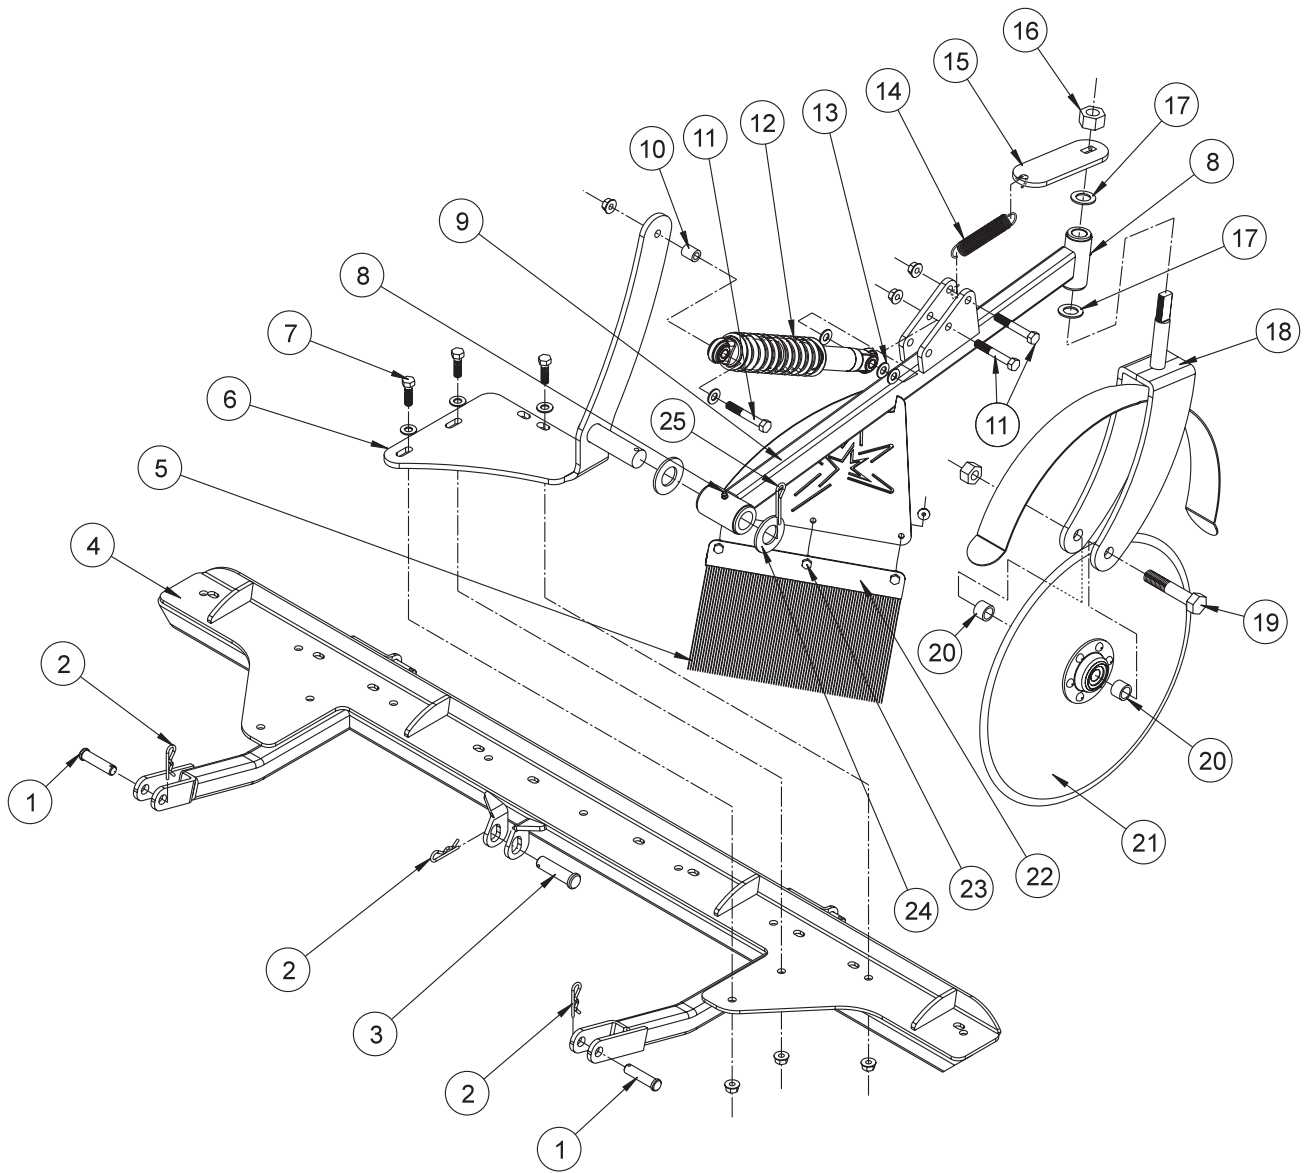

Accessories

42-750 CART PATH AND SIDEWALK EDGER PARTS LIST


| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------------|---|----------|
| 1 | HCP-12-200 | Clevis Pin, 1/2 x 2 | 2 |
| 2 | HHP-18-100 | Bridge Pin, 1/8 x 1 | 4 |
| 3 | HCP-58-250 | Clevis Pin, 5/8 x 2 1/2 | 1 |
| 4 | 42-203 | Attachment Lift Assembly | 1 |
| 5 | 42-758 | Brush | 1 |
| 6 | 42-754 | Edger Mount | 1 |
| 7 | HB-38-16-125 | Bolt, 3/8 - 16 x 1 1/4 | 3 |
| | HNFL-38-16 | Flange Whiz-Lock Nut, 3/8-16 | 3 |
| | HW-38 | Flat Washer, 3/8 | 3 |
| 8 | HG-14-28-180 | Grease Fitting, 1/4 - 28 x 180°(Part of 42-755) | 1 |
| 9 | 42-755 | Edger Arm | 1 |
| 10 | 10-134 | Spacer | 1 |
| 11 | HB-38-16-250 | Bolt, 3/8 - 16 x 2 1/2 | 3 |
| | HNFL-38-16 | Flange Whiz-Lock Nut, 3/8-16 | 3 |
| | HW-38 | Flat Washer, 3/8 | 1 |
| 12 | 60-123 | Shock Absorber | 1 |
| 13 | HW-38 | Flat Washer, 3/8 | 4 |
| 14 | 48-109 | Spring | 1 |
| 15 | 42-757 | Spring Mount | 1 |
| 16 | HNTL-34-16 | Lock Nut, 3/4 - 16 | 1 |
| 17 | HMB-34-10 | Machine Bushing, 3/4 x 10GA | 2 |
| 18 | 42-756 | Edger Fork | 1 |
| 19 | HB-58-11-325 | Bolt, 5/8 - 11 x 3 1/4 | 1 |
| | HNCL-58-11 | Center Lock Nut, 5/8-11 | 1 |
| 20 | 76-298 | Spacer | 2 |
| 21 | 42-752 | Edger Blade | 1 |
| 22 | 42-759 | Brush Holder | 1 |
| 23 | HB-14-20-075 | Bolt, 1/4 - 20 x 3/4 | 3 |
| | HNFL-14-20 | Flange Whiz-Lock Nut, 1/4 - 20 | 3 |
| 24 | HMB-100-14 | Machine Bushing, 1 x 14GA | 2 |

INSTALLATION INSTRUCTIONS

For your convenience and ease of installation, a major set of components are pre-assembled at the factory. This is the "Edger Assembly" and includes Reference #'s 11 thru 23.

- Slide attachment lift assembly (Ref 4) under machine and attach using (2) 1/2 x 2" clevis pins and 1/8" bridge pins (Ref 1 and 2). Connect the free end of the hydraulic cylinder to the attachment lift assembly (Ref 4) as illustrated using the 5/8 x 2 1/2 clevis pin and 1/8" bridge pin (Ref 3 and 2).
- Attach the edger mount (Ref 6) to the attachment lift assembly (Ref 4) using (3) 3/8 - 16 x 1 1/4 bolts, 3/8 flat washers & 3/8 -16 whiz-lock nuts (Ref 7).
- Now slide (1) 1" machine bushing (Ref 24) on the edger mount's (Ref 6) pin. Next install the "Edger Assembly" (see sidebar) onto the pin. Place the second 1" machine bushing (Ref 24) on the pin. Secure with a 1/8" ridge pin (Ref 2).
- Slide (1) 3/8" flat washer onto (1) 3/8 - 16 x 2 1/2 bolt & insert this in the free end of the shock absorber (Ref 12). Next, slide the spacer (Ref 10) onto the bolt and use (1) 3/8 -16 whiz-lock nut to secure the shock absorber (Ref 12) to the edger mount (Ref 6) as illustrated.
- Grease all grease fittings (Ref 8) and check all fasteners for proper installation.

42-008 SAND CULTIVATOR DRAWING

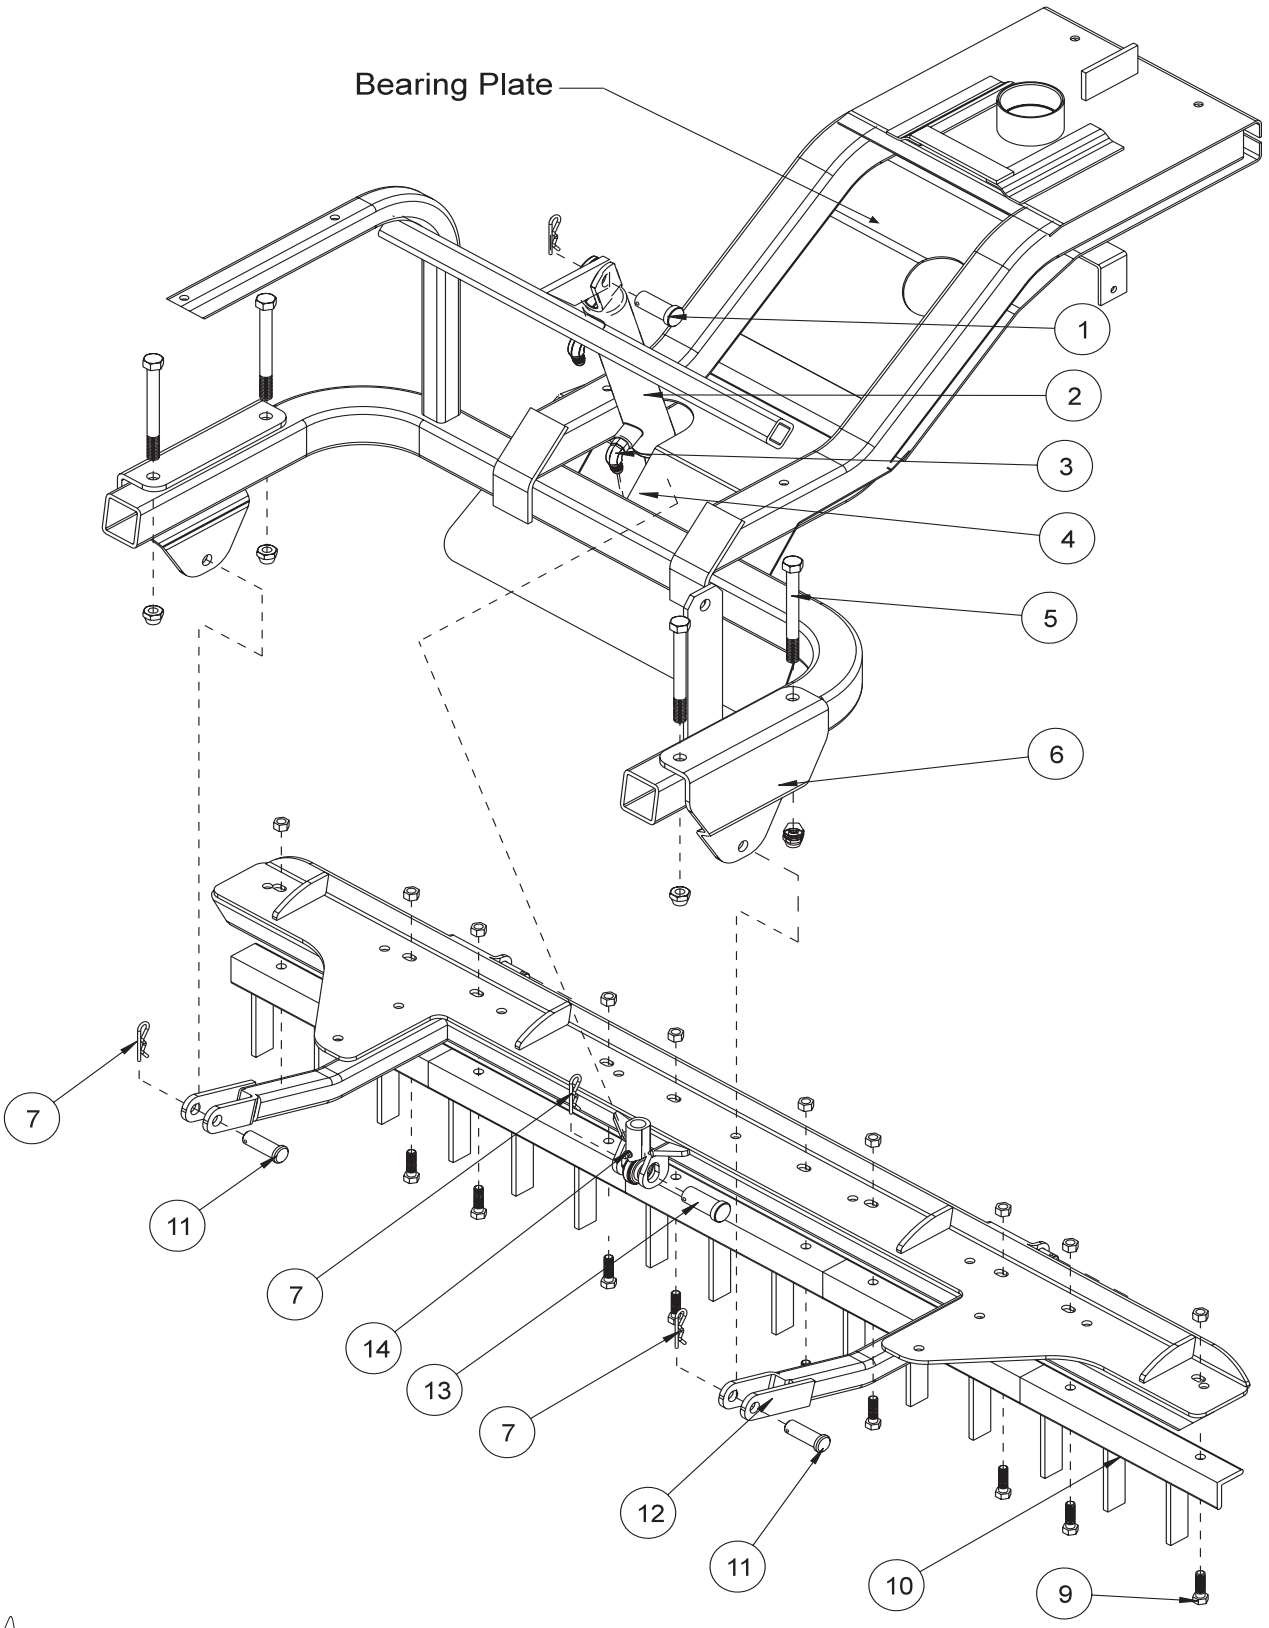

Accessories


42-008 SAND CULTIVATOR PARTSLIST

| REF# | PART# | DESCRIPTION | QTY |
|------|--------------|--|-----|
| 1 | HCP-58-175 | Clevis Pin $\frac{5}{8}$ - $1\frac{3}{4}$ | 1 |
| 2 | 10-135 | Hydraulic Cylinder | 1 |
| 3 | 18-168 | 90° Elbow | 2 |
| 4 | 42-217 | Cylinder Mount | 1 |
| 5 | HB-12-13-500 | Bolt $\frac{1}{2}$ - 13 x 5 | 4 |
| | HNTL-12-13 | Lock Nut $\frac{1}{2}$ - 13 | 4 |
| 6 | 42-015 | Attachment Mount | 2 |
| *7 | HHP-18 | Bridge Pin $\frac{1}{8}$ | 3 |
| *9 | HB-38-16-125 | Bolt $\frac{3}{8}$ - 16 x $1\frac{1}{4}$ | 10 |
| | HNTL-38-16 | Lock Nut $\frac{3}{8}$ - 16 | 10 |
| *10 | 42-038 | Tine Segment | 5 |
| *11 | HCP-12-200 | Clevis Pin $\frac{1}{2}$ x 2 | 2 |
| *12 | 42-203 | Attachment Lift | 1 |
| *13 | HCP-58-250 | Clevis Pin $\frac{5}{8}$ x $2\frac{1}{2}$ | 1 |
| 14 | 18-154 | Rod End | 1 |
| * | 42-008 | Sand Cultivator (all other parts reference only) | |

INSTALLATION INSTRUCTIONS

1. Install valve handle with linkage (13-672) onto valve.
2. Remove the cylinder mount (Ref 4) from the machine.
3. Tine Segments (Ref 10) should be bolted to the attachment lift (Ref 12). Attach the attachment lift to (Ref 12) attachment mount using (Ref 11 & 7) clevis pin and bridge pin.
4. Lift attachment lift up or extend cylinder so rod end (Ref 14) lines up with the holes on the center of the attachment lift. Use clevis pin and bridge pin (Ref 7 and 13) to fasten cylinder to sand cultivator.
6. Turn machine on and test for proper operation.

42-010 CONSTRUCTION LEVELING BLADE DRAWING

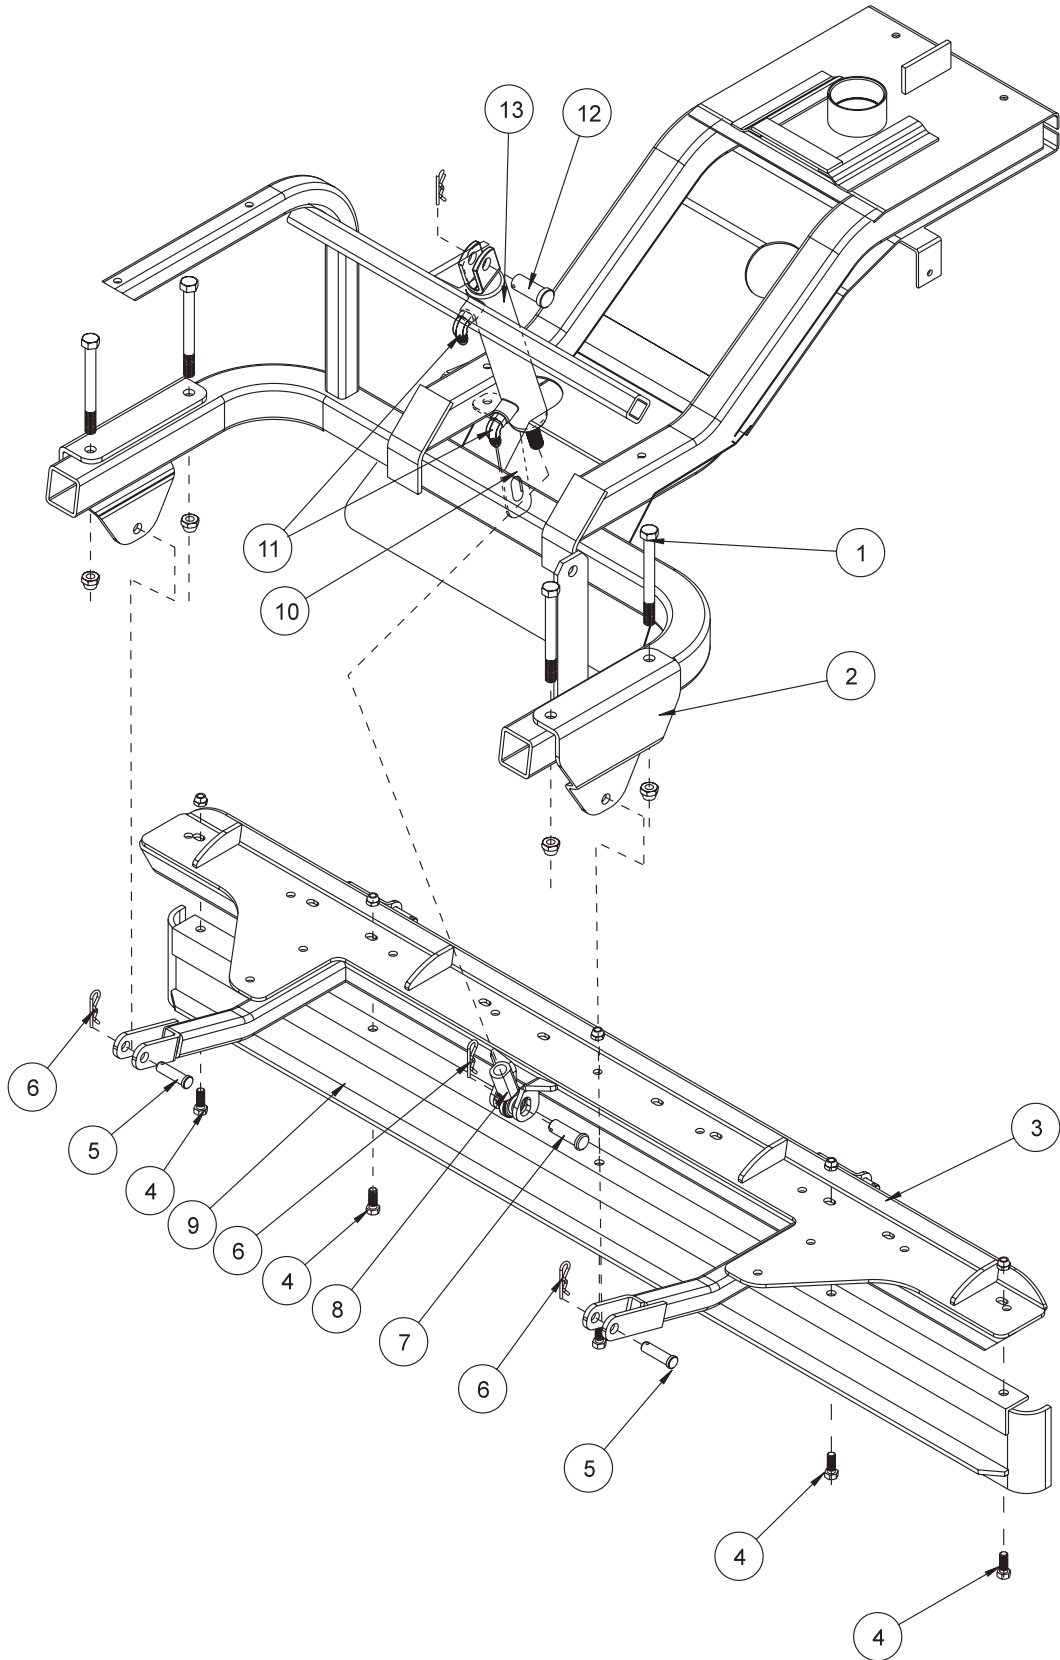

Accessories


42-010 CONSTRUCTION LEVELING BLADE PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------------|--|----------|
| 1 | HB-12-13-500 | Bolt $1/2$ - 13 x 5 | 4 |
| | HNTL-12-13 | Lock Nut $1/2$ - 13 | 4 |
| 2 | 42-015 | Attachment Mount | 2 |
| *3 | 42-203 | Attachment Lift | 1 |
| *4 | HB-38-16-100 | Bolt $3/8$ - 16 x 1 | 5 |
| | HNTL-38-16 | Lock Nut $3/8$ - 16 | 5 |
| *5 | HCP-12-200 | Clevis Pin $1/2$ x 2 | 2 |
| *6 | HHP-18 | Bridge Pin $1/8$ | 3 |
| *7 | HCP-58-250 | Clevis Pin $5/8$ x $2 1/2$ | 1 |
| 8 | 18-154 | Rod End | 1 |
| *9 | 42-097 | Leveling Blade | 1 |
| 10 | 42-217 | Cylinder Mount | 1 |
| 11 | 18-168 | 90° Elbow | 2 |
| 12 | HCP-34-175 | Clevis Pin $3/4$ - $1 3/4$ | 1 |
| 13 | 10-135 | Hydraulic Cylinder | 1 |
| * | 42-010 | Construction Leveling Blade (all other parts are reference only) | |


INSTALLATION INSTRUCTIONS

1. Remove the cylinder mount (Ref 10) from the machine.
2. Bolt leveling blade (Ref 9) to attachment lift (Ref 3) using five $3/8$ - 16 x 1 bolts and five $3/8$ - 16 lock nuts as shown on drawing.
3. Attach the attachment lift to attachment mount (Ref 3) using clevis pin and bridge pin (Ref 5 and 6).
4. Lift attachment lift up or extend cylinder so rod end (Ref 8) lines up with the holes on the center of the attachment lift. Use $5/8$ x $2 1/2$ clevis pin and bridge pin (Ref 6 & 7) to fasten cylinder to cultivator.
5. Turn machine on and test for proper operation.

42-210 GRADER BLADE DRAWING

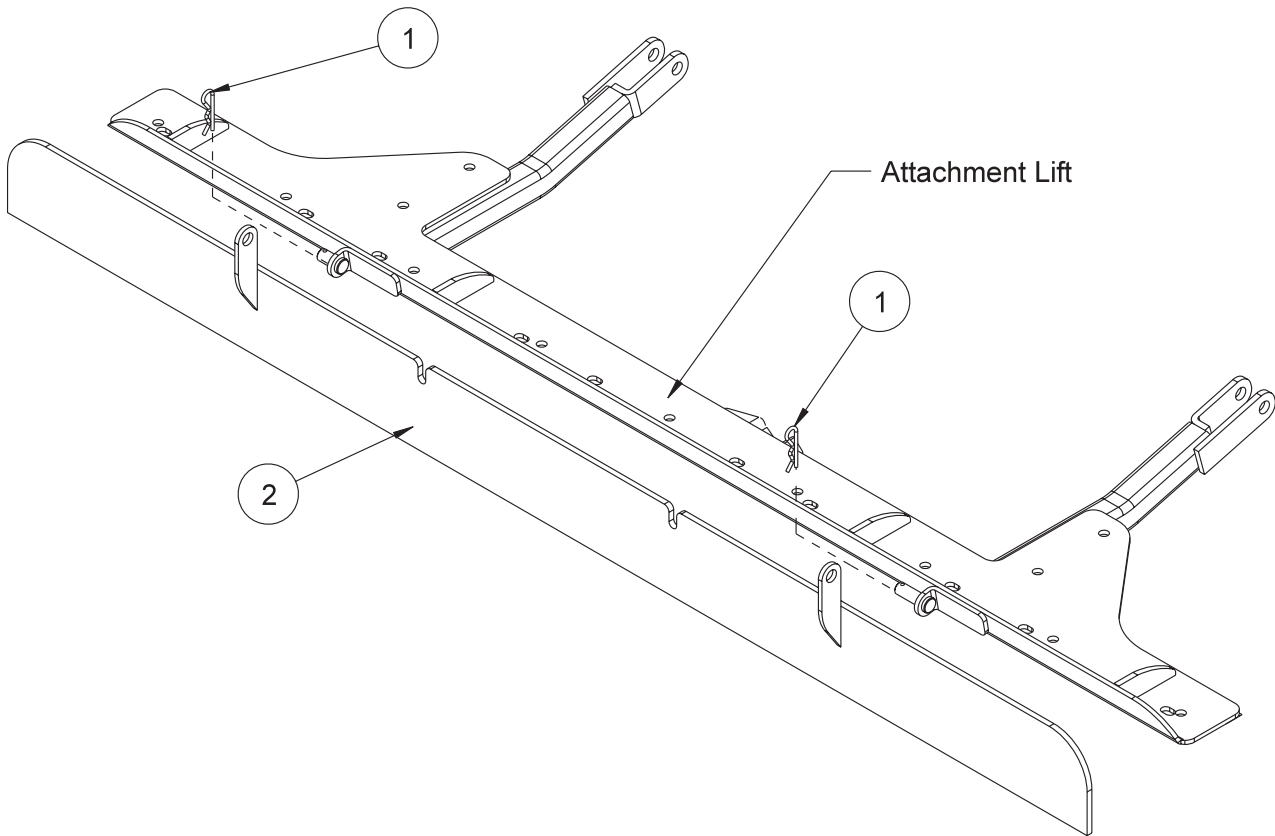

BLADE CLIP DRAWING

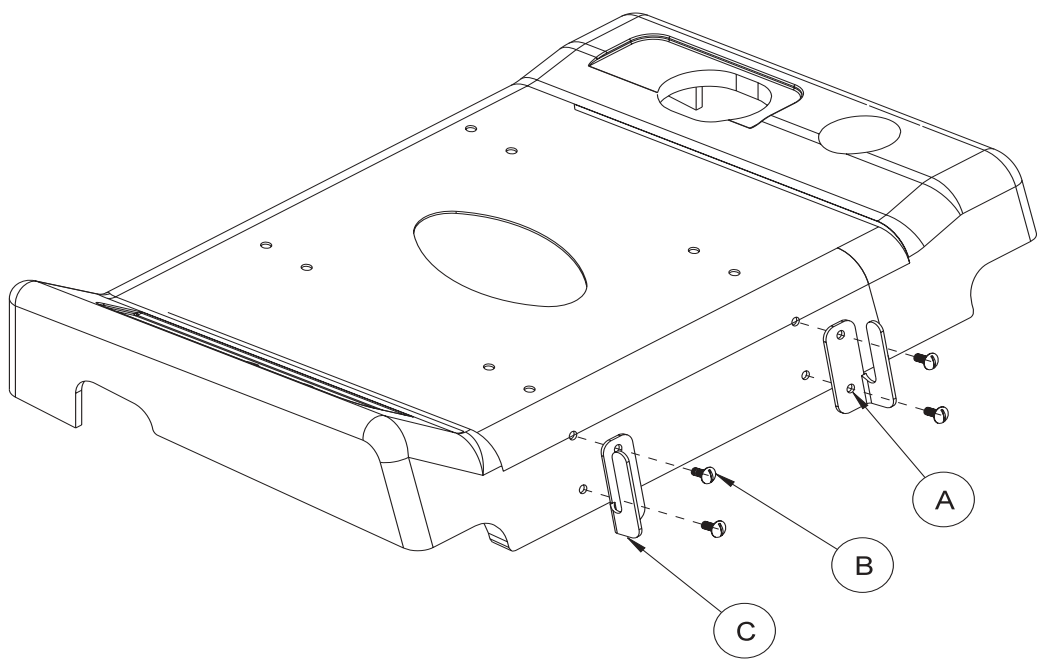

Accessories


42-210 GRADER BLADE PARTS LIST

| REF# | PART# | DESCRIPTION | QTY |
|------|----------------|--|-----|
| 1 | HHP-18 | Bridge Pin $\frac{1}{8}$ | 2 |
| 2 | 42-207 | Grader Blade | 1 |
| A | 42-211 | Right Blade Clip | 1 |
| B | HST-516-18-075 | Truss Head Screw $\frac{5}{16}$ - 18 x $\frac{3}{4}$ | 4 |
| | HWL-516 | Lock Washer $\frac{5}{16}$ | 4 |
| | HN-516-18 | Nut $\frac{5}{16}$ - 18 | 4 |
| C | 42-216 | Left Blade Clip | 1 |

INSTALLATION INSTRUCTIONS

1. Install Grader Blade to Attachment Lift by sliding tabs onto clevis pins and secure with bridge pins.
2. Install right and left blade clips (Ref A and C) on seat panel. If holes need to be drilled, drill (4) $\frac{11}{32}$ holes 5.75" off each side of center back and 1" and $3\frac{1}{2}$ " up from the bottom. Blade clips are for grader blade (Ref 8) storage when not in use. Place notches on the top of the grader blade into slots on blade clips.
3. Turn machine on and test for proper operation.

42-178 INFIELD SCARIFIER WITH VERTICAL BLADES DRAWING

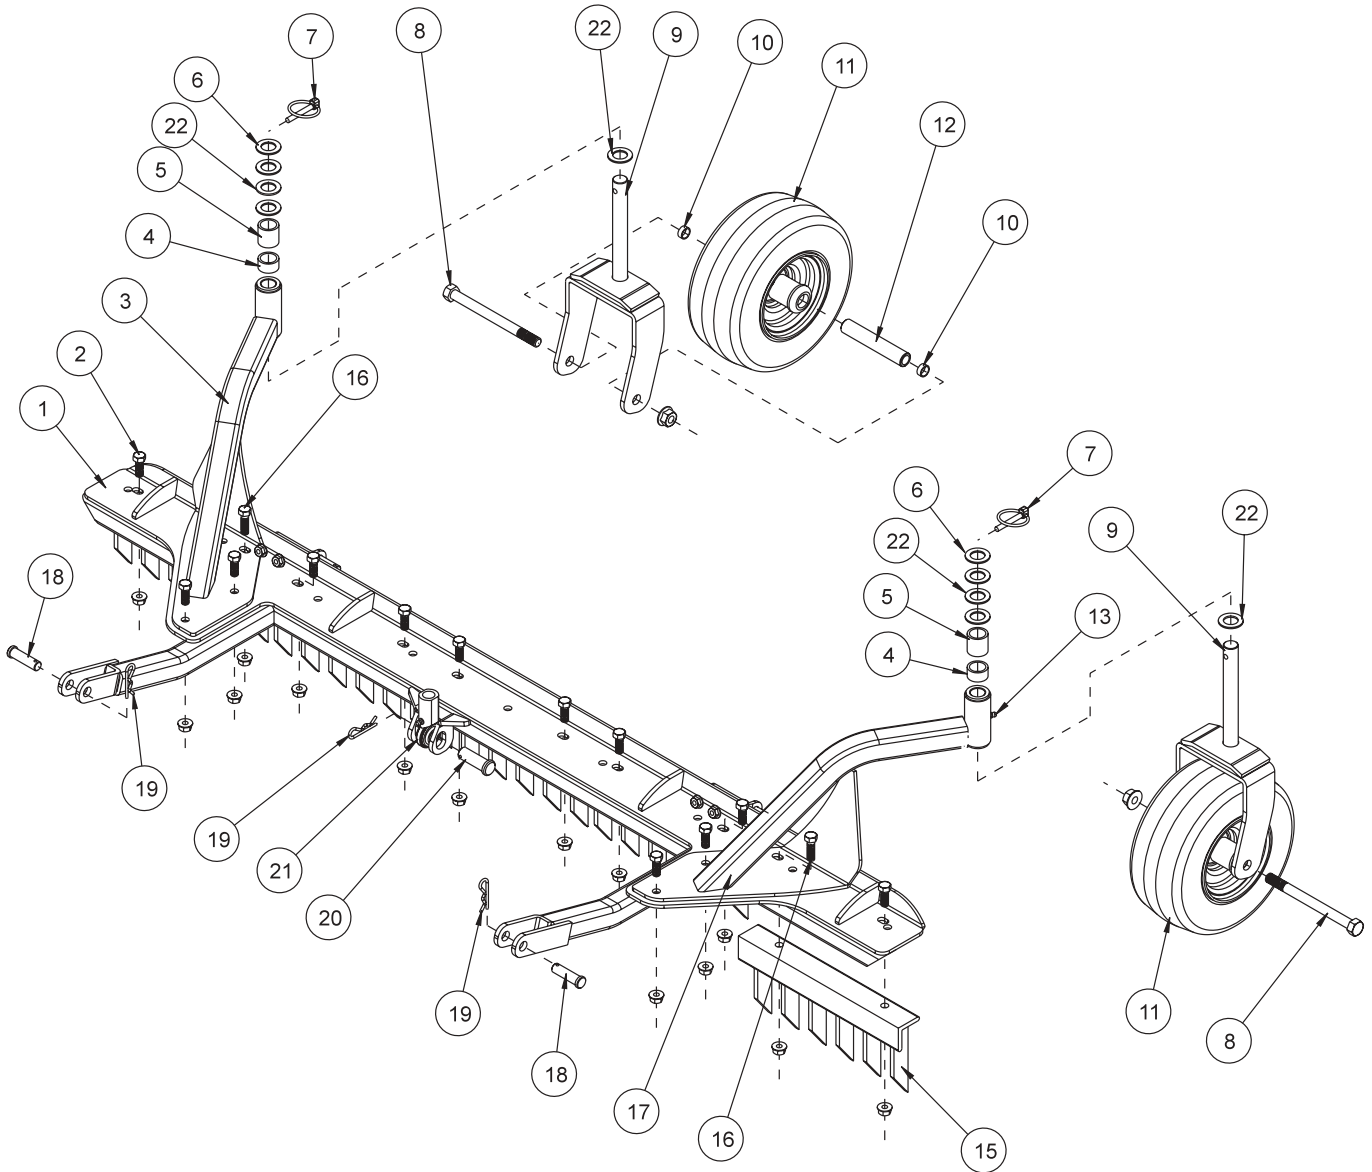


Accessories

42-178 INFIELD SCARIFIER WITH VERTICAL BLADES PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------------|--|----------|
| 1 | 42-203 | Attachment Lift Assembly | 1 |
| 2 | HB-38-16-100 | Bolt $\frac{3}{8}$ - 16 x 1 | 12 |
| | HNTL-38-16 | Lock Nut $\frac{3}{8}$ - 16 | 12 |
| 3 | 42-205 | Left Castor Wheel Bracket | 1 |
| | 10-025 | Bushing (part of 42-205) | 2 |
| 4 | 42-215 | Short Spacer | 2 |
| 5 | 42-214 | Long Spacer | 2 |
| 6 | HMB-34-14 | Machine Bushing $\frac{3}{4}$ x 14GA | 2 |
| 7 | 42-539 | Lynch Pin $\frac{5}{16}$ | 2 |
| 8 | HB-12-13-600 | Bolt $\frac{1}{2}$ -13 x 6 | 2 |
| | HNTL-12-13 | Lock Nut $\frac{1}{2}$ - 13 | 2 |
| 9 | 42-204 | Castor Fork | 2 |
| 10 | 42-212 | Castor Wheel Spacer | 4 |
| 11 | 42-202 | Tire and Wheel | 2 |
| | 42-202-01 | Tire 9 x 3.5 x 4 Ply | 2 |
| | 42-202-02 | Wheel | 2 |
| | 42-202-03 | Cap | 2 |
| | 42-202-04 | Bearing | 2 |
| | 42-202-05 | Seal | 2 |
| 12 | 42-213 | Axle Bearing | 2 |
| 13 | HG-14-28-180 | Grease Fitting $\frac{1}{4}$ - 28 x 180° (part of 42-205 and 42-206) | 2 |
| 15 | 26-042 | Tine Segment | 5 |
| 16 | HB-38-16-125 | Bolt $\frac{3}{8}$ - 16 x $1\frac{1}{4}$ | 2 |
| | HNTL-38-16 | Lock Nut $\frac{3}{8}$ - 16 | 2 |
| 17 | 42-206 | Right Castor Wheel Bracket | 1 |
| | 10-025 | Bushing (part of 42-205) | 2 |
| 18 | HCP-12-200 | Clevis Pin $\frac{1}{2}$ x 2 | 2 |
| 19 | HHP-18 | Bridge Pin $\frac{1}{8}$ | 3 |
| 20 | HCP-58-250 | Clevis Pin $\frac{5}{8}$ x $2\frac{1}{2}$ | 1 |
| 21 | 18-154 | Rod End (part of machine) | 1 |
| 22 | HMB-34-10 | Machine Bushing $\frac{3}{4}$ x 10GA | 8 |



42-178 SCARIFIER MOUNTING DRAWING

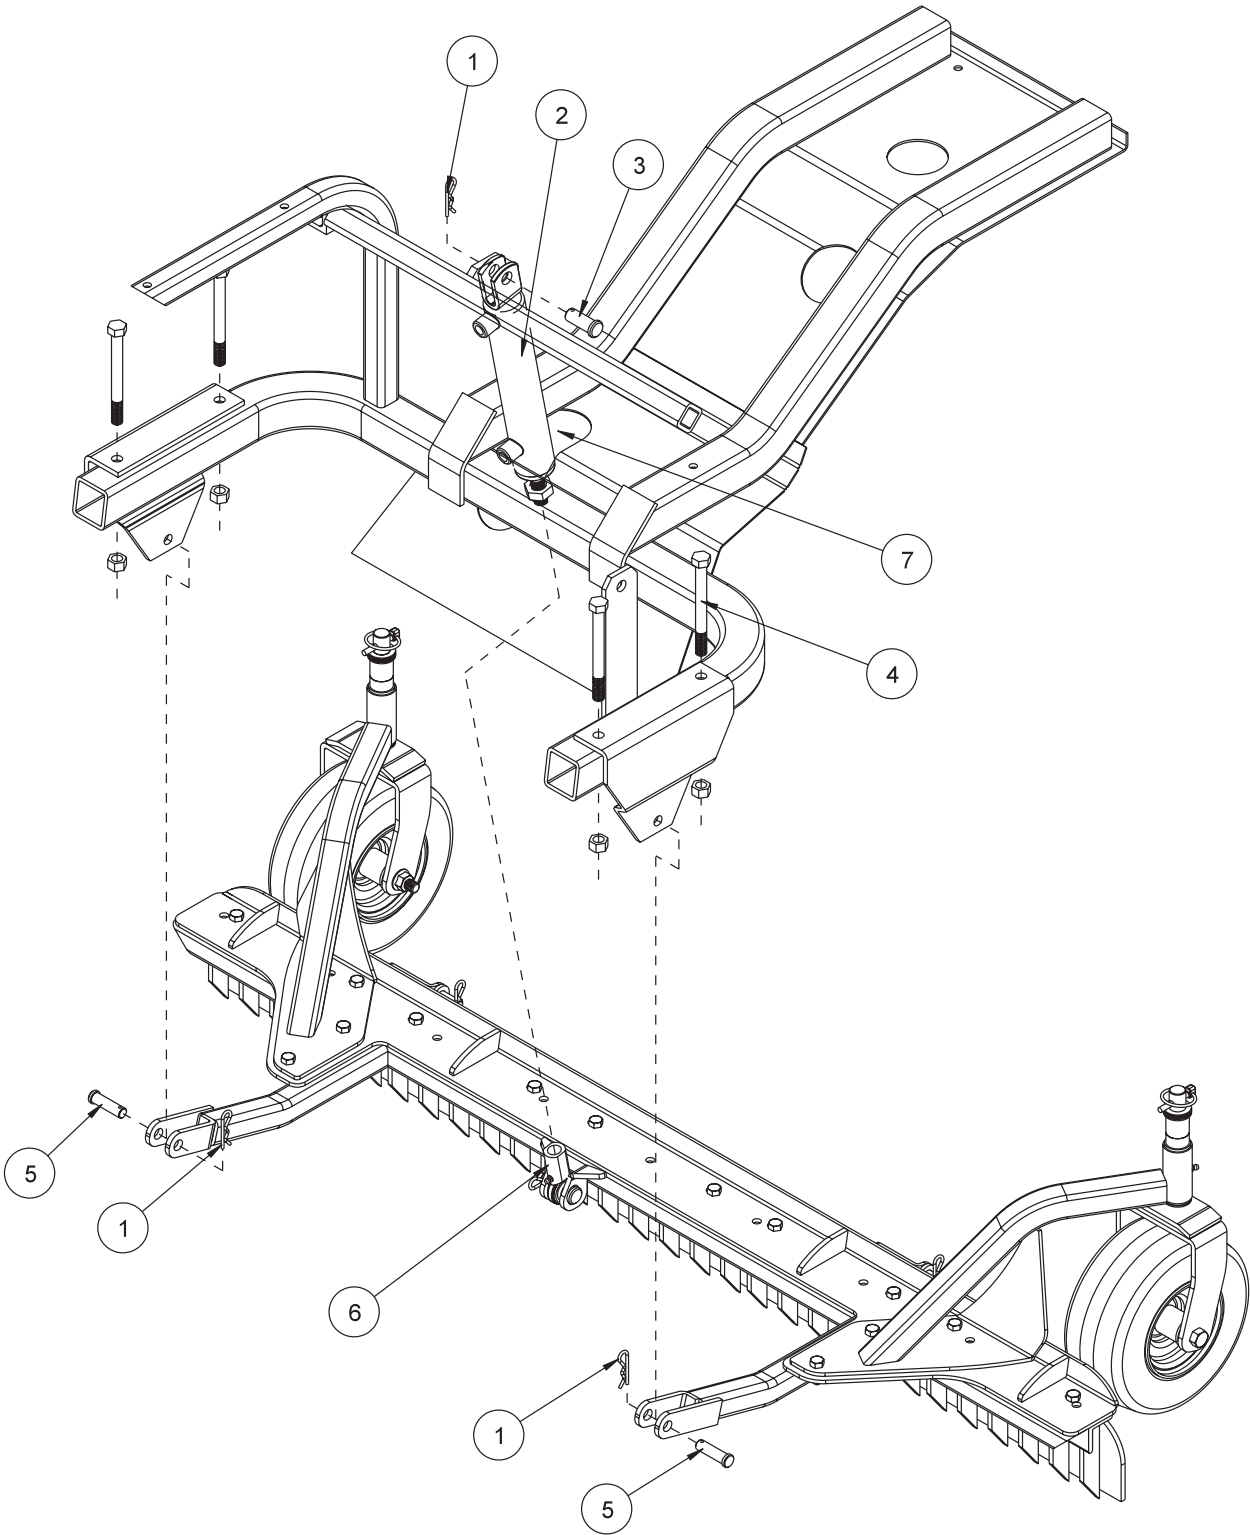

Accessories

42-178 SCARIFIER MOUNTING PARTS LIST


| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------------|--|----------|
| 1 | HHP-18 | Bridge Pin $\frac{1}{8}$ | 3 |
| 2 | 10-135 | Hydraulic Cylinder (part of machine) | 1 |
| 3 | HCP-58-175 | Clevis Pin $\frac{5}{8} \times 1\frac{3}{4}$ | 1 |
| 4 | HB-12-13-500 | Bolt $\frac{1}{2}$ - 13 x 5 | 4 |
| | HNTL-12-13 | Lock Nut $\frac{1}{2}$ - 13 | 4 |
| 5 | HCP-12-200 | Clevis Pin $\frac{1}{2}$ - 2 | 2 |
| 6 | 18-154 | Rod End (part of machine) | 1 |
| 7 | 42-217 | Cylinder Mount (part of machine) | 1 |

INSTALLATION INSTRUCTIONS

1. Assemble the Scarifier as shown on previous page.
2. Remove the rod end (Ref 6) on the hydraulic cylinder (Ref 2) from the cylinder mount (Ref 7). Remove the cylinder mount (Ref 7) from the machine.
- *3. Place the handle and linkage onto the empty linkage port of the two bank valve on the machine.
4. Slide the Scarifier under the machine lining up the hydraulic cylinder and the center of the attachment lift assembly.
5. Extend hydraulic cylinder all the way down by pushing the lever forward.
6. Mount the rod end of the cylinder onto the attachment lift assembly and secure with a clevis pin and bridge pin.
7. Attach the arms on the attachment lift to the attachment mount on the machine and secure with clevis pin and bridge pin.
8. Turn machine on and test for proper operation.
9. Adjust castor wheels by placing the short or long spacer on the castor wheel fork before placing the castor wheel assembly into the castor wheel brackets. Be sure both castor wheels are adjusted to the same height.

* For machines prior to serial numbers 4500 (3WD) and 12500 (2WD).

42-179 INFIELD SCARIFIER WITH CHISEL BLADES DRAWING

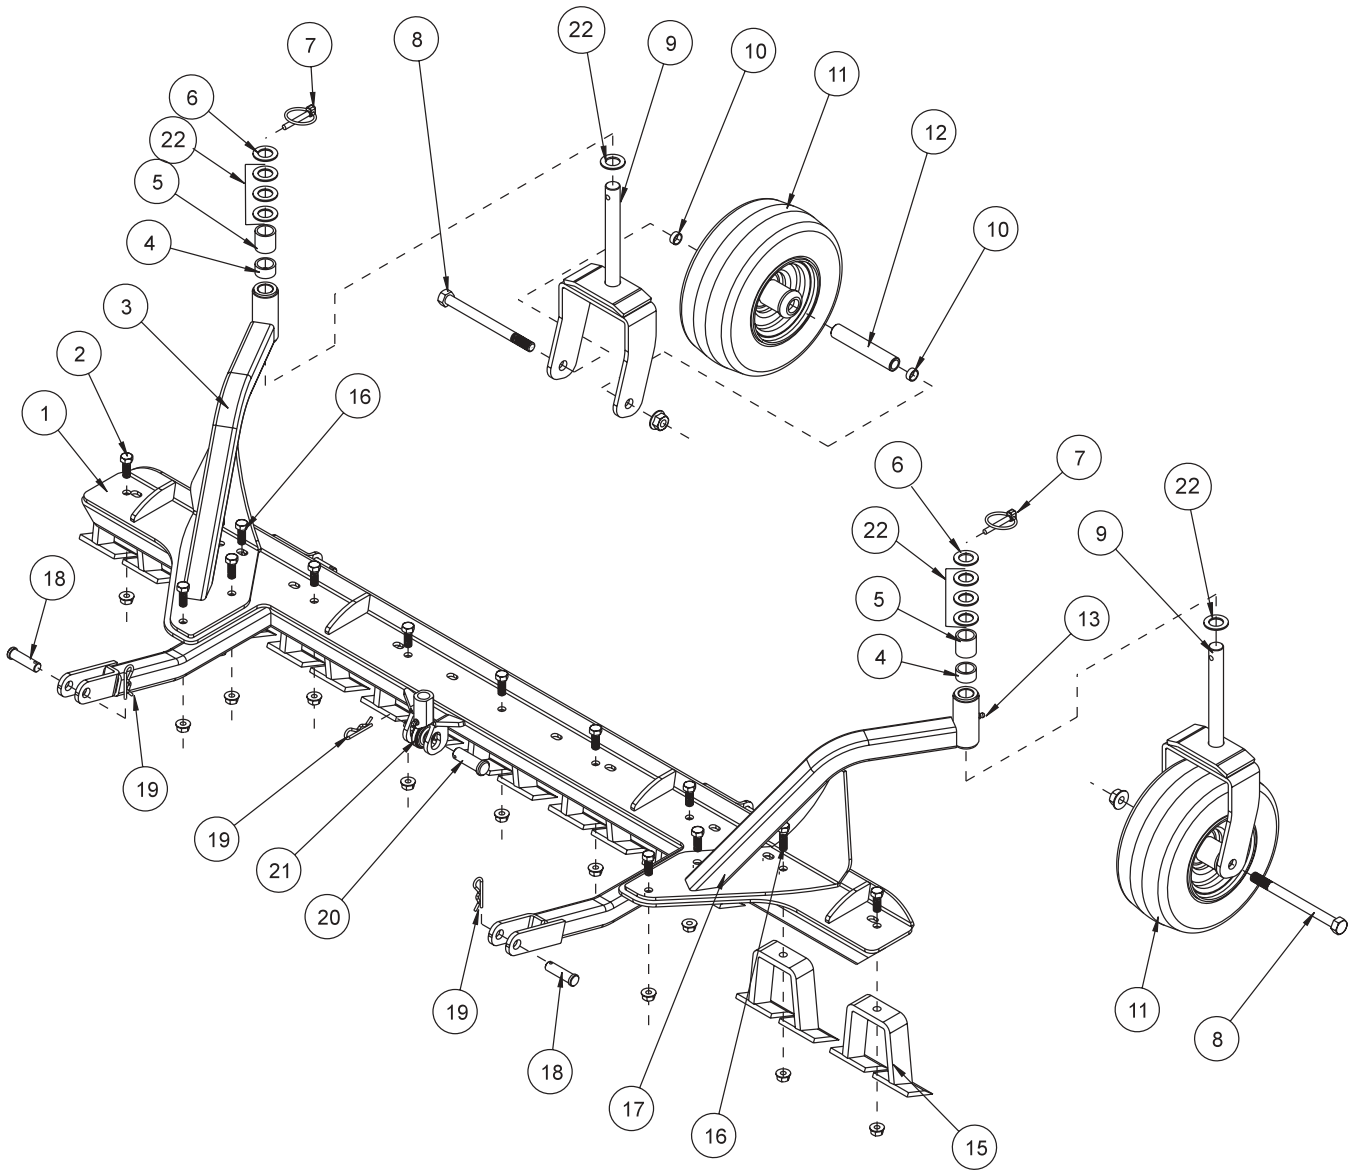


Accessories

42-179 INFIELD SCARIFIER WITH CHISEL BLADES PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------------|--|----------|
| 1 | 42-203 | Attachment Lift Assembly | 1 |
| 2 | HB-38-16-125 | Bolt $\frac{3}{8}$ - 16 x $1\frac{1}{4}$ | 11 |
| | HNTL-38-16 | Lock Nut $\frac{3}{8}$ - 16 | 11 |
| 3 | 42-205 | Left Castor Wheel Bracket | 1 |
| | 10-025 | Bushing (part of 42-205) | 2 |
| 4 | 42-215 | Short Spacer | 2 |
| 5 | 42-214 | Long Spacer | 2 |
| 6 | HMB-34-14 | Machine Bushing $\frac{3}{4}$ x 14GA | 2 |
| 7 | 42-539 | Lynch Pin $\frac{5}{16}$ | 2 |
| 8 | HB-12-13-600 | Bolt $\frac{1}{2}$ -13 x 6 | 2 |
| | HNTL-12-13 | Lock Nut $\frac{1}{2}$ - 13 | 2 |
| 9 | 42-204 | Castor Fork | 2 |
| 10 | 42-212 | Castor Wheel Spacer | 4 |
| 11 | 42-202 | Tire and Wheel | 2 |
| | 42-202-01 | Tire 9 x 3.5 x 4 Ply | 2 |
| | 42-202-02 | Wheel | 2 |
| | 42-202-03 | Cap | 2 |
| | 42-202-04 | Bearing | 2 |
| | 42-202-05 | Seal | 2 |
| 12 | 42-213 | Axle Bearing | 2 |
| 13 | HG-14-28-180 | Grease Fitting $\frac{1}{4}$ - 28 x 180° (part of 42-205 and 42-206) | 2 |
| 15 | 13-114 | Digger Blade | 9 |
| 16 | HB-38-16-150 | Bolt $\frac{3}{8}$ - 16 x $1\frac{1}{2}$ | 2 |
| | HNTL-38-16 | Lock Nut $\frac{3}{8}$ - 16 | 2 |
| 17 | 42-206 | Right Castor Wheel Bracket | 1 |
| | 10-025 | Bushing (part of 42-205) | 2 |
| 18 | HCP-12-200 | Clevis Pin $\frac{1}{2}$ x 2 | 2 |
| 19 | HHP-18 | Bridge Pin $\frac{1}{8}$ | 3 |
| 20 | HCP-58-250 | Clevis Pin $\frac{5}{8}$ x $2\frac{1}{2}$ | 1 |
| 21 | 18-154 | Rod End (part of machine) | 1 |
| 22 | HMB-34-10 | Machine Bushing $\frac{3}{4}$ x 10GA | 8 |

42-179 SCARIFIER MOUNTING DRAWING

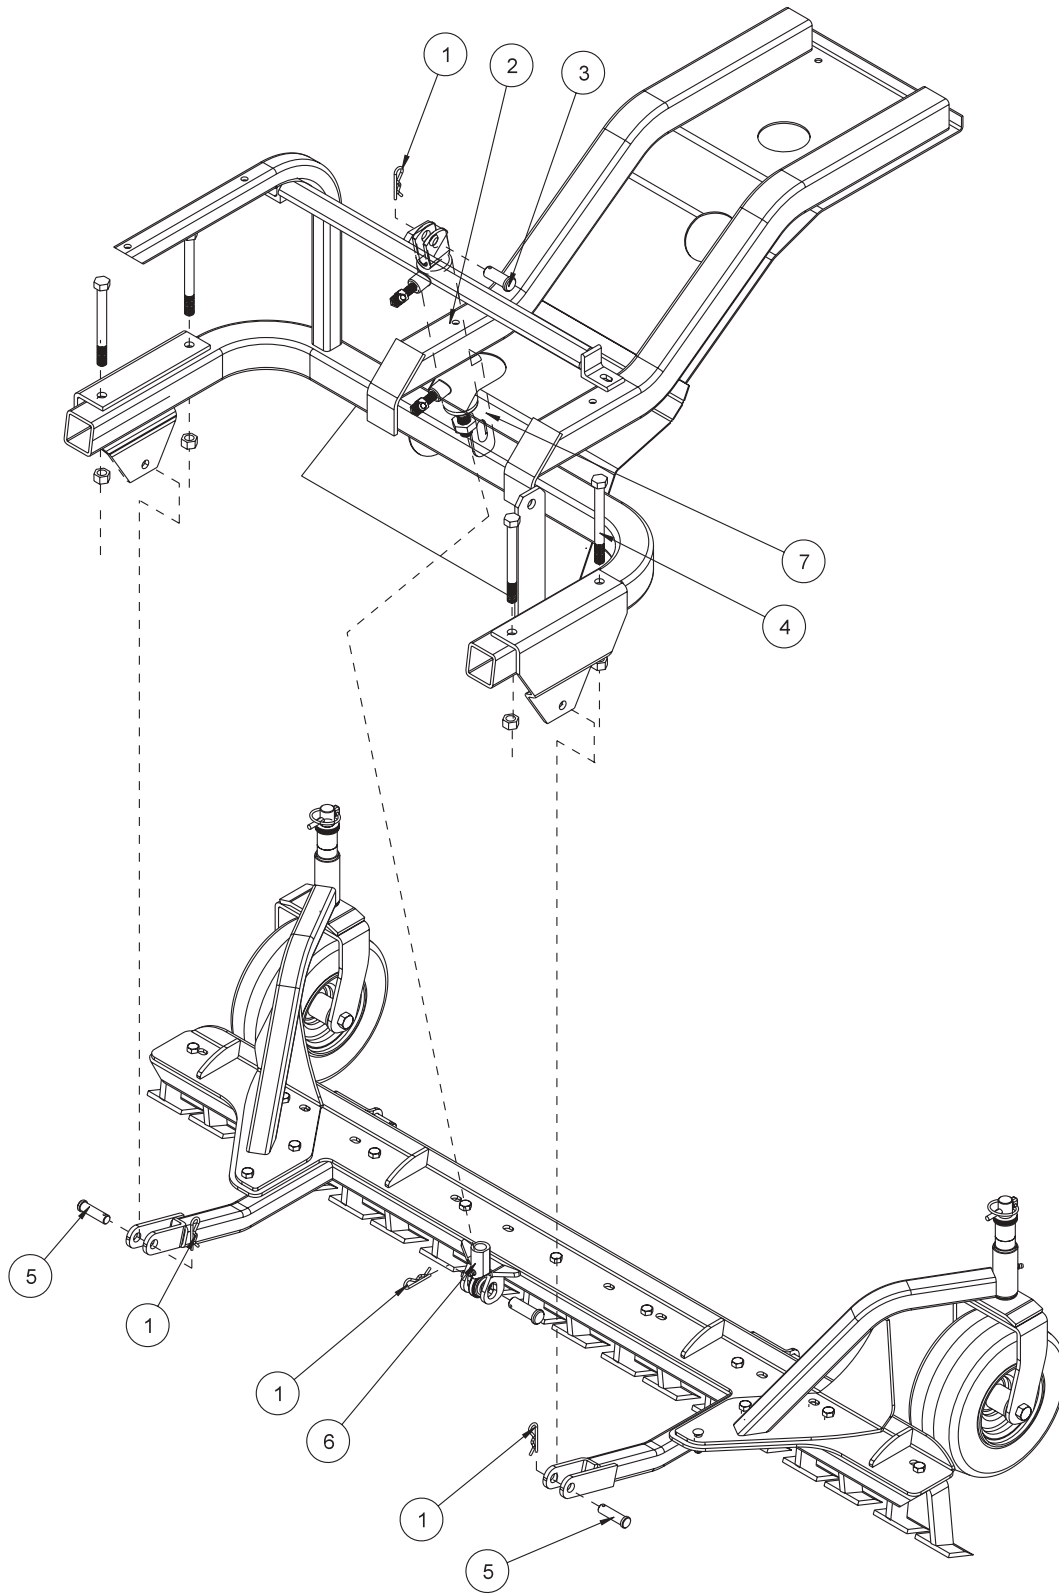

Accessories

42-179 SCARIFIER MOUNTING PARTSLIST


| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------------|--|----------|
| 1 | HHP-18 | Bridge Pin $\frac{1}{8}$ | 3 |
| 2 | 10-135 | Hydraulic Cylinder (part of machine) | 1 |
| 3 | HCP-58-175 | Clevis Pin $\frac{5}{8} \times 1\frac{3}{4}$ | 1 |
| 4 | HB-12-13-500 | Bolt $\frac{1}{2}$ - 13 x 5 | 4 |
| | HNTL-12-13 | Lock Nut $\frac{1}{2}$ - 13 | 4 |
| 5 | HCP-12-200 | Clevis Pin $\frac{1}{2}$ - 2 | 2 |
| 6 | 18-154 | Rod End (part of machine) | 1 |
| 7 | 42-217 | Cylinder Mount (part of machine) | 1 |

INSTALLATION INSTRUCTIONS

1. Assemble the Scarifier as shown on previous page.
2. Remove the rod end (Ref 6) on the hydraulic cylinder (Ref 2) from the cylinder mount (Ref 7). Remove the cylinder mount (Ref 7) from the machine.
- *3. Place the handle and linkage onto the empty linkage port of the two bank valve on the machine.
4. Slide the Scarifier under the machine lining up the hydraulic cylinder and the center of the attachment lift assembly.
5. Extend hydraulic cylinder all the way down by pushing the lever forward.
6. Mount the rod end of the cylinder onto the attachment lift assembly and secure with a clevis pin and bridge pin.
7. Attach the arms on the attachment lift to the attachment mount on the machine and secure with clevis pin and bridge pin.
8. Turn machine on and test for proper operation.
9. Adjust castor wheels by placing the short or long spacer on the castor wheel fork before placing the castor wheel assembly into the castor wheel brackets. Be sure both castor wheels are adjusted to the same height.

* For machines prior to serial numbers 4500 (3WD) and 12500 (2WD).

42-285 SCARIFIER WITH VERTICAL BLADES

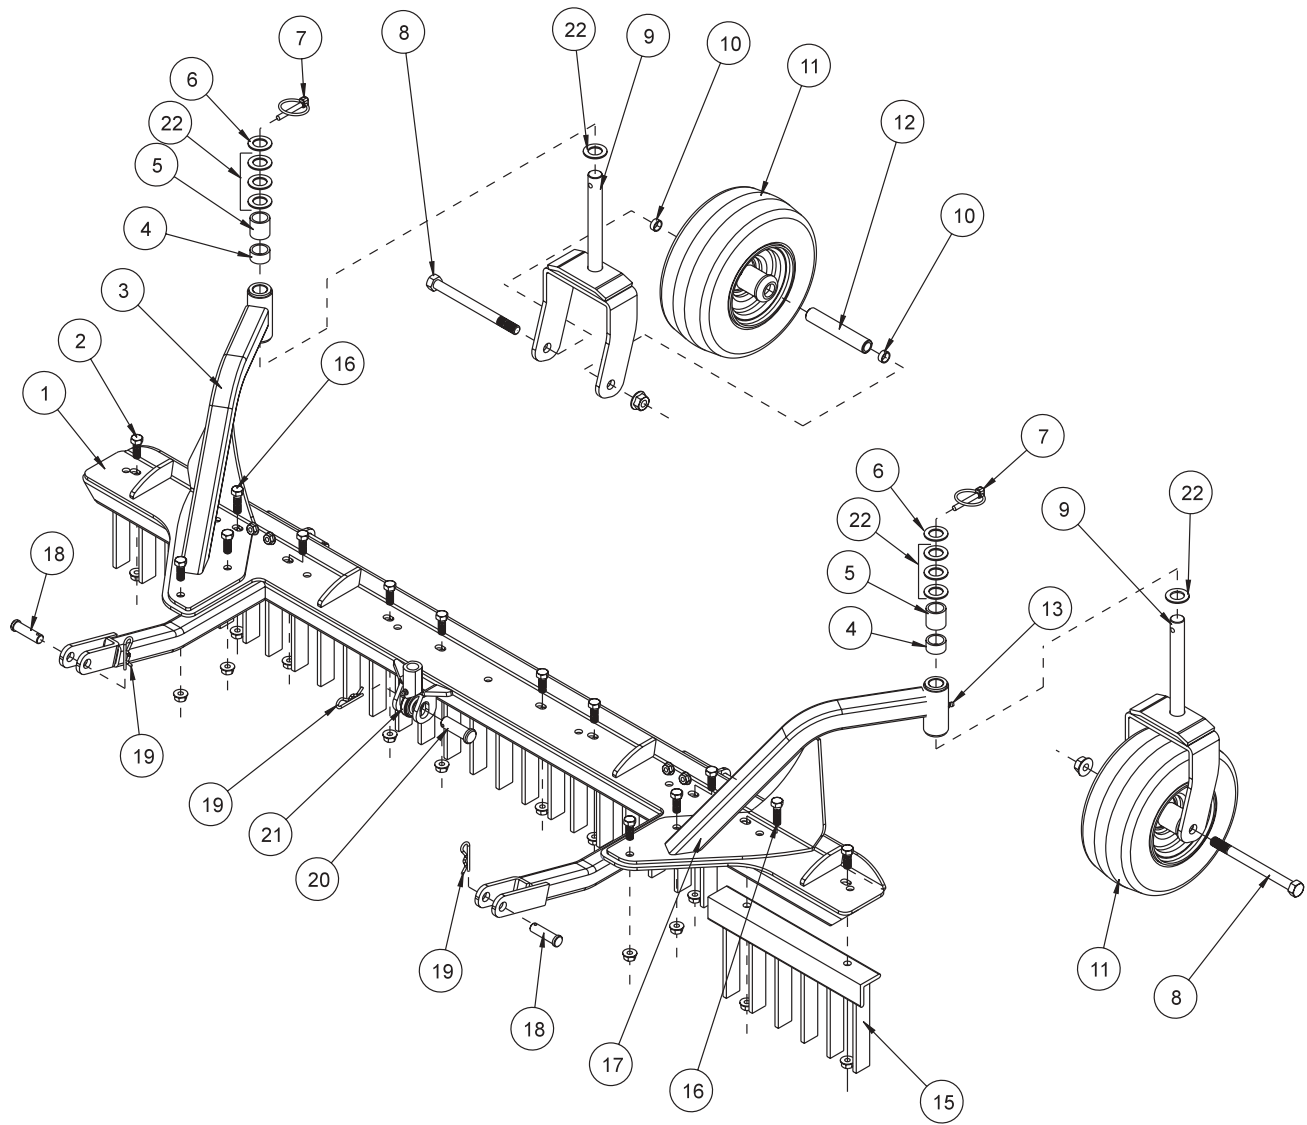


Accessories

42-285 SCARIFIER WITH VERTICAL BLADES PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------------|--|----------|
| 1 | 42-203 | Attachment Lift Assembly | 1 |
| 2 | HB-38-16-100 | Bolt $\frac{3}{8}$ - 16 x 1 | 12 |
| | HNTL-38-16 | Lock Nut $\frac{3}{8}$ - 16 | 12 |
| 3 | 42-288 | Left Castor Wheel Bracket | 1 |
| | 10-025 | Bushing (part of 42-288) | 2 |
| 4 | 42-215 | Short Spacer | 2 |
| 5 | 42-214 | Long Spacer | 2 |
| 6 | HMB-34-14 | Machine Bushing $\frac{3}{4}$ x 14GA | 2 |
| 7 | 42-539 | Lynch Pin $\frac{5}{16}$ | 2 |
| 8 | HB-12-13-600 | Bolt $\frac{1}{2}$ -13 x 6 | 2 |
| | HNTL-12-13 | Lock Nut $\frac{1}{2}$ - 13 | 2 |
| 9 | 42-204 | Castor Fork | 2 |
| 10 | 42-212 | Castor Wheel Spacer | 4 |
| 11 | 42-202 | Tire and Wheel | 2 |
| | 42-202-01 | Tire 9 x 3.5 x 4 Ply | 2 |
| | 42-202-02 | Wheel | 2 |
| | 42-202-03 | Cap | 4 |
| | 42-202-04 | Bearing | 4 |
| | 42-202-05 | Seal | 4 |
| 12 | 42-213 | Axle Bearing | 2 |
| 13 | HG-14-28-180 | Grease Fitting $\frac{1}{4}$ - 28 x 180° (part of 42-288 and 42-289) | 2 |
| 15 | 42-241 | Tine Segment | 5 |
| 16 | HB-38-16-125 | Bolt $\frac{3}{8}$ - 16 x 1 $\frac{1}{4}$ | 2 |
| | HNTL-38-16 | Lock Nut $\frac{3}{8}$ - 16 | 2 |
| 17 | 42-289 | Right Castor Wheel Bracket | 1 |
| | 10-025 | Bushing (part of 42-289) | 2 |
| 18 | HCP-12-175 | Clevis Pin $\frac{1}{2}$ x 1 $\frac{3}{4}$ | 2 |
| 19 | HHP-18 | Bridge Pin $\frac{1}{8}$ | 3 |
| 20 | HCP-58-250 | Clevis Pin $\frac{5}{8}$ x 2 $\frac{1}{2}$ | 1 |
| 21 | 18-154 | Rod End (part of machine) | 1 |
| 22 | HMB-34-10 | Machine Bushing $\frac{3}{4}$ x 10GA | 8 |

42-285 SCARIFIER WITH VERTICAL BLADES MOUNTING DRAWING

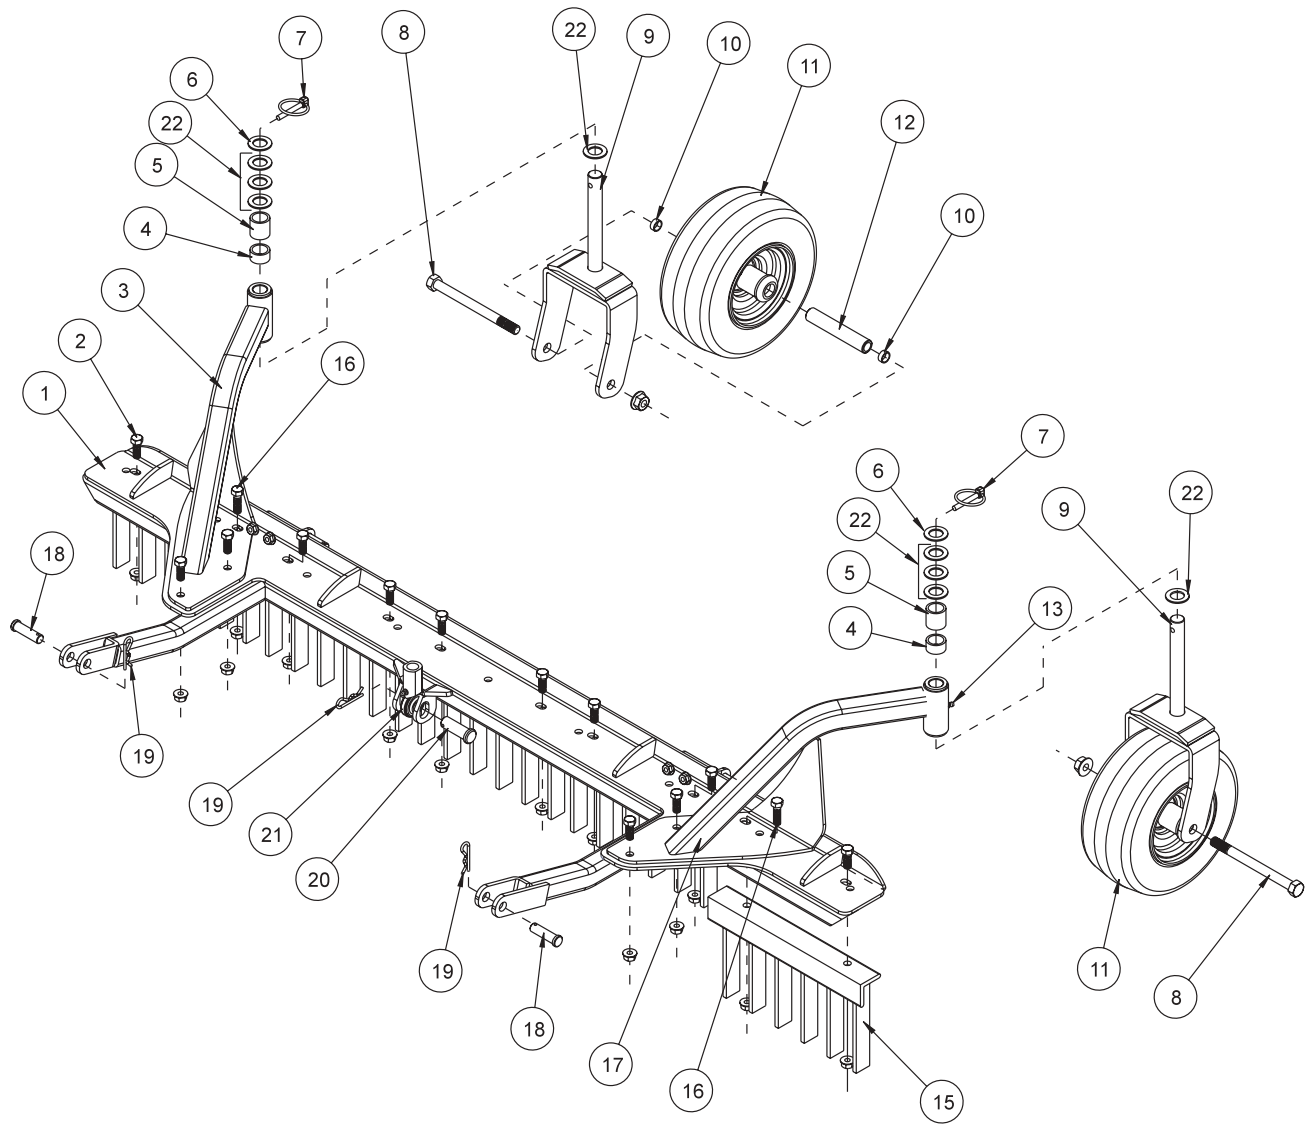

Accessories


42-285 SCARIFIER WITH VERTICAL BLADES MOUNTING PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------------|---|----------|
| 1 | HHP-18 | Bridge Pin $\frac{1}{8}$ | 3 |
| 2 | | Hydraulic Cylinder (part of machine) | 1 |
| 3 | HCP-58-175 | Clevis Pin $\frac{5}{8} \times 1\frac{3}{4}$ | 1 |
| 4 | HB-12-13-500 | Bolt $\frac{1}{2}$ - 13 x 5 (part of machine) | 4 |
| | HNTL-12-13 | Lock Nut $\frac{1}{2}$ - 13 (part of machine) | 4 |
| 5 | HCP-12-175 | Clevis Pin $\frac{1}{2}$ - $1\frac{3}{4}$ | 2 |
| 6 | 18-154 | Rod End (part of machine) | 1 |
| 7 | 42-217 | Cylinder Mount (temporary part of machine) | 1 |


INSTALLATION INSTRUCTIONS

1. Assemble the Scarifier as shown on previous page.
2. Disconnect the rod end (Ref 6) on the hydraulic cylinder (Ref 2) from the cylinder mount (Ref 7). Remove the cylinder mount (Ref 7) from the machine.
3. Place the handle and linkage onto the empty linkage port of the two bank valve on the machine.
4. Slide the Scarifier under the machine lining up the hydraulic cylinder and the center of the attachment lift assembly.
5. Extend hydraulic cylinder all the way down by pushing the lever forward.
6. Mount the rod end of the cylinder onto the attachment lift assembly and secure with a clevis pin and bridge pin.
7. Attach the arms on the attachment lift to the attachment mount on the machine and secure with clevis pin and bridge pin.
8. Turn machine on and test for proper operation.
9. Adjust castor wheels by placing the short or long spacer on the castor wheel fork before placing the castor wheel assembly into the castor wheel brackets. Be sure both castor wheels are adjusted to the same height.

42-700 WIRING DIAGRAM

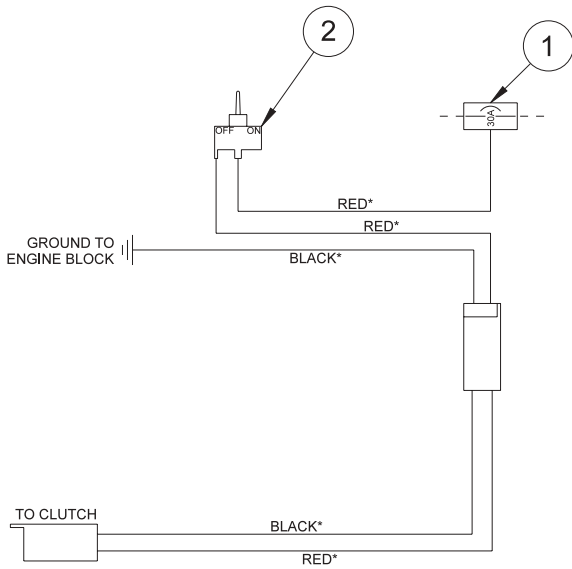

42-700 LEAF & DEBRIS BLOWER DRAWING

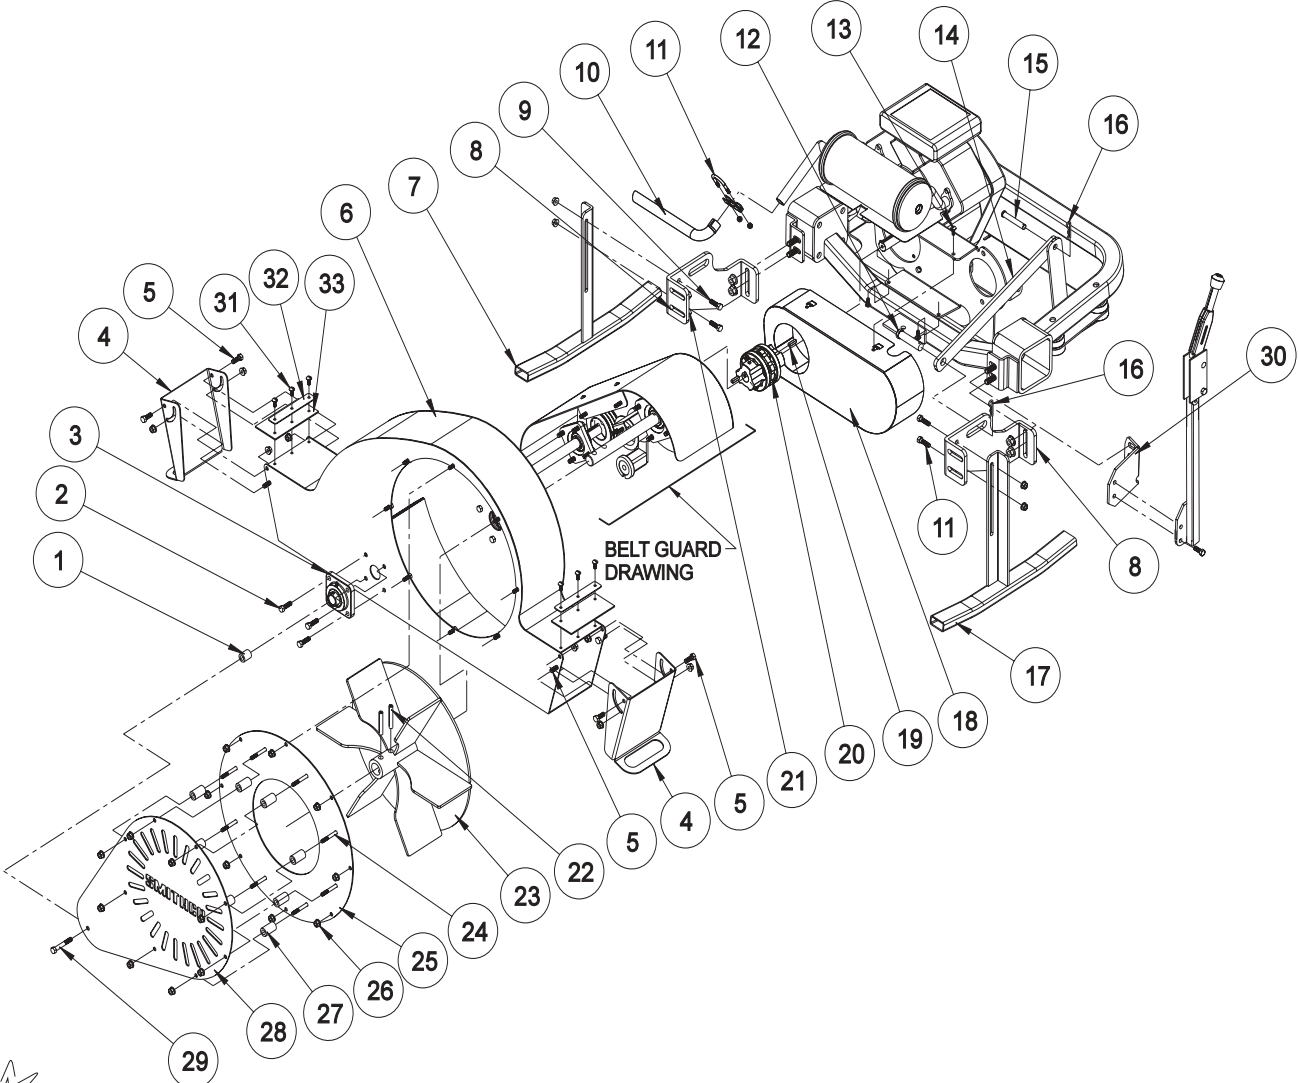

Accessories


42-700 WIRING DIAGRAM PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------|--|----------|
| 1 | 8975 | 30 Amp Circuit Breaker (on machine) | |
| 2 | 12-003 | Toggle Switch | 1 |
| | 15-472 | Switch Boot | 1 |
| * | 42-701 | Wire Harness (included all wires with *) | 1 |

42-700 LEAF & DEBRIS BLOWER PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|----------------|---|----------|
| 1 | 42-703 | Short Guard Spacer | 1 |
| 2 | HB-38-16-125 | Bolt, $\frac{3}{8}$ -16 x $1\frac{1}{4}$ | 7 |
| | HNFL-38-16 | Flange Whiz-Lock Nut, $\frac{3}{8}$ -16 | 7 |
| 3 | 78-222 | Mounted Bearing (1" Bore) | 1 |
| 4 | 42-709 | Damper | 2 |
| | 8803-12 | Black Trim, 12" | 2 |
| | 25-286 | Decal, <i>Pinch Point</i> (one per Damper) | 2 |
| 5 | HB-38-16-100 | Bolt, $\frac{3}{8}$ -16 x 1 | 8 |
| | HNTL-38-16 | Lock Nut, $\frac{3}{8}$ -16 | 8 |
| 6 | 42-706 | Housing | 1 |
| 7 | 42-705 | Left Hand Blower Stand | 1 |
| 8 | 42-707 | Blower Mount Bracket | 2 |
| 9 | HNFL-12-13 | Flange Whiz-Lock Nut, $\frac{1}{2}$ - 13 | 4 |
| 10 | 13-493 | Muffler Extension | 1 |
| 11 | 13-498 | Clamp | 1 |
| 12 | HCP-34-250 | Clevis Pin, $\frac{3}{4}$ x $2\frac{1}{2}$ | 1 |
| 13 | HSTP-14-20-075 | Phillips Head Machine Screw, $\frac{1}{4}$ - 20 x $\frac{3}{4}$ | 4 |
| 14 | 42-714 | Cylinder Stop | 1 |
| 15 | HCP-12-300 | Clevis Pin, $\frac{1}{2}$ x 3 | 1 |
| 16 | HHP-18 | Bridge Pin, $\frac{1}{8}$ | 2 |
| 17 | 42-704 | Right Hand Blower Stand | 1 |
| 18 | 42-718 | Belt Guard | 1 |
| | 78-274 | Cage Nuts | 4 |
| | 16-088 | Decal, <i>Moving Parts / Hot</i> | 1 |
| 19 | HKSQ-14-100 | Machine Key, $\frac{1}{4}$ x $\frac{1}{4}$ x 1 | 3 |
| 20 | 42-719 | Coupling | 1 |
| 21 | HB-12-13-100 | Bolt, $\frac{1}{4}$ -20 x 1 | 4 |
| 22 | 78-347 | Spring Pin | 2 |
| 23 | 78-301 | Fan | 1 |
| 24 | HB-516-18-225 | Bolt, $\frac{5}{16}$ -18 x $2\frac{1}{4}$ | 8 |
| | HNFL-516-18 | Flange Whiz-Lock Nut, $\frac{5}{16}$ -18 | 8 |
| 25 | 42-711 | Vent Plate | 1 |
| 26 | HNFL-516-18 | Flange Whiz-Lock Nut, $\frac{5}{16}$ -18 | 8 |
| 27 | 42-702 | Guard Spacer | 8 |
| 28 | 42-710 | Guard | 1 |
| | 76-305 | Decal, <i>Rotating Parts</i> | 1 |
| 29 | HB-38-16-250 | Bolt, $\frac{3}{8}$ - 16 x $2\frac{1}{2}$ | 1 |
| | HNFL-38-16 | Flange Whiz-Lock Nut, $\frac{3}{8}$ -16 | 1 |
| 30 | 42-190 | Park Brake Bracket | 1 |
| 31 | HSDPS-14-075 | Pan Head Drill Screw, $\frac{1}{4}$ X $\frac{3}{4}$ | 6 |
| 32 | 42-720 | Seal Plate | 2 |
| 33 | 42-721 | Damper Seal | 2 |

42-700 LEAF & DEBRIS BLOWER - BELT GUARD DRAWING

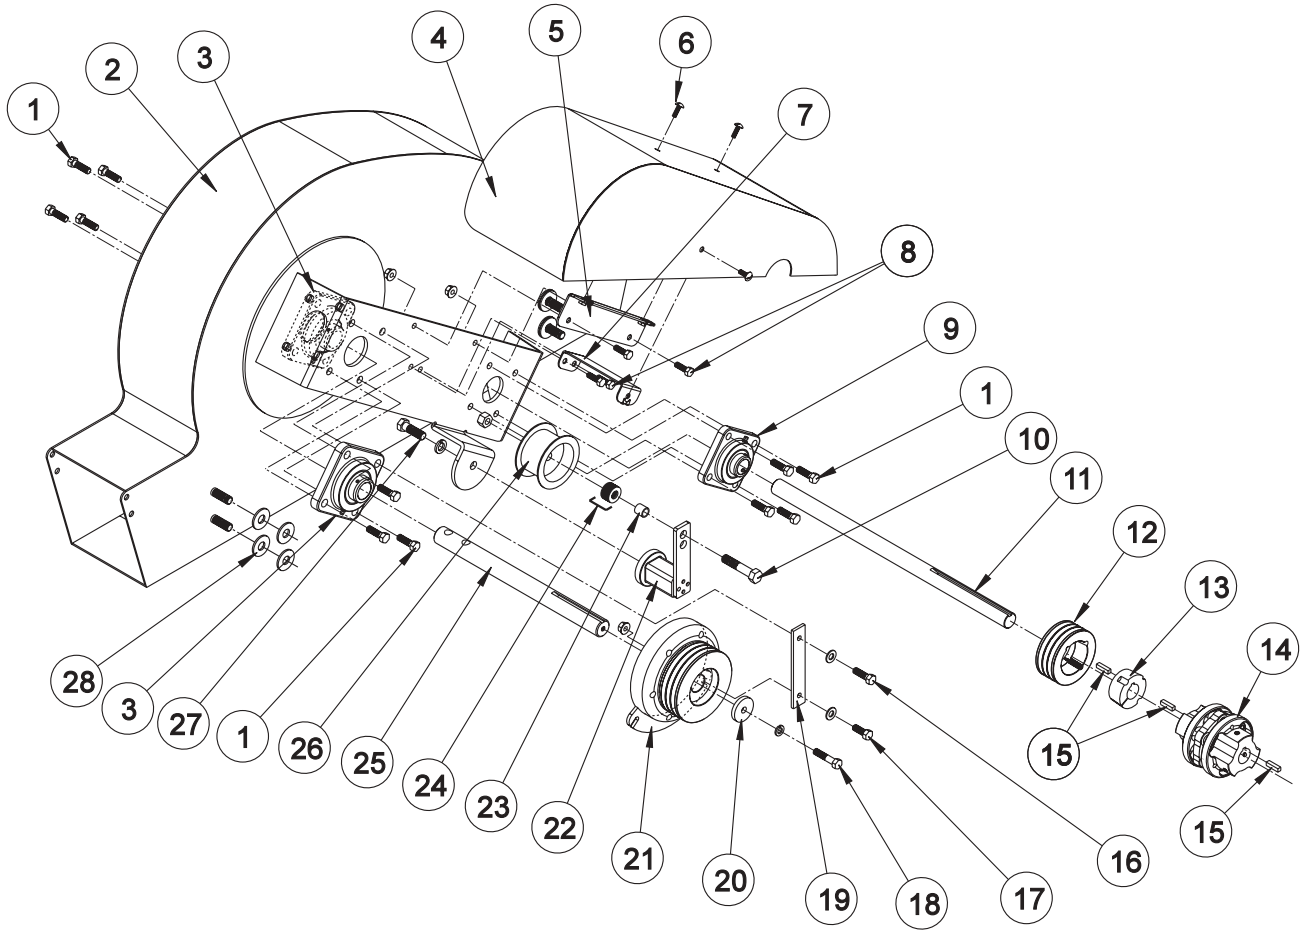


Accessories

42-700 LEAF & DEBRIS BLOWER - BELT GUARD DRAWING PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|-------------------------|---|----------|
| 1 | HB-38-16-125 | Bolt, $\frac{3}{8}$ -16 x $1\frac{1}{4}$ | 11 |
| | HNFL-38-16 | Flange Whiz-Lock Nut, $\frac{3}{8}$ -16 | 11 |
| 2 | 42-706 | Housing | 1 |
| 3 | 78-223 | Mounted Bearing ($1\frac{1}{8}$ Bore) | 2 |
| 4 | 42-715 | Belt Guard | 1 |
| | 8803-32 | Black Trim, 32" | 1 |
| | 16-088 | Decal, <i>Moving Parts / Hot</i> | 1 |
| 5 | 42-712 | Upper Guard Bracket | 1 |
| | 78-274 | Cage Nut | 2 |
| 6 | HSTP-14-20-075 | Phillips Head Machine Screw, $\frac{1}{4}$ - 20 x $\frac{3}{4}$ | 3 |
| 7 | 42-713 | Lower Guard Bracket | 1 |
| | 78-274 | Cage Nut | 1 |
| 8 | HB-516-18-100 | Bolt, $\frac{5}{16}$ -18 x 1 | 4 |
| | HNFL-516-18 | Flange Whiz-Lock Nut, $\frac{5}{16}$ -18 | 4 |
| 9 | 78-222 | Mounted Bearing (1" Bore) | 1 |
| 10 | HB-12-13-250 | Bolt, $\frac{1}{2}$ - 13 x $2\frac{1}{2}$ (part of 78-224) | 1 |
| | HNCL-12-13 | Center Lock Nut, $\frac{1}{2}$ - 13 (part of 78-224) | 1 |
| 11 | 42-708 | Drive Shaft | 1 |
| 12 | 78-424 | Pulley | 1 |
| 13 | 78-429 | Hub | 1 |
| 14 | 42-719 | Coupling | 1 |
| 15 | HKSQ-14-100 | Machine Key, $\frac{1}{4}$ x $\frac{1}{4}$ x 1 | 3 |
| 16 | HB-38-16-125 | Bolt, $\frac{3}{8}$ -16 x $1\frac{1}{4}$ | 1 |
| | HW-38 | Flat Washer, $\frac{3}{8}$ | 1 |
| | HNFL-38-16 | Flange Whiz-Lock Nut, $\frac{3}{8}$ -16 | 1 |
| 17 | HB-38-16-100 | Bolt, $\frac{3}{8}$ -16 x 1 | 1 |
| | HW-38 | Flat Washer, $\frac{3}{8}$ | 1 |
| | HNFL-38-16 | Flange Whiz-Lock Nut, $\frac{3}{8}$ -16 | 1 |
| 18 | HB-38-16-175 | Bolt, $\frac{3}{8}$ -16 x $1\frac{3}{4}$ | 1 |
| | HWL-38 | Lock Washer, $\frac{3}{8}$ | 1 |
| 19 | 76-340 | Clutch Strap | 1 |
| 20 | 78-370 | Washer | 1 |
| 21 | 78-368 | Electric Clutch | 1 |
| 22 | 78-224 | Tensioner | 1 |
| 23 | 78-275 | Spacer (part of 78-224) | 1 |
| 24 | HMB-12-14 | Machine Bushing, $\frac{1}{2}$ - 14ga (use as needed) | 10 |
| 25 | 78-336 | Shaft | 1 |
| 26 | 16-013 | Idler Pulley | 1 |
| 27 | HBM-12-1.75-40-G8 | Metric Bolt, M12-1.75 x 40 Grade 8 | 1 |
| | HWLM-12 | Metric Lock Washer, M12 | 1 |
| 28 | HW-12 | Flat Washer, $\frac{1}{2}$ (use as needed) | 8 |
| | <i>Not Illustrated:</i> | | |
| | 42-717 | Belt | 3 |




42-700 LEAF & DEBRIS BLOWER INSTALLATION

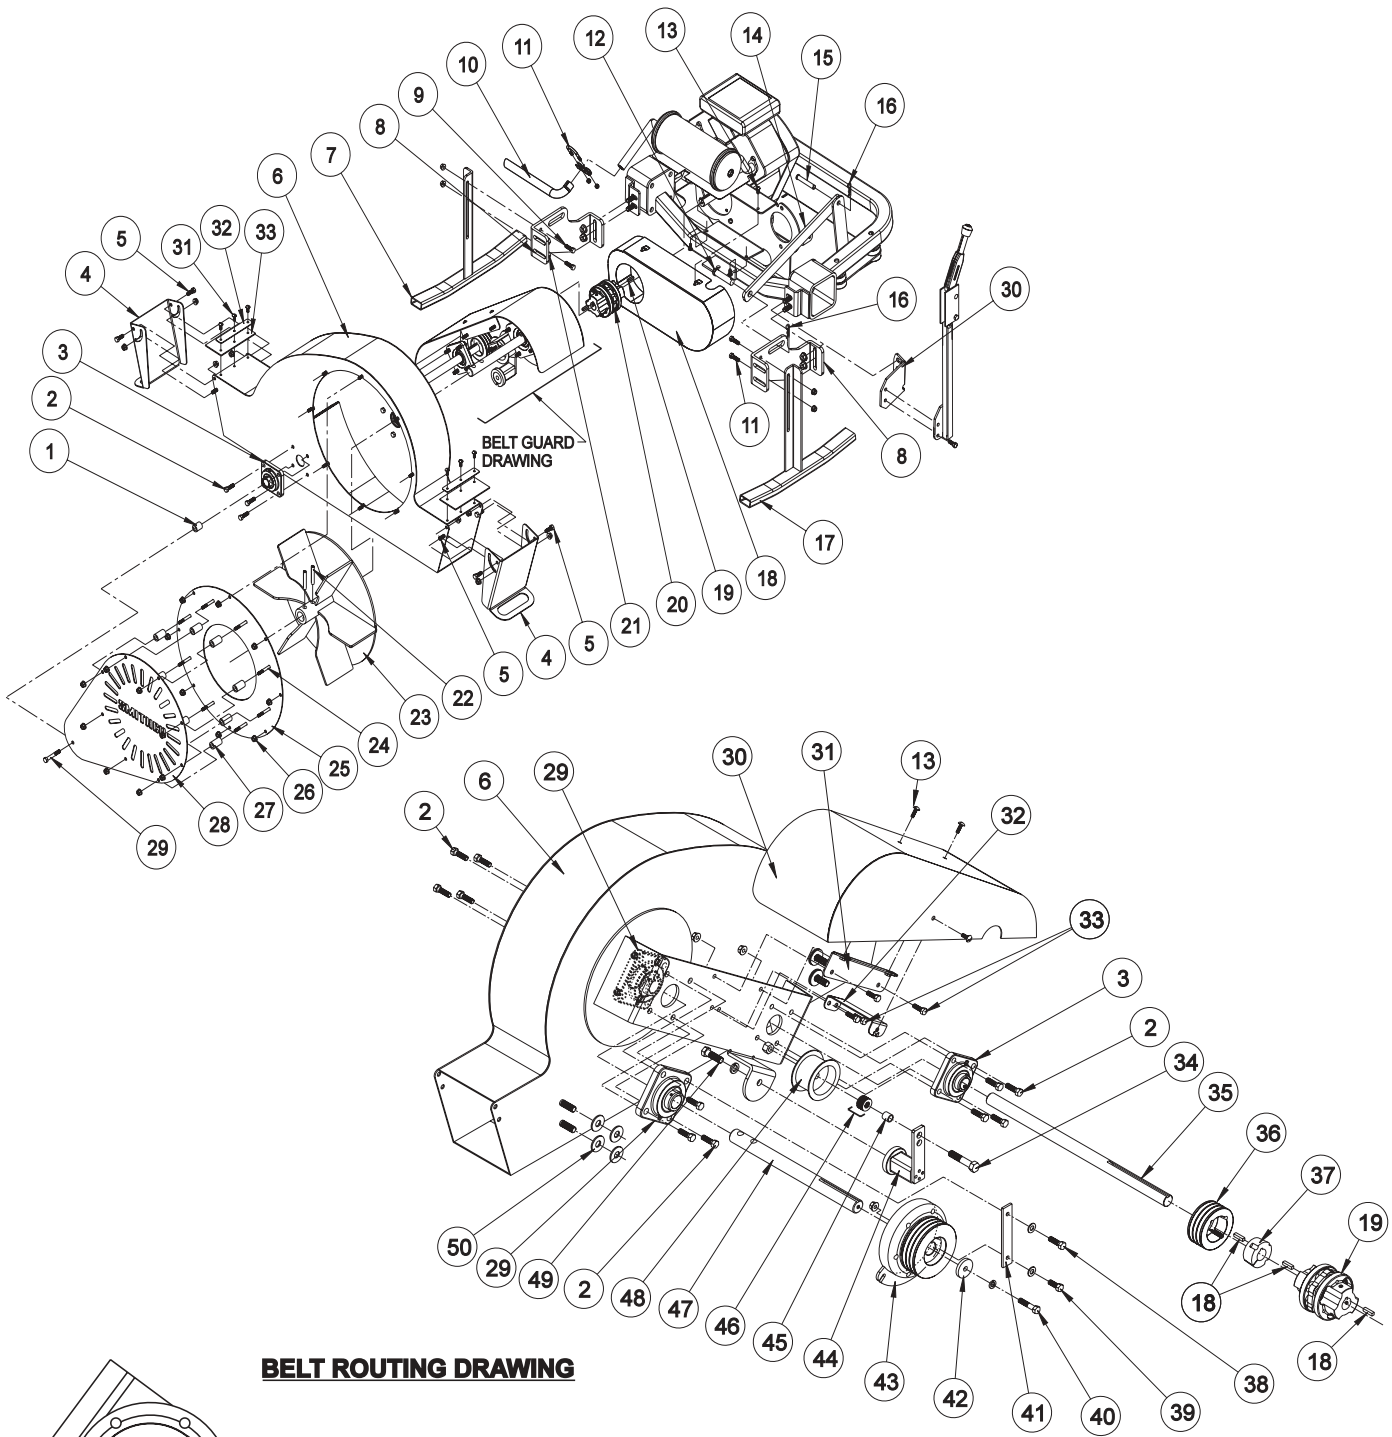

BELT GUARD DRAWING

BELT ROUTING DRAWING

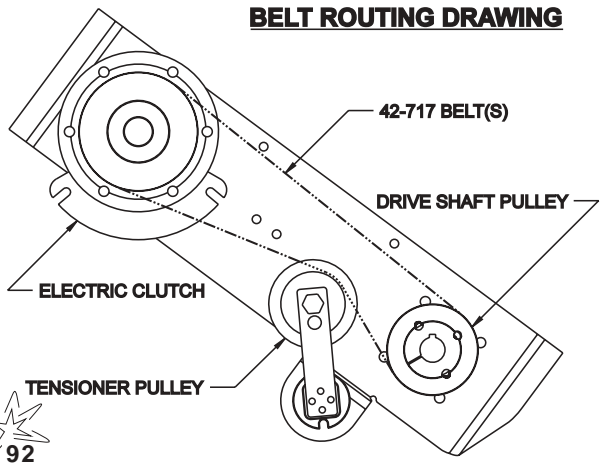

Accessories

Note: To install the **Leaf & Debris Blower**, the rake lift must be removed prior to installation. Install on a firm and level surface to achieve the best results.

1. Start by removing the Speed Boss Arm from the pump. Next remove the Park Brake Bracket from the Rake Lift. Now remove the Rake Lift from the machine. Reference the *Rear Axle Drawing* & the *Rake Lift Drawing* in your *Super Star P&S Manual* for illustrations.
2. Remove the current Belt Guard from the Pump Mount. Install one ¼ x ¼ x 1 Machine Key (Ref # 18) onto the Engine shaft. Slide one half of the Coupler (Ref # 19) tight to the pulley on the Engine shaft. Secure set screws using *Loctite® #262* and tighten. Reference the *Pump and Engine Drawing* in your *Super Star P&S Manual* for additional illustration. Replace the current belt guard with the Belt Guard (Ref # 17) that was included in the kit.
3. Remove the Belt Guard (Ref # 30) from the blower. This is held on with three Phillips Head Machine Screws (Ref # 13).
4. Install ¼ x ¼ x 1 Machine Key (Ref # 18) onto the Drive Shaft (Ref # 35). If not already done, connect the rubber element of the coupler to the second half of the Coupler (Ref # 19) using the three Socket Head Cap Screws. Now slide the Coupler onto the Drive Shaft.
5. Block up the blower. Adjust Blower Stands (Ref #'s 7&16) so the height of the Drive Shaft (Ref # 35) is equal to the height of the Engine shaft and the base of the Blower Housing is level. Align the Drive Shaft with the Engine shaft and connect the Coupler (Ref # 19) using the three Socket Head Cap Screws. Check the Angular and Parallel Alignment (see Alignment Methods below). The Coupler alignment can be adjusted by using the ½" Flat Washers (Ref # 50) to shim the Blower Mount Brackets and by adjusting them vertically where they mount to the Mainframe. Secure set screws using *Loctite® #262* and tighten.

Note: The maximum angular misalignment is 3° and the maximum parallel misalignment is .04". Exceeding these measurements will void warranty.

6. Bolt Blower Mount Brackets to the Mainframe using the ½ - 13 x 1½ Bolts and ½ - 13 Whiz Lock Nuts from the Rake Lift.
7. After Coupler (Ref # 19) alignment is completed mount the Cylinder Stop (Ref # 13) along side the Rake Lift Hydraulic Cylinder and secure using the ½ x 3 Clevis Pin (Ref # 14) and one ⅛" Bridge Pin (Ref # 15) as illustrated. Secure the free end of the Hydraulic Cylinder and the Cylinder Stop to the Blower Mount Bracket (Ref # 8) using the ¾ x 2½ Clevis Pin (Ref # 11) and the other ⅛" Bridge Pin.
8. To install the Wire Harness start by drilling a ½" hole in the control panel area on the left hand side of the machine. Position this hole between the 2WD/3WD switch hole and the "MADE IN THE USA" logo. Connect wires to toggle switch and mount in hole. Install Switch Boot over switch. Plug wire harness into Electric Clutch (Ref # 43). Connect black wire (-) to engine block and red wire (+) to the switch. Connect one end of the single red wire to the switch and connect the other end to the 30 Amp circuit breaker. See wiring diagram for illustration.
9. Install Muffler Extension (Ref # 9) onto the muffler pipe using the Muffler Clamp (Ref # 10).
10. Install the Park Brake Bracket (Ref #29) by bolting onto the Blower Mount Bracket (Ref # 8) using the ¾-16 x 1¼ Bolts (Ref # 2). Secure with ¾ - 16 Whiz Lock Nuts. Slide Blower Stands (Ref #'s 7&16) up for transport and secure in place. This must be done to prevent damage to the machine components.
11. Check all fasteners for proper installation, tighten any loose connections. All guards **must be in place and properly fastened** before operation. The Cylinder Stop (Ref # 13) must be installed.

12. The engine must be running at full throttle to prevent stalling the engine when engaging the clutch.

13. The Belt Tensioner must be maintained at the 25° mark for optimum performance.

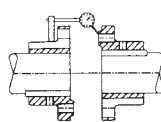


Figure 1.

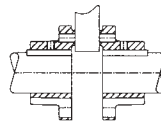


Figure 2.

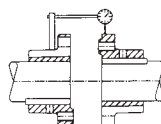


Figure 3.

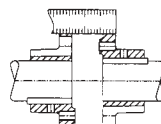



Figure 4.

A. Angular Alignment.
Check by mounting indicator on the body of one hub and placing the pointer on the raised pad face of the other hub. (See Figure 1.) Adjust machines until the best possible alignment is obtained. As an alternate method, insert a feeler gage between the hubs at 4 points approximately 90° apart and adjust the machines. (See Figure 2.) When checking the angular alignment, both hubs may need to be rotated simultaneously.

B. Parallel Alignment.
Mount the indicator on the body of one hub and place the pointer on the flange of the other hub. (See Figure 3.) Adjust machines until the indicator reading is the same at 4 points approximately 90° apart. As an alternate method, place a straight edge across one hub flange and adjust the machines until the straight edge rests squarely on the other hub flange. (See Figure 4.) This should be done at 90° intervals around the hub.

Securely tighten foundation bolts and recheck the alignment. Adjust the machines again, if necessary.

42-026 84"(213CM) STAINLESS STEEL TOURNAMENT RAKE DRAWING

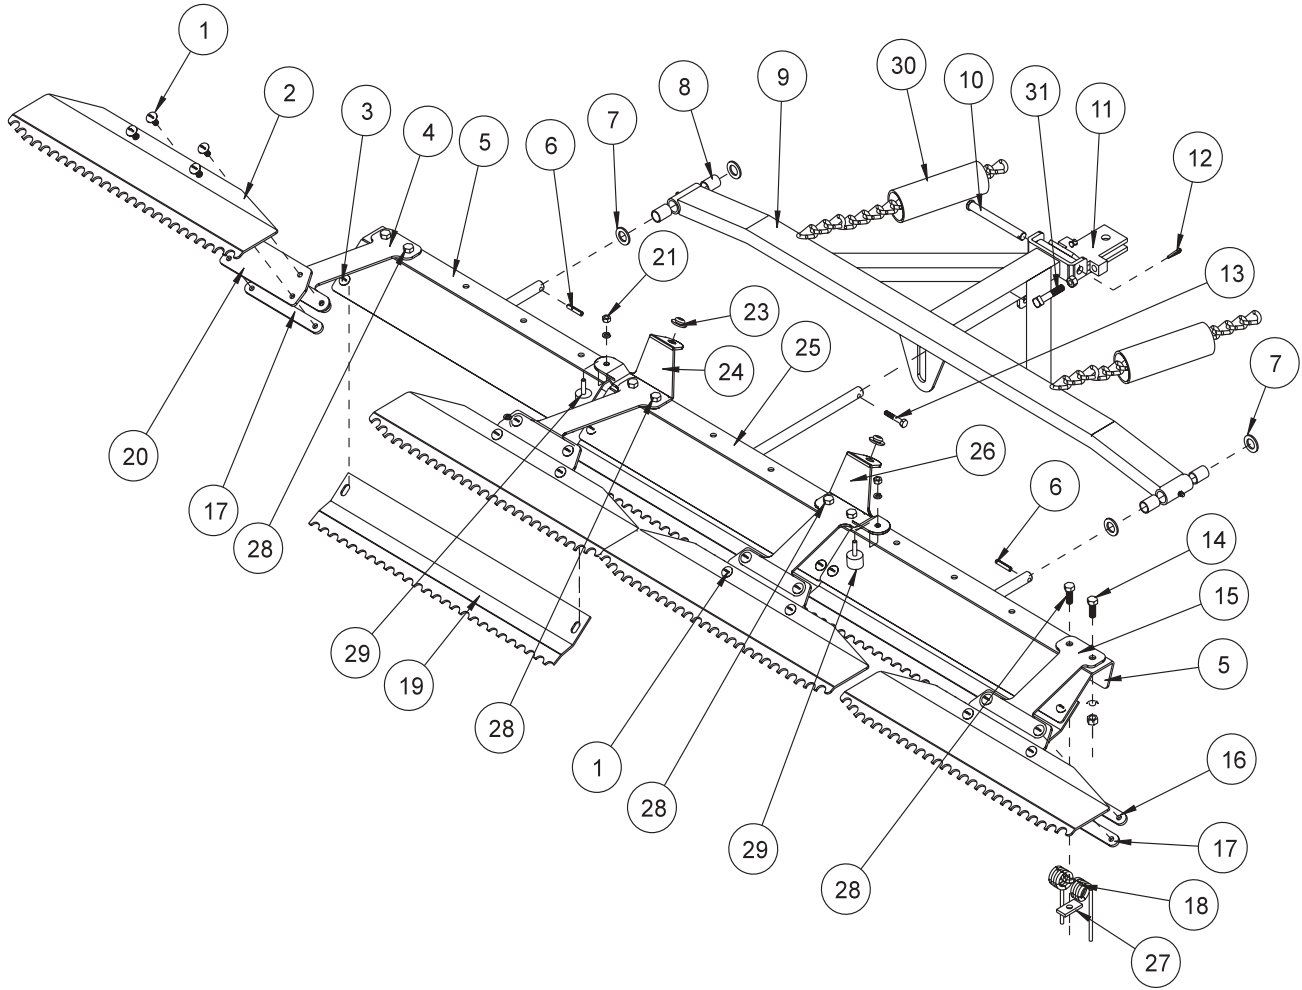


Accessories

42-026 84" (213CM) STAINLESS STEEL TOURNAMENT RAKE PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|------------------|--|----------|
| 1 | HSTS-516-18-100 | Stainless Truss Head Screw $\frac{5}{16}$ - 18 x 1 | 16 |
| | HWL-516 | Lockwasher $\frac{5}{16}$ | 16 |
| | HN-516-18 | Nut $\frac{5}{16}$ - 18 | 16 |
| 2 | 42-104 | Finishing Blades | 4 |
| 3 | HSTS-516-18-100 | Stainless Truss Head Screw $\frac{5}{16}$ - 18 x 1 | 6 |
| | HW-516 | Washer $\frac{5}{16}$ | 6 |
| | HWL-516 | Lockwasher $\frac{5}{16}$ | 6 |
| | HN-516-18 | Nut $\frac{5}{16}$ - 18 | 6 |
| 4 | 42-111 | Left Outside Mount | 1 |
| 5 | 42-102 | Outside Rake | 2 |
| 6 | HRP-14-100 | Roll Pin $\frac{1}{4}$ x 1 | 2 |
| 7 | HMB-58-14 | Machine Bushing $\frac{5}{8}$ x 14GA | 4 |
| 8 | 20-018 | Oilite Bushing (comes with drawbar) | 4 |
| 9 | 42-100 | Draw Bar | 1 |
| | 25-338 | Decal, Speed Boss | 1 |
| 10 | HCP-12-450 | Clevis Pin $\frac{1}{2}$ x $4\frac{1}{2}$ | 1 |
| 11 | 13-647 | Hitch | 1 |
| | HCP-12-150 | Clevis Pin $\frac{1}{2}$ x $1\frac{1}{2}$ | 1 |
| | HHP-18 | Bridge Pin $\frac{1}{8}$ | 1 |
| 12 | HP-18-100 | Cotter Pin $\frac{1}{8}$ x 1 | 1 |
| 13 | HB-14-20-175 | Bolt $\frac{1}{4}$ - 20 x $1\frac{3}{4}$ | 1 |
| | HNTL-14-20 | Lock Nut $\frac{1}{4}$ - 20 | 1 |
| 14 | HSTPS-516-18-125 | Stainless Steel Phillips Truss Head Screw $\frac{5}{16}$ - 18 x $1\frac{1}{4}$ | 4 |
| | HWL-516 | Lockwasher $\frac{5}{16}$ | 4 |
| | HN-516 -18 | Nut $\frac{5}{16}$ - 18 | 4 |
| 15 | 42-109 | Right Outside Mount | 1 |
| 16 | 42-105 | Top Strap | 4 |
| 17 | 42-106 | Bottom Strap | 4 |
| 18 | 42-122 | Rake Spring | 12 |
| 19 | 42-103 | Groomer Blades | 3 |
| 20 | 42-107 | Matting | 4 |
| 21 | HNC-14-20 | Cap Nut $\frac{1}{4}$ - 20 | 2 |
| | HWL-14 | Lockwasher $\frac{1}{4}$ | 2 |
| 23 | 42-116 | Rubber insert | 2 |
| 24 | 42-110 | Left Inside Mount | 1 |
| 25 | 42-101 | Center Rake | 1 |
| 26 | 42-108 | Right Inside Mount | 1 |
| 27 | 42-177 | Spring Holder | 12 |
| 28 | HSTPS-516-18-125 | Stainless Steel Phillips Truss Head Screw $\frac{5}{16}$ - 18 x $1\frac{1}{4}$ | 12 |
| | HWL-516 | Lockwasher $\frac{5}{16}$ | 12 |
| | HN-516 - 18 | Nut $\frac{5}{16}$ - 18 | 12 |
| 29 | 15-013 | Rubber Bumper | 2 |
| 30 | 8892-6 | Hose Wrap $\frac{1}{4}$ " | 2 |
| 31 | HSSQ-38-16-200 | Square Head Set Screw $\frac{3}{8}$ - 16 x 2 (comes with 13-647) | 2 |
| | HN-38-16 | Nut $\frac{3}{8}$ - 16 (comes with 13-647) | 2 |

42-026 84"(213CM) STAINLESS STEEL TOURNAMENT RAKE DRAWING

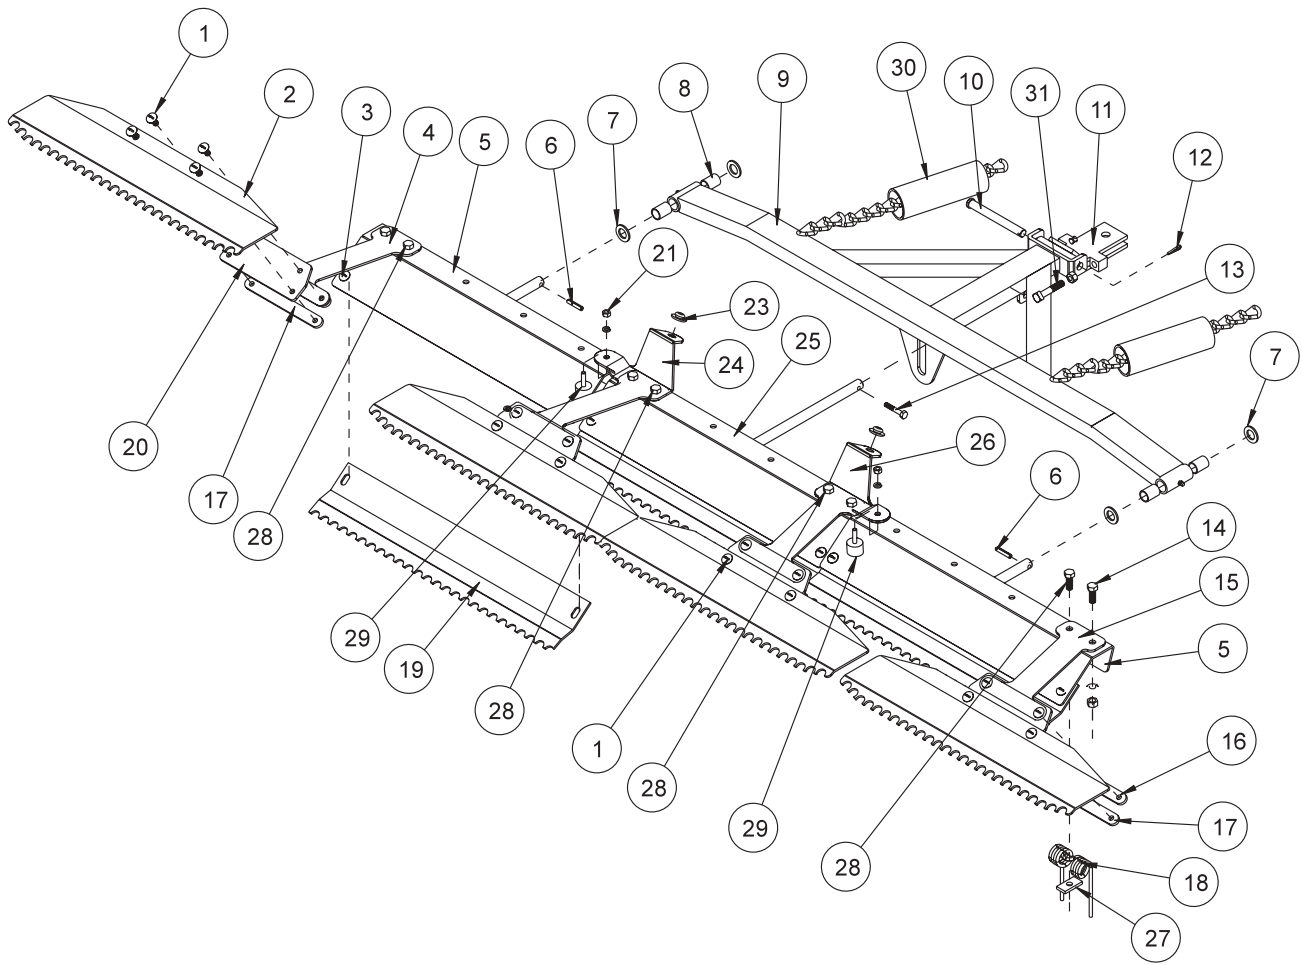


Accessories

INSTALLATION INSTRUCTIONS

1. Attach drawbar (Ref 9) to hitch (Ref 11) using clevis pin (Ref 10) and cotter pin (Ref 12).
 2. Attach rubber bumper (Ref 29) using cap nut and lock washer (Ref 21). Attach the rubber inserts (Ref 23) to the inside mounts (Ref 24 and 26).
 3. Attach the left outside mount (Ref 4), the left inside mount (Ref 24), the outside trowel mount (Ref 15), and the inside trowel mount (Ref 26) to the outside and center rakes (Ref 5 and 25) as shown. Use the 1¹/₄" stainless steel truss head screws (Ref 14) on the outside hole of each rake.
 4. Use the spring holder (Ref 27) and the 1¹/₄" stainless steel truss head screws (Ref 28) to attach rake springs (Ref 18) to the rakes.
 5. Slide a machine bushing onto outside rake frames then slide the outside rake frames (Ref 5) into the tubing on the end of the drawbar. Hold in place with another machine bushing and a roll pin (Ref 6).
 6. Attach center rake (Ref 25) to draw bar (Ref 9) as shown, using the 1¹/₄ - 20 - 1³/₄ bolt and lock nut (Ref 13) with the shaft of the center rake between the tabs on the bottom of the drawbar.
 7. Attach the matting (Ref 20) and the top strap (Ref 16) to the inside and outside mounts using stainless steel truss head screw ⁵/₁₆ - 18 x 1 (Ref 1). Attach four finishing blades (Ref 2) to the matting on the inside and outside mounts with the stainless steel truss head screw ⁵/₁₆ - 18 x 1 (Ref 1) going through the finishing blade, matting, and bottom strap (Ref 17).
 8. Place the three groomer blades (Ref 19) under the three rake assemblies as shown, using (Ref 3).
 9. Attach the rake hitch (Ref 11) to the trap rake hitch.
 10. The end links of chain on the drawbar are to be hooked to the hooks of the trap rake lift.
 11. With the rake on the ground pull the rake to the right side until it is 2-3 inches from the tire.
 12. Using the adjustment screw (Ref 31) on the right side of hitch, adjust the screw until it hits the trap rake hitch, located on rear axle. Lock nut so adjustment will not change.
 13. Repeat steps 8 and 9 on left side.
 14. Turn machine on and test for operation of rake assembly by raising and lowering the rake assembly. Also with rake down, turn sharp corners to check that rake does not touch wheels.
- NOTE:** Test rake in sand to assure tire tracks are covered by the rake when turning sharp corners in either direction. If there are tire tracks, readjust using the adjusting screws on the hitch, so the rake comes closer to the tire.

42-128 72" (183 CM) STAINLESS STEEL TOURNAMENT RAKE DRAWING

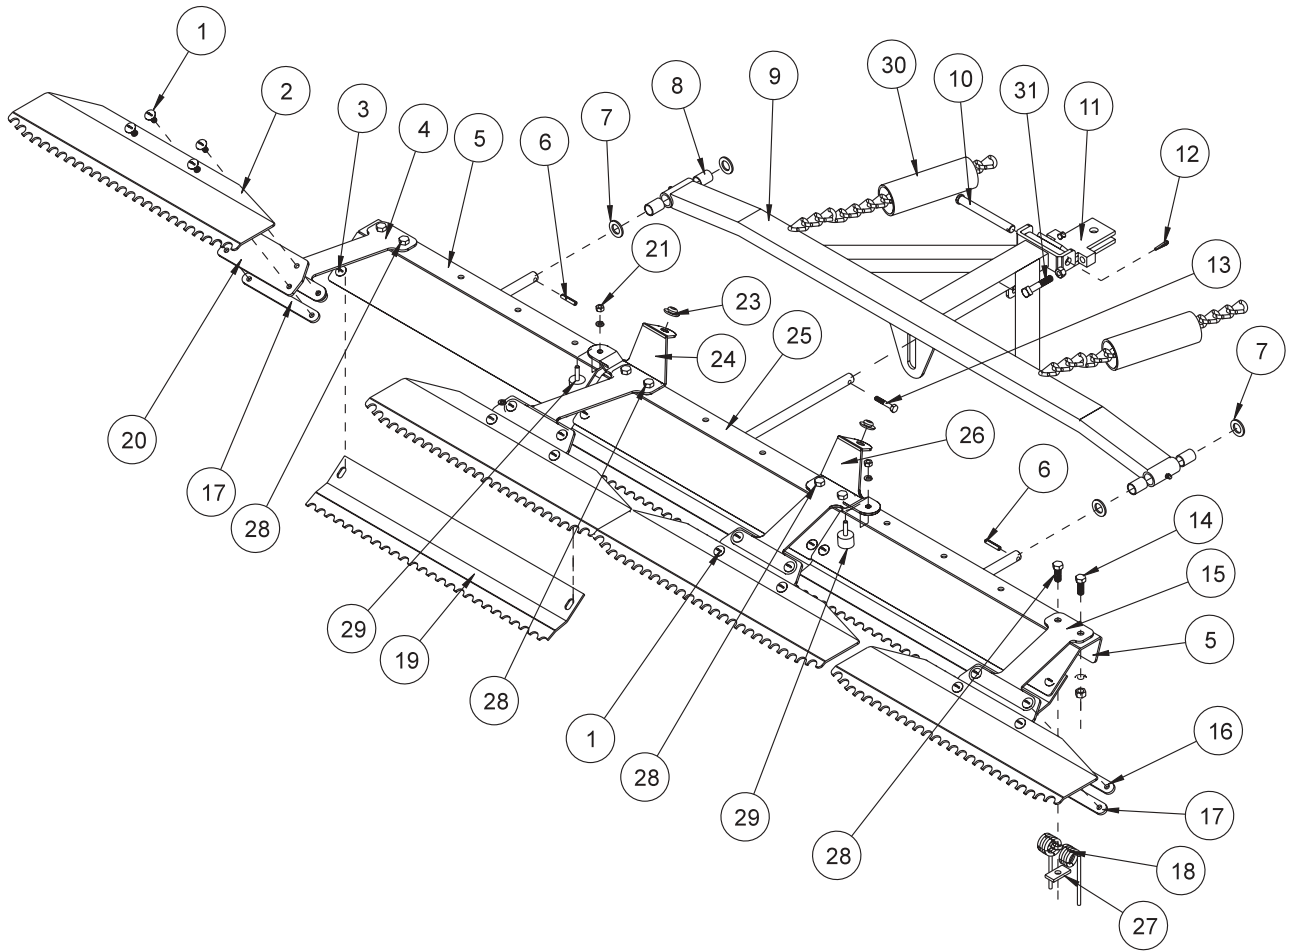


Accessories

42-128 72" (183 CM) STAINLESS STEEL TOURNAMENT RAKE PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|------------------|---|----------|
| 1 | HSTS-516-18-100 | Stainless Steel Truss Head Screw $\frac{5}{16}$ - 18 x 1 | 16 |
| | HWL-516 | Lock Washer $\frac{5}{16}$ | 16 |
| | HN-516-18 | Nut $\frac{5}{16}$ - 18 | 16 |
| 2 | 42-137 | Finishing Blades | 4 |
| 3 | HSTS-516-18-100 | Stainless Steel Truss Head Screw $\frac{5}{16}$ - 18 x 1 | 6 |
| | HW-516 | Washer $\frac{5}{16}$ | 6 |
| | HWL-516 | Lock Washer $\frac{5}{16}$ | 6 |
| | HN-516-18 | Nut $\frac{5}{16}$ - 18 | 6 |
| 4 | 42-111 | Left Outside Mount | 1 |
| 5 | 42-140 | Outside Rake | 2 |
| 6 | HRP-14-100 | Roll Pin $\frac{1}{4}$ x 1 | 2 |
| 7 | HMB-58-14 | Machine Bushing $\frac{5}{8}$ x 14GA | 4 |
| 8 | 20-018 | Oilite Bushing (comes with 42-141) | 4 |
| 9 | 42-141 | Draw Bar | 1 |
| 10 | HCP-12-450 | Clevis Pin $\frac{1}{2}$ x 4 $\frac{1}{2}$ | 1 |
| 11 | 13-647 | Hitch | 1 |
| | HCP-12-150 | Clevis Pin $\frac{1}{2}$ x 1 $\frac{1}{2}$ | 1 |
| | HHP-18 | Bridge Pin $\frac{1}{8}$ | 1 |
| 12 | HP-18-100 | Cotter Pin $\frac{1}{8}$ x 1 | 1 |
| 13 | HB-14-20-175 | Bolt $\frac{1}{4}$ - 20 x 1 $\frac{3}{4}$ | 1 |
| | HNTL-14-20 | Lock Nut $\frac{1}{4}$ - 20 | 1 |
| 14 | HSTPS-516-18-125 | Stainless Steel Phillips Truss Head Screw $\frac{5}{16}$ - 18 x 1 $\frac{1}{4}$ | 4 |
| | HWL-516 | Lock Washer $\frac{5}{16}$ | 4 |
| | HN-516-18 | Nut $\frac{5}{16}$ - 18 | 4 |
| 15 | 42-109 | Outside Trowel Mount | 1 |
| 16 | 42-105 | Top Strap | 4 |
| 17 | 42-106 | Bottom Strap | 4 |
| 18 | 42-122 | Rake Spring | 12 |
| 19 | 42-138 | Groomer Blades | 3 |
| 20 | 42-107 | Matting | 4 |
| 21 | HNC-14-20 | Cap Nut $\frac{1}{4}$ - 20 | 2 |
| | HWL-14 | Lock Washer $\frac{1}{4}$ | 2 |
| 23 | 42-116 | Rubber Insert | 2 |
| 24 | 42-110 | Left Inside Mount | 1 |
| 25 | 42-139 | Center Rake | 1 |
| 26 | 42-108 | Inside Trowel Mount | 1 |
| 27 | 42-177 | Spring Holder | 12 |
| 28 | HSTPS-516-18-125 | Stainless Steel Phillips Truss Head Screw $\frac{5}{16}$ - 18 x 1 $\frac{1}{4}$ | 12 |
| | HWL-516 | Lock Washer $\frac{5}{16}$ | 12 |
| | HN-516-18 | Nut $\frac{5}{16}$ - 18 | 12 |
| 29 | 15-013 | Rubber Bumper | 2 |
| 30 | 8892-6 | Hose Wrap | 2 |
| 31 | HSSQ-38-16-200 | Square Head Set Screw $\frac{3}{8}$ - 16 x 2 (comes with 13-647) | 2 |
| | HN-38-16 | Nut $\frac{3}{8}$ - 16 (comes with 13-647) | 2 |

42-128 72" (183 CM) STAINLESS STEEL TOURNAMENT RAKE DRAWING

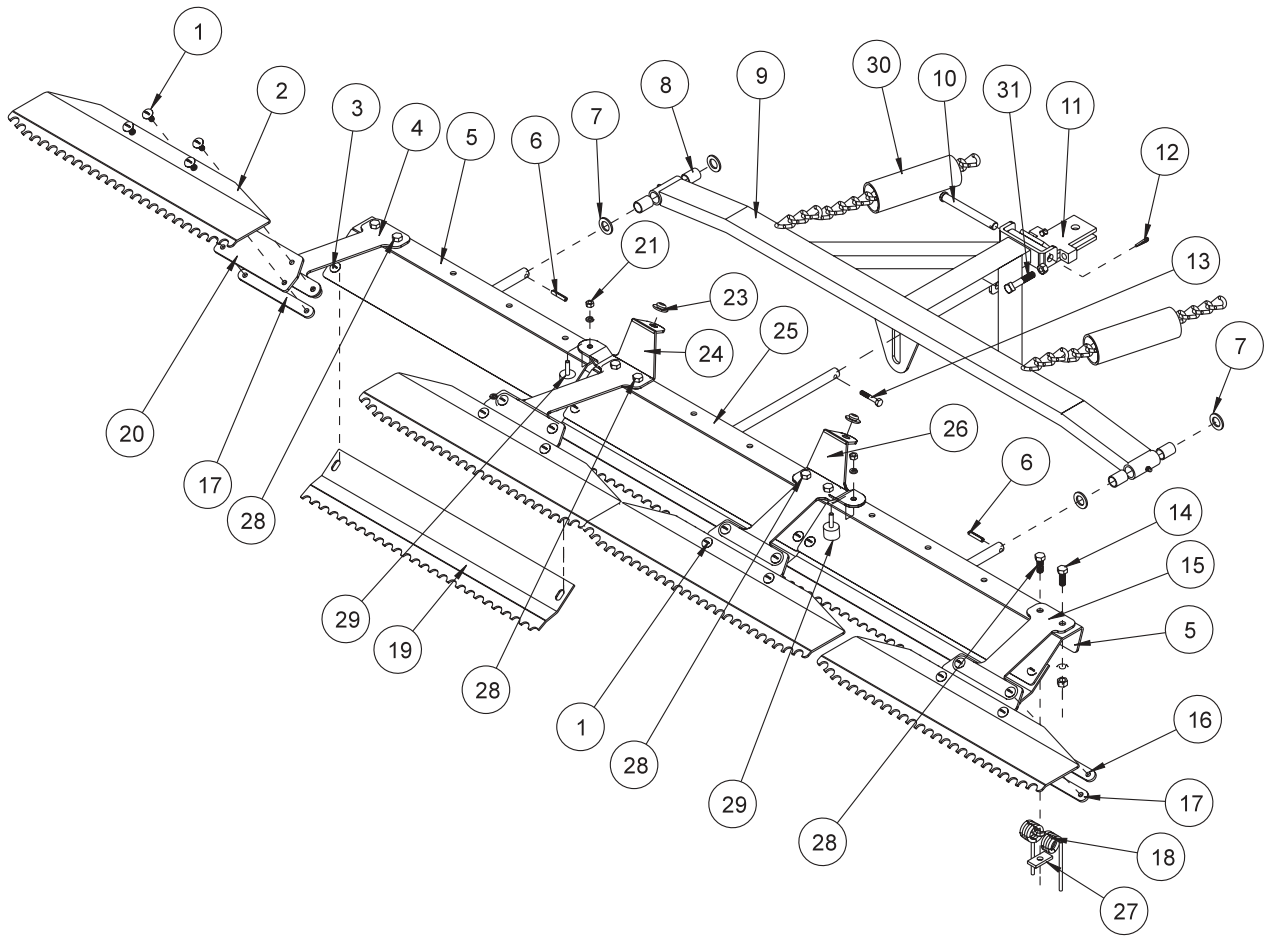


Accessories

INSTALLATION INSTRUCTIONS

1. Attach drawbar (Ref 9) to hitch (Ref 11) using clevis pin (Ref 10) and cotter pin (Ref 12).
 2. Attach rubber bumper (Ref 29) using cap nut and lock washer (Ref 21). Attach the rubber inserts (Ref 23) to the inside mounts (Ref 24 and 26).
 3. Attach the left outside mount (Ref 4), the left inside mount (Ref 24), the outside trowel mount (Ref 15), and the inside trowel mount (Ref 26) to the outside and center rakes (Ref 5 and 25) as shown. Use the 1¹/₄" stainless steel truss head screws (Ref 14) on the outside hole of each rake.
 4. Use the spring holder (Ref 27) and the 1¹/₄" stainless steel truss head screws (Ref 28) to attach rake springs (Ref 18) to the rakes.
 5. Slide a machine bushing onto outside rake frames then slide the outside rake frames (Ref 5) into the tubing on the end of the drawbar. Hold in place with another machine bushing and a roll pin (Ref 6).
 6. Attach center rake (Ref 25) to draw bar (Ref 9) as shown, using the 1¹/₄ - 20 - 1³/₄ bolt and lock nut (Ref 13) with the shaft of the center rake between the tabs on the bottom of the drawbar.
 7. Attach the matting (Ref 20) and the top strap (Ref 16) to the inside and outside mounts using stainless steel truss head screw ⁵/₁₆ - 18 x 1 (Ref 1). Attach four finishing blades (Ref 2) to the matting on the inside and outside mounts with the stainless steel truss head screw ⁵/₁₆ - 18 x 1 (Ref 1) going through the finishing blade, matting, and bottom strap (Ref 17).
 8. Place the three groomer blades (Ref 19) under the three rake assemblies as shown, using (Ref 3).
 9. Attach the rake hitch (Ref 11) to the trap rake hitch.
 10. The end links of chain on the drawbar are to be hooked to the hooks of the trap rake lift.
 11. With the rake on the ground pull the rake to the right side until it is 2-3 inches from the tire.
 12. Using the adjustment screw (Ref 31) on the right side of hitch, adjust the screw until it hits the trap rake hitch, located on rear axle. Lock nut so adjustment will not change.
 13. Repeat steps 8 and 9 on left side.
 14. Turn machine on and test for operation of rake assembly by raising and lowering the rake assembly. Also with rake down, turn sharp corners to check that rake does not touch wheels.
- NOTE:** Test rake in sand to assure tire tracks are covered by the rake when turning sharp corners in either direction. If there are tire tracks, readjust using the adjusting screws on the hitch, so the rake comes closer to the tire.

13-438 RAKE ASSEMBLY WITH FINISHING BLADES DRAWING

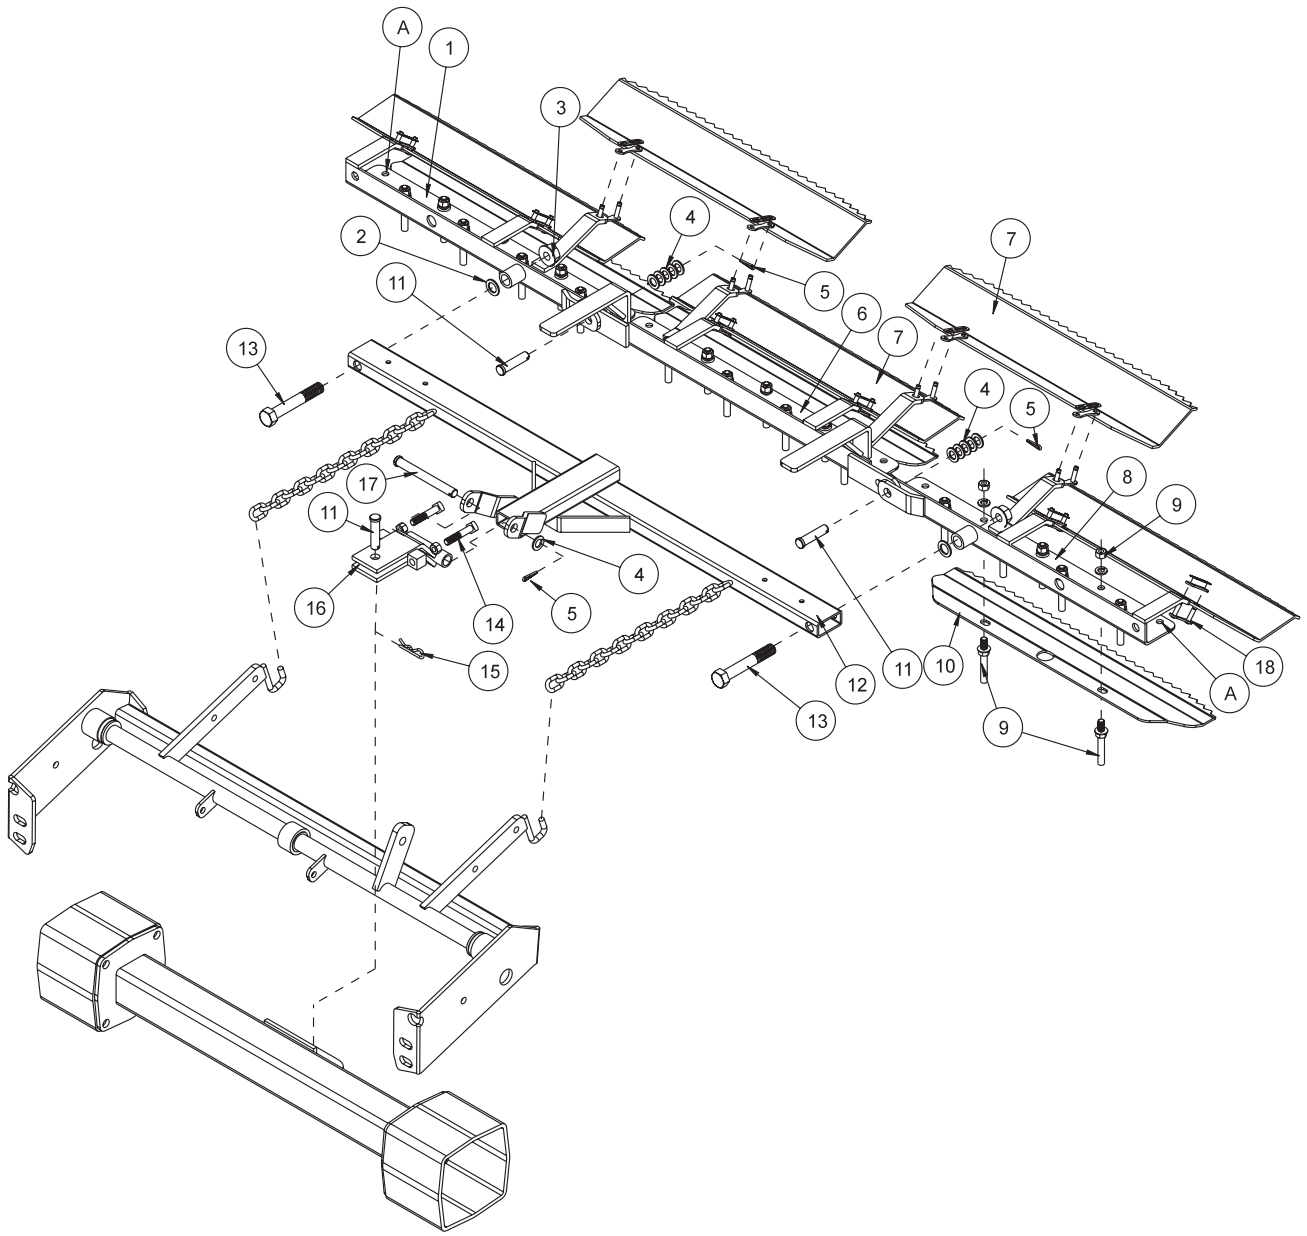

Accessories

13-438 RAKE ASSEMBLY WITH FINISHING BLADES PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|-----------------|--|----------|
| 1 | 13-441 | Right Rake | 1 |
| 2 | HMB-58-14 | Machine Bushing $\frac{5}{8}$ x 14GA | 2 |
| 3 | HNCL-58-11 | Lock Nut $\frac{5}{8}$ - 11 | 2 |
| 4 | HMB-12-14 | Machine Bushing $\frac{1}{2}$ x 14GA | 11 |
| 5 | HP-18-100 | Cotter Pin $\frac{1}{8}$ x 1 | 3 |
| 6 | 13-440 | Center Rake | 1 |
| 7 | 13-443 | Finishing Blade | 5 |
| 8 | 13-439 | Left Rake | 1 |
| 9* | 19-106 | Rake teeth | 25 |
| 10 | 13-442 | Groomer Blade | 3 |
| 11 | HCP-12-150 | Clevis Pin $\frac{1}{2}$ - $1\frac{1}{2}$ | 3 |
| 12 | 13-365 | Drawbar | 1 |
| 13 | HB-58-11-400 | Bolt $\frac{5}{8}$ - 11 x 4 | 2 |
| 14 | HSSQS-38-16-200 | SS Square Head Set Screw $\frac{3}{8}$ -16 x 2 (comes with 13-647) | 2 |
| | HN-38-16 | Nut $\frac{3}{8}$ - 16 (comes with 13-647) | 2 |
| 15 | HHP-18 | Bridge Pin $\frac{1}{8}$ | 1 |
| 16 | 13-647 | Hitch (includes Ref 14) | 1 |
| 17 | HCP-12-450 | Clevis Pin $\frac{1}{2}$ - $4\frac{1}{2}$ | 1 |
| 18 | 13-417 | Connector Link | 10 |
| * | 13-445 | Rake Teeth Kit (25 Studs and Hardware) | 1 |


INSTALLATION INSTRUCTIONS

1. Attach drawbar (Ref 12) to hitch (Ref 16) using clevis pin, machine bushing and cotter pin (Ref 17, 4 and 5).
2. Bolt rake teeth (Ref 9) to frames, keeping all the same length. Leave the two outside holes on right and left rake open (Ref A).
3. Lay out rake frames (Ref 1,6 and 8). Connect them using clevis pin, machine bushing and cotter pin (Ref 11, 4 and 5).
4. Attach drawbar to left and right frames using bolt, machine bushing, and nut (Ref 13, 2 and 3).
5. Attach five finishing blades (Ref 7) to the tabs of the rake frames using master link (Ref 18). Blades may be mounted with saw tooth up or down, depending on the desired finish of the sand trap.
6. Attach the rake hitch (Ref 16) to trap rake hitch on the rear axle using a clevis pin and bridge pin (Ref 11 and 15).
7. The end links of chain on the drawbar are to be hooked to the hooks of the trap rake lift.
8. With the rake on the ground pull the rake to the right side until it is 2-3 inches from the tire.
9. Using the adjustment screw (Ref 14) on the right, adjust the screw until it hits the trap rake hitch, located on rear axle. Lock jam nut so adjustment will not change.
10. Repeat steps 8 and 9 on left side.
11. Turn machine on and test for operation of rake assembly by raising and lowering the rake assembly. Also with rake down, turn sharp corners to check that rake does not touch wheels.
12. **NOTE:** Test rake in sand to assure tire tracks are covered by the rake when turning sharp corners in either direction. If there are tire tracks, readjust using the adjusting screws on the hitch, so the rake comes closer to the tire.

GROOMER BLADES - GOLF COURSE USE ONLY.

1. Place the three groomer blades (Ref 10) under the three rake assemblies (Ref 1, 6 and 8) .
2. Center blades below rear most row of rake teeth. The blade is designed to miss the outside two "teeth" and fit around the center 'tooth'.
3. Remove the two 'teeth' that line up with slots of each groomer blade. Move blade up and into position and reattach 'teeth'. Blade thickness should be accounted for by shortening the 'teeth' an equal length.

13-606 RAKE ASSEMBLY WITH LEXAN BLADES DRAWING

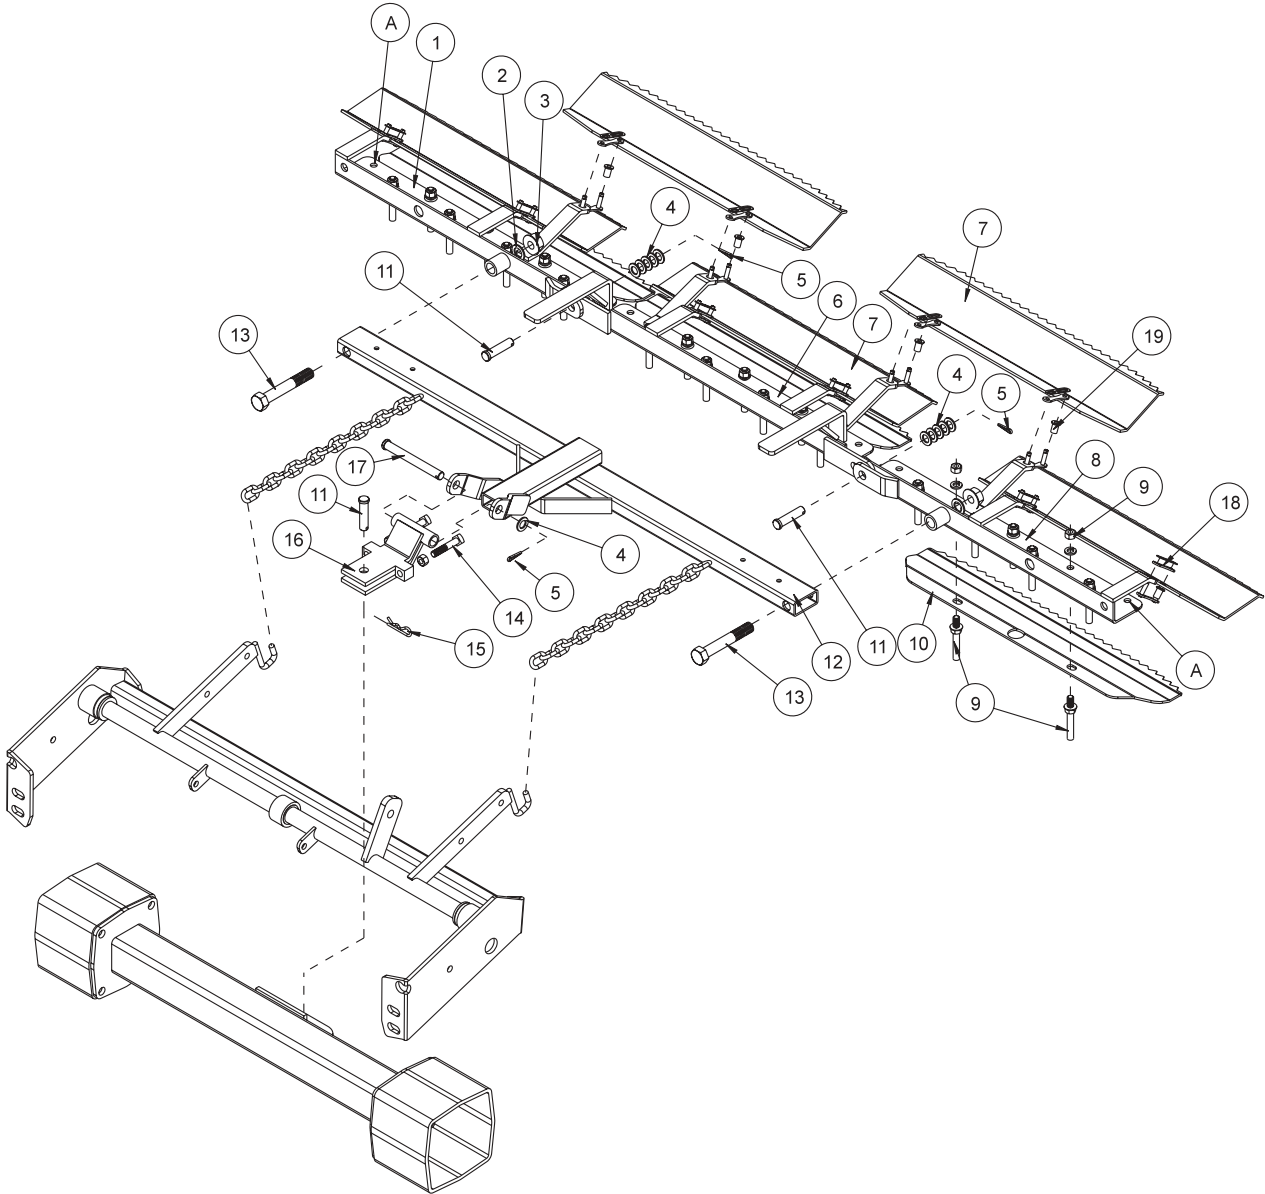

Accessories

13-606 RAKE ASSEMBLY WITH LEXAN BLADES PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|-----------------|--|----------|
| 1 | 13-441 | Right Rake | 1 |
| 2 | HMB-58-14 | Machine Bushing $\frac{5}{8}$ x 14GA | 2 |
| 3 | HNCL-58-11 | Lock Nut $\frac{5}{8}$ - 11 | 2 |
| 4 | HMB-12-14 | Machine Bushing $\frac{1}{2}$ x 14GA | 11 |
| 5 | HP-18-100 | Cotter Pin $\frac{1}{8}$ x 1 | 3 |
| 6 | 13-440 | Center Rake | 1 |
| 7 | 13-605 | Lexan Blade (with weight & hardware) | 5 |
| 8 | 13-439 | Left Rake | 1 |
| 9* | 19-106 | Rake teeth | 25 |
| 10 | 13-442 | Groomer Blade | 3 |
| 11 | HCP-12-150 | Clevis Pin $\frac{1}{2}$ - 1 $\frac{1}{2}$ | 3 |
| 12 | 13-365 | Drawbar | 1 |
| 13 | HB-58-11-400 | Bolt $\frac{5}{8}$ - 11 x 4 | 2 |
| 14 | HSSQS-38-16-200 | SS Square Head Set Screw $\frac{3}{8}$ -16 x 2 (comes with 13-647) | 2 |
| | HN-38-16 | Nut $\frac{3}{8}$ - 16 (comes with 13-647) | 2 |
| 15 | HHP-18 | Bridge Pin $\frac{1}{8}$ | 1 |
| 16 | 13-647 | Hitch (includes Ref 14) | 1 |
| 17 | HCP-12-450 | Clevis Pin $\frac{1}{2}$ - 4 $\frac{1}{2}$ | 1 |
| 18 | 13-417 | Connector Link | 10 |
| 19 | 18-272 | Nylon Bushing | 10 |
| * | 13-445 | Rake Teeth Kit (25 Studs and Hardware) | 1 |


INSTALLATION INSTRUCTIONS

1. Attach drawbar (Ref 12) to hitch (Ref 16) using clevis pin, machine bushing and cotter pin (Ref 17, 4 and 5).
2. Bolt rake teeth (Ref 9) to frames, keeping all the same length. Leave the two outside holes on right and left rake open (Ref A).
3. Lay out rake frames (Ref 1,6 and 8). Connect them using clevis pin, machine bushing and cotter pin (Ref 11, 4 and 5).
4. Attach drawbar to left and right frames using bolt, machine bushing, and nut (Ref 13, 2 and 3).
5. Attach five lexan blades (Ref 7) to the tabs of the rake frames using master link (Ref 18) and nylon bushings (Ref 19). Blades may be mounted with saw tooth up or down, depending on the desired finish of the sand trap.
6. Attach the rake hitch (Ref 16) to trap rake hitch on the rear axle using a clevis pin and bridge pin (Ref 11 and 15).
7. The end links of chain on the drawbar are to be hooked to the hooks of the trap rake lift.
8. With the rake on the ground pull the rake to the right side until it is 2-3 inches from the tire.
9. Using the adjustment screw (Ref 14) on the right, adjust the screw until it hits the trap rake hitch, located on rear axle. Lock jam nut so adjustment will not change.
10. Repeat steps 8 and 9 on left side.
11. Turn machine on and test for operation of rake assembly by raising and lowering the rake assembly. Also with rake down, turn sharp corners to check that rake does not touch wheels.
12. **NOTE:** Test rake in sand to assure tire tracks are covered by the rake when turning sharp corners in either direction. If there are tire tracks, readjust using the adjusting screws on the hitch, so the rake comes closer to the tire.


GROOMER BLADES - GOLF COURSE USE ONLY.

1. Place the three groomer blades (Ref 10) under the three rake assemblies (Ref 1, 6 and 8) .
2. Center blades below rear most row of rake teeth. The blade is designed to miss the outside two "teeth" and fit around the center "tooth".
3. Remove the two "teeth" that line up with slots of each groomer blade. Move blade up and into position and reattach "teeth". Blade thickness should be accounted for by shortening the "teeth" an equal length.

13-684 SANDRAKE BRUSH KIT DRAWING

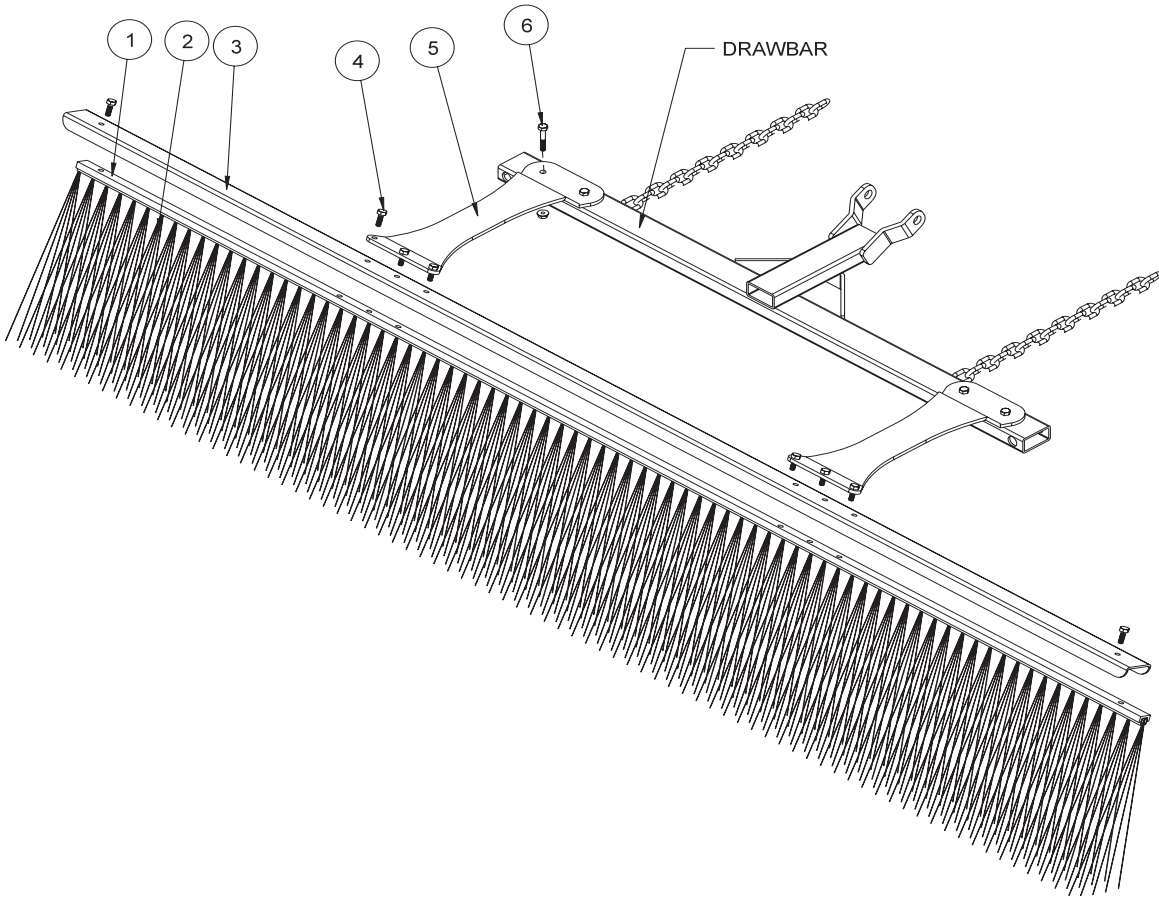

HOLE LOCATION

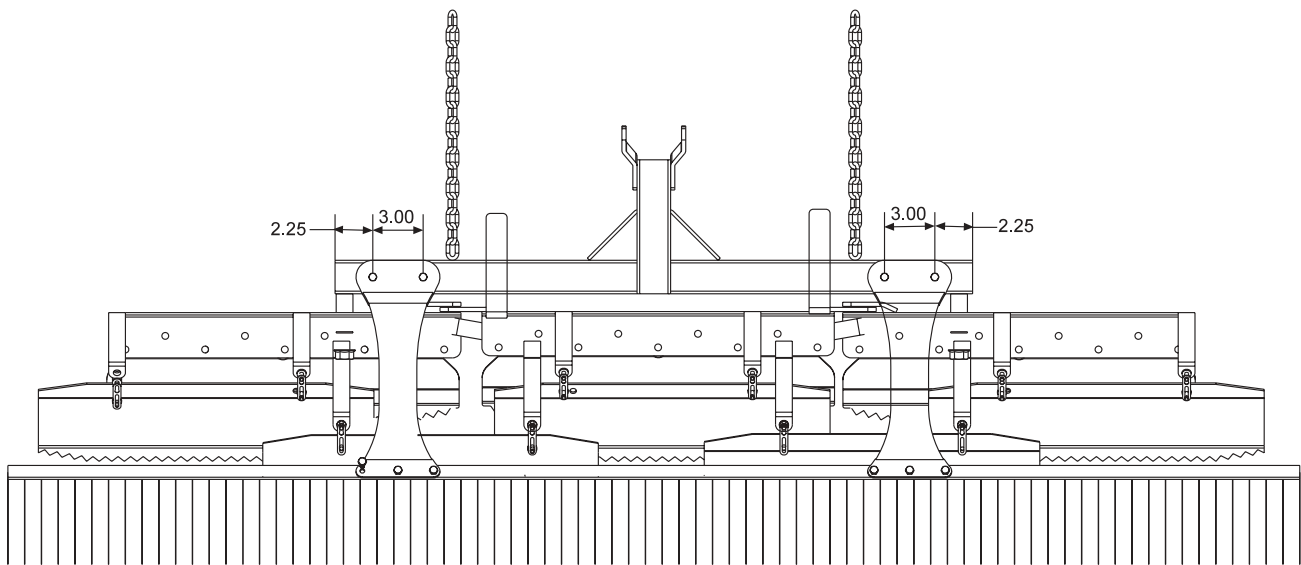

Accessories


13-684 SAND RAKE BRUSH KIT PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------------|--|----------|
| 1 | 13-683 | Brush Track | 1 |
| 2 | 13-682 | Brush 77 x 11 | 1 |
| 3 | 13-688 | Brush Channel | 1 |
| 4 | HB-14-20-075 | Bolt $\frac{1}{4}$ - 20 x $\frac{3}{4}$ | 6 |
| | HNFL-14-20 | Flange Whiz-Lock Nut $\frac{1}{4}$ - 20 | 6 |
| 5 | 13-681 | Mounting Brackets | 2 |
| 6 | HB-14-20-150 | Bolt $\frac{1}{4}$ - 20 x $1\frac{1}{2}$ | 4 |
| | HNFL-14-20 | Flange Whiz-Lock Nuts $\frac{1}{4}$ - 20 | 4 |


INSTALLATION INSTRUCTIONS

1. Place the brush (Ref 2) into the brush track (Ref 1). Place the brush channel (Ref 3) between the brush track and the mounting brackets. Now bolt the mounting brackets (Ref 5) to the brush track using the $\frac{3}{4}$ " bolts and flange whiz-lock nuts (Ref 3).
2. Two holes need to be drilled into the drawbar of the rake to install the brush. Drill two .281 holes $2\frac{1}{4}$ " in from each end and 3" apart (see drawing).
3. Mount the brush assembly to the drawbar using four $\frac{3}{4}$ " bolts and flange whiz-lock nuts (Ref 5).

13-298 FAN RAKE ATTACHMENT DRAWING

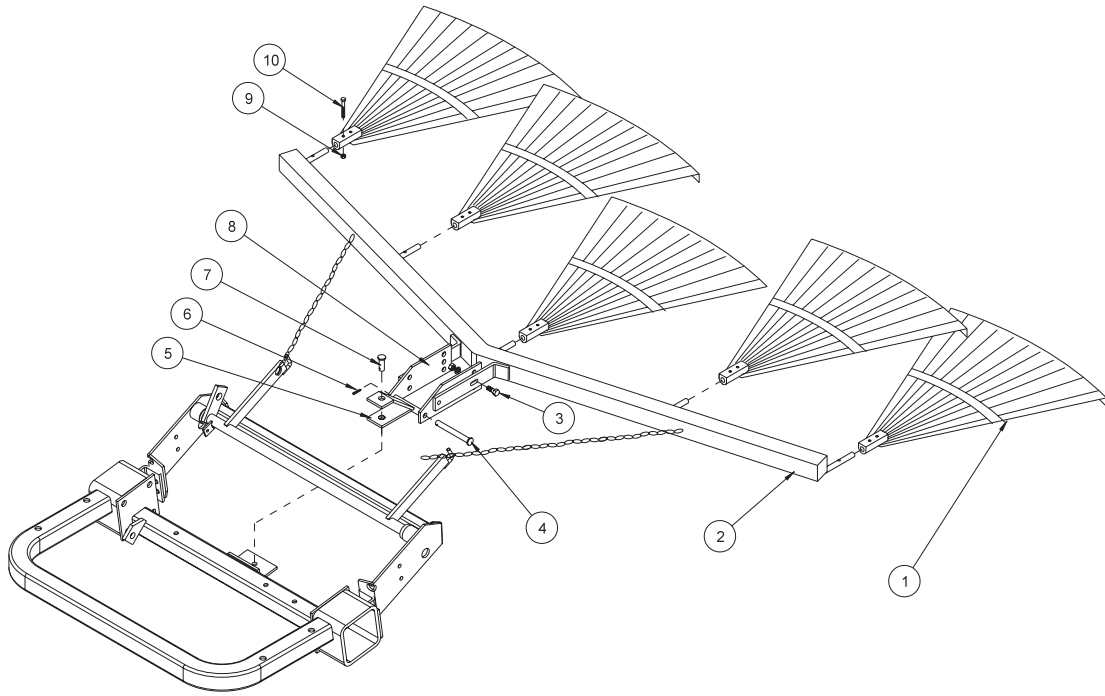

13-319 FAN RAKE KIT

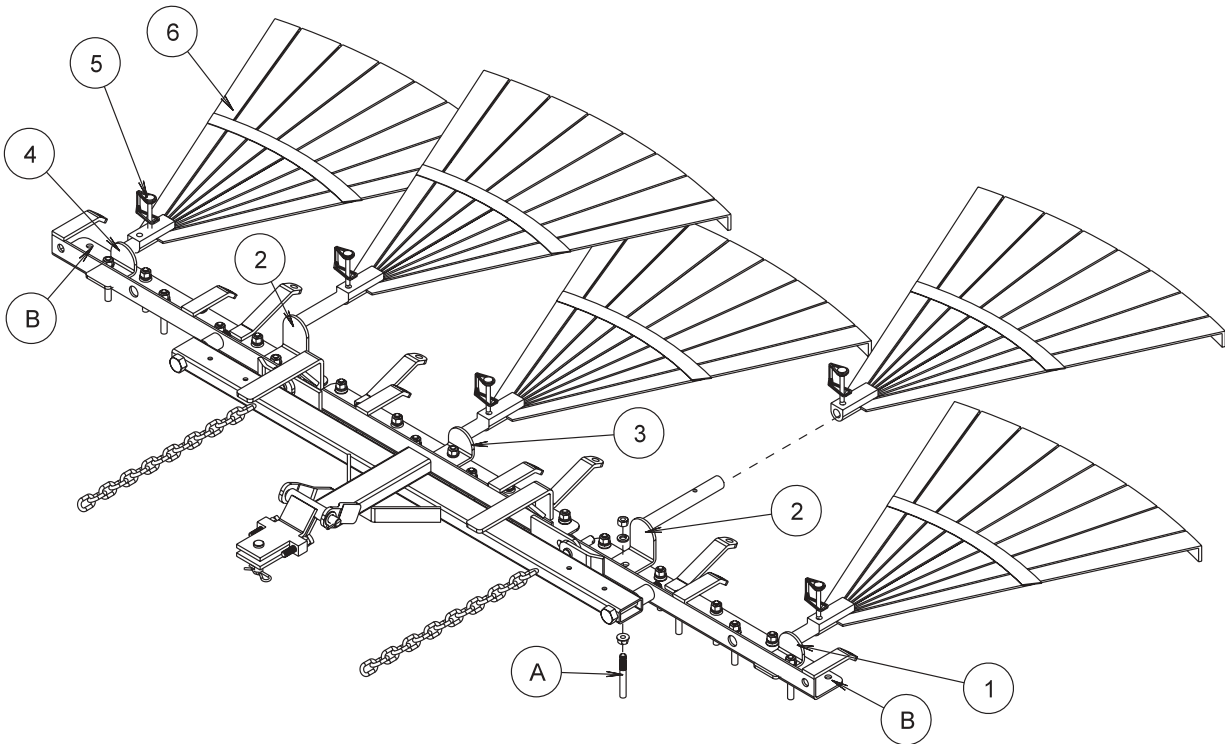

Accessories

13-298 FAN RAKE ATTACHMENT PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------------|---|----------|
| 1 | 13-310 | Rake | 5 |
| 2 | 13-306 | Frame | 1 |
| 3 | HB-38-16-100 | Bolt ³ / ₈ - 16 x 1 | 4 |
| | HN-38-16 | Nut ³ / ₈ - 16 | 4 |
| | HWL-38 | Lockwasher ³ / ₈ | 4 |
| 4 | HCP-12-450 | Clevis Pin 1/2 x 4 1/2 | 1 |
| 5 | 19-107 | Drawbar | 1 |
| 6 | HP-18-100 | Cotter Pin 1/8 x 1 | 1 |
| 7 | HCP-12-150 | Clevis Pin 1/2 x 1 1/2 | 1 |
| | HHP-18 | Bridge Pin 1/8 | 1 |
| 8 | 13-307 | Hitch | 2 |
| 9 | HNCL-14-20 | Center Lock Nut 1/4 - 20 | 5 |
| 10 | HB-14-20-200 | Bolt 1/4 - 20 x 2 | 5 |

INSTALLATION INSTRUCTIONS

1. Remove the complete rake assembly from the trap rake. Replace the clevis pin and bridge pin in the hitch for future use with the rake.
2. Assemble hitch (Ref 8) to frame (Ref 2) using hardware (Ref 3). Assemble drawbar (Ref 5) to the hitch using clevis pin (Ref 4) and cotter pin (Ref 6), as shown. The different holes in the hitch are for adjusting the angle of the rakes.
3. Assemble the five rakes (Ref 1) to the frame using the bolt and center lock nuts (Ref 9 and 10). Slide the fan rake assembly under the rear of the trap rake to the hitch. Attach the drawbar to the hitch using the clevis pin and the bridge pin (Ref 7).
4. Hook the chains from the frame to the hooks on the rake lift.


13-319 FAN RAKE KIT PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------|---------------|----------|
| 1 | 13-326 | Left Holder | 1 |
| 2 | 13-329 | Long Holder | 2 |
| 3 | 13-327 | Center Holder | 1 |
| 4 | 13-328 | Right Holder | 1 |
| 5 | 29-541 | Lock Pin | 5 |
| 6 | 13-310 | Rake | 5 |


FAN RAKE KIT INSTRUCTIONS

1. Remove connector links that hold rake blades to rake frame if desired.
2. Remove groomer blades from rake frame that are held on with rake teeth studs (Ref A). Replace rake teeth studs, if desired.
3. Place left holder (Ref 1), angle side up, to the second rake tooth hole from the end and install rake tooth stud. The first rake tooth hole from each end (Ref B) have no rake teeth in them.
4. Remove the 8th rake tooth stud from the end of right and left rake frame and place long holders (Ref 2) on top, reinstall rake teeth studs.
5. Remove rake tooth in direct center of rake and install the center holder (Ref 3). Reinstall rake teeth studs.
6. Place right holder (Ref 4), angle side up, to the second rake tooth hole from the end and install rake tooth stud. The first rake tooth hole from each end (Ref B) have no rake teeth in them.
7. Slide fan rake (Ref 6) onto holders and pin with lock pin (Ref 5).

26-007 PROFESSIONAL INFELD FINISHER DRAWING

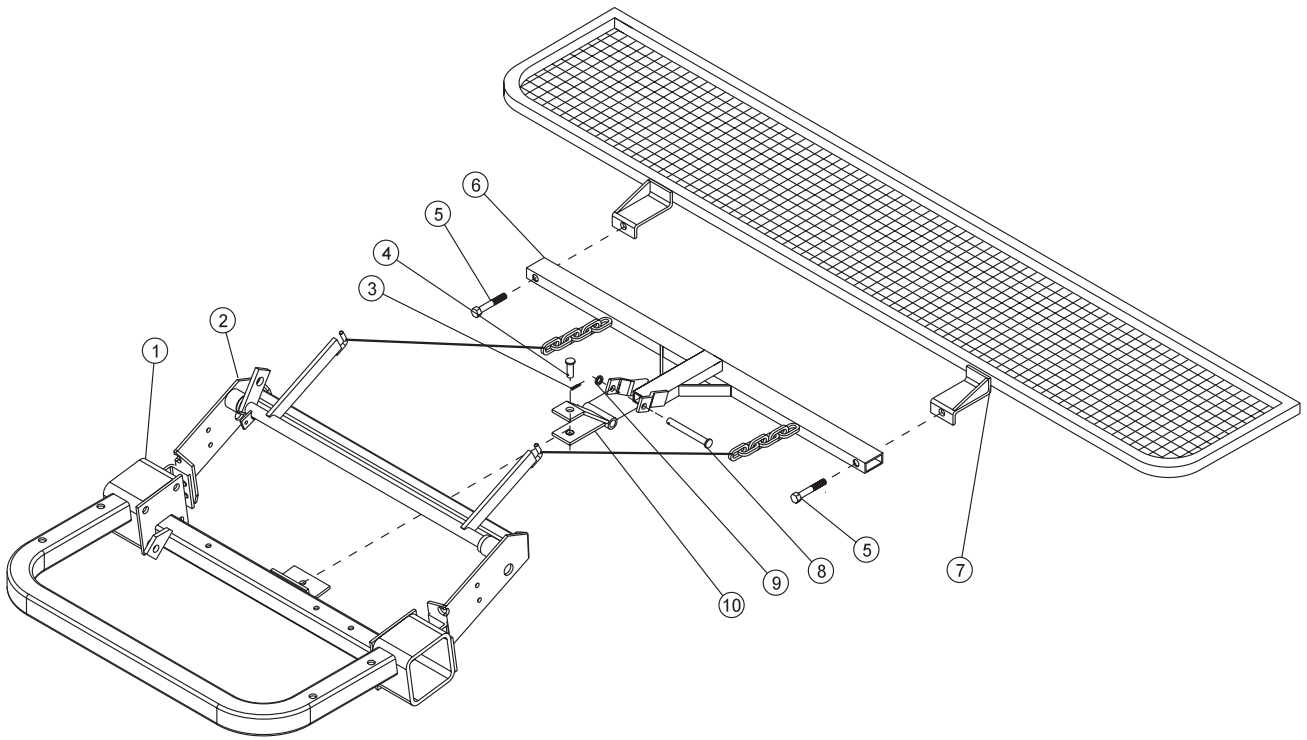

42-185 DRAG MAT KIT DRAWING

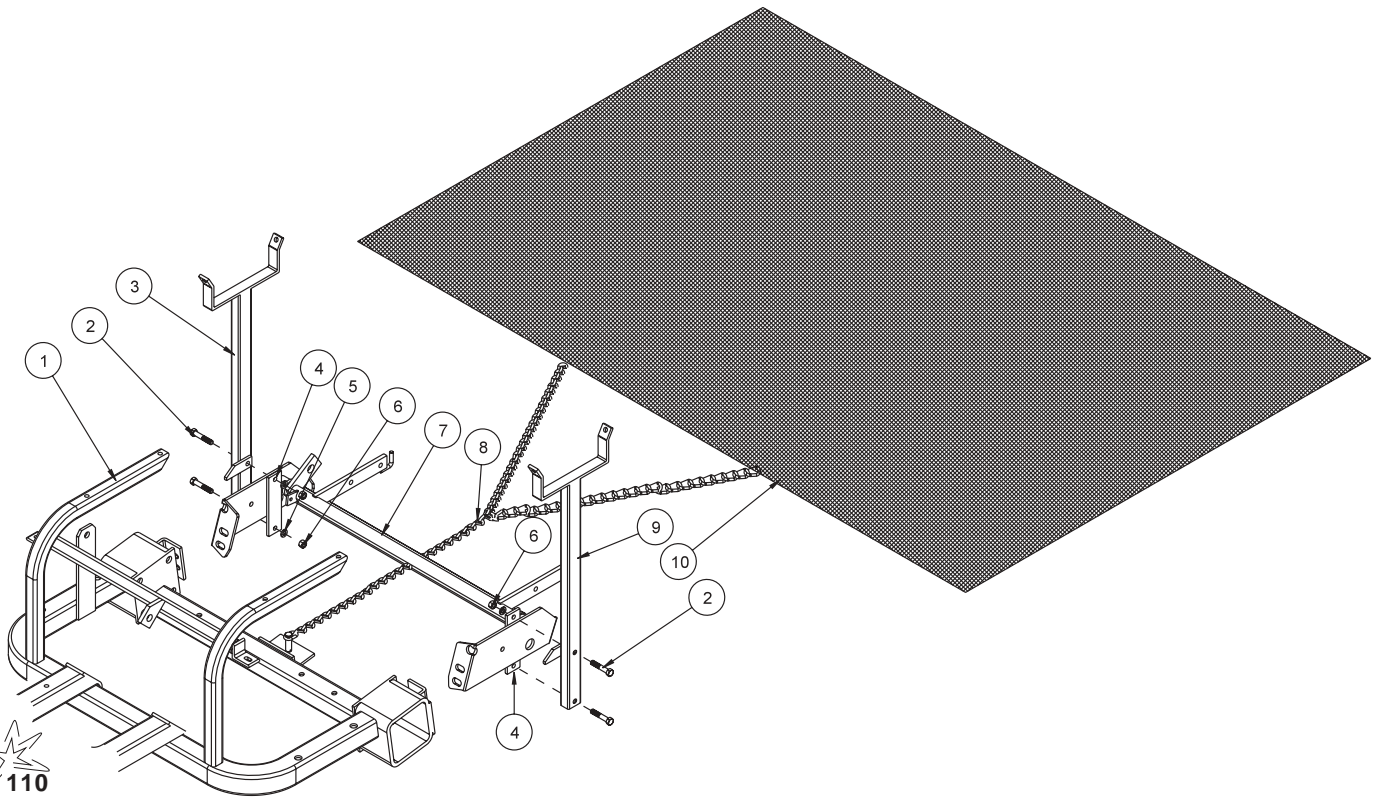

Accessories

26-007 PROFESSIONAL INFIELD FINISHER PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------------|---|----------|
| 1 | | Rear Axle (part of main frame) | 1 |
| 2 | 42-024 | Rake Lift | 1 |
| 3 | HP-18-100 | Cotter Pin $\frac{1}{8}$ x 1 | 1 |
| 4 | HCP-12-150 | Clevis Pin $\frac{1}{2}$ x $1\frac{1}{2}$ | 1 |
| 5 | HB-58-11-300 | Bolt $\frac{5}{8}$ - 11 x 3 | 2 |
| | HNCL-58-11 | Center Lock Nut $\frac{5}{8}$ - 11 | 2 |
| 6 | 13-365 | Drawbar | 1 |
| 7 | 26-045 | Leveling Screen | 1 |
| 8 | HCP-12-450 | Clevis Pin $\frac{1}{2}$ x $4\frac{1}{2}$ | 1 |
| 9 | HMB-12-14 | Machine Bushing $\frac{1}{2}$ x 14GA | 1 |
| 10 | 19-107 | Hitch | 1 |
| 11 | HHP-18 | Bridge Pin $\frac{1}{8}$ | 1 |

INSTALLATION INSTRUCTIONS

The Professional Field Finisher is used for smoothing and leveling fields to professional standards.

1. Attach leveling screen (Ref 7) to drawbar (Ref 6) using two bolts (Ref 5) and center lock nuts.
2. Attach hitch (Ref 10) to drawbar (Ref 6) using clevis pin (Ref 8), machine bushing (Ref 9) and a cotter pin (Ref 3).
3. Mount Professional Field Finisher to the hitch on the trap rake with a clevis pin (Ref 4) and bridge pin (Ref 11).
4. Hook chains from finisher to rake lift arms.
5. **NOTE:** When assembled properly, rake will angle down from front to back. If front of finisher is not higher than the back, damage will result to infield.


42-185 DRAG MAT KIT PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------------|--|----------|
| 1 | | Main Frame | 1 |
| 2 | HB-38-16-225 | Bolt $\frac{3}{8}$ - 16 x $2\frac{1}{4}$ | 4 |
| 3 | 42-186 | Right Mat Carrier | 1 |
| 4 | 13-157 | Strap | 2 |
| 5 | HWL-38 | Lock Washer $\frac{3}{8}$ | 4 |
| 6 | HN-38-16 | Nut $\frac{3}{8}$ - 16 | 4 |
| 7 | 42-024 | Rake Lift (part of machine) | 1 |
| 8 | 19-605 | Drag Mat Chain | 1 |
| | HHP-18 | Bridge Pin $\frac{1}{8}$ | 1 |
| 9 | 42-187 | Left Mat Carrier | 1 |
| 10 | 19-601 | Steel Mat | 1 |

INSTALLATION INSTRUCTIONS

1. Looking from the rear of the Super Star, mount the mat carrier posts (Ref 3 & 9) outside the rear corner of the rake lift with the straps (Ref 4) on the inside of the rake lift side plate. Bolt into place with $\frac{3}{8}$ - 16 x $2\frac{1}{4}$ bolts, lockwasher and nuts.
2. To carry the Drag Mat, roll it up and place it in the brackets of the mat carriers.
3. To use the Drag Mat, unroll the mat flat and hook it up to the Super Star hitch with the clevis pin in the chain and the bridge pin provided.

43-002 FLEXACTION FIELD FINISHER WITH BRUSH DRAWING

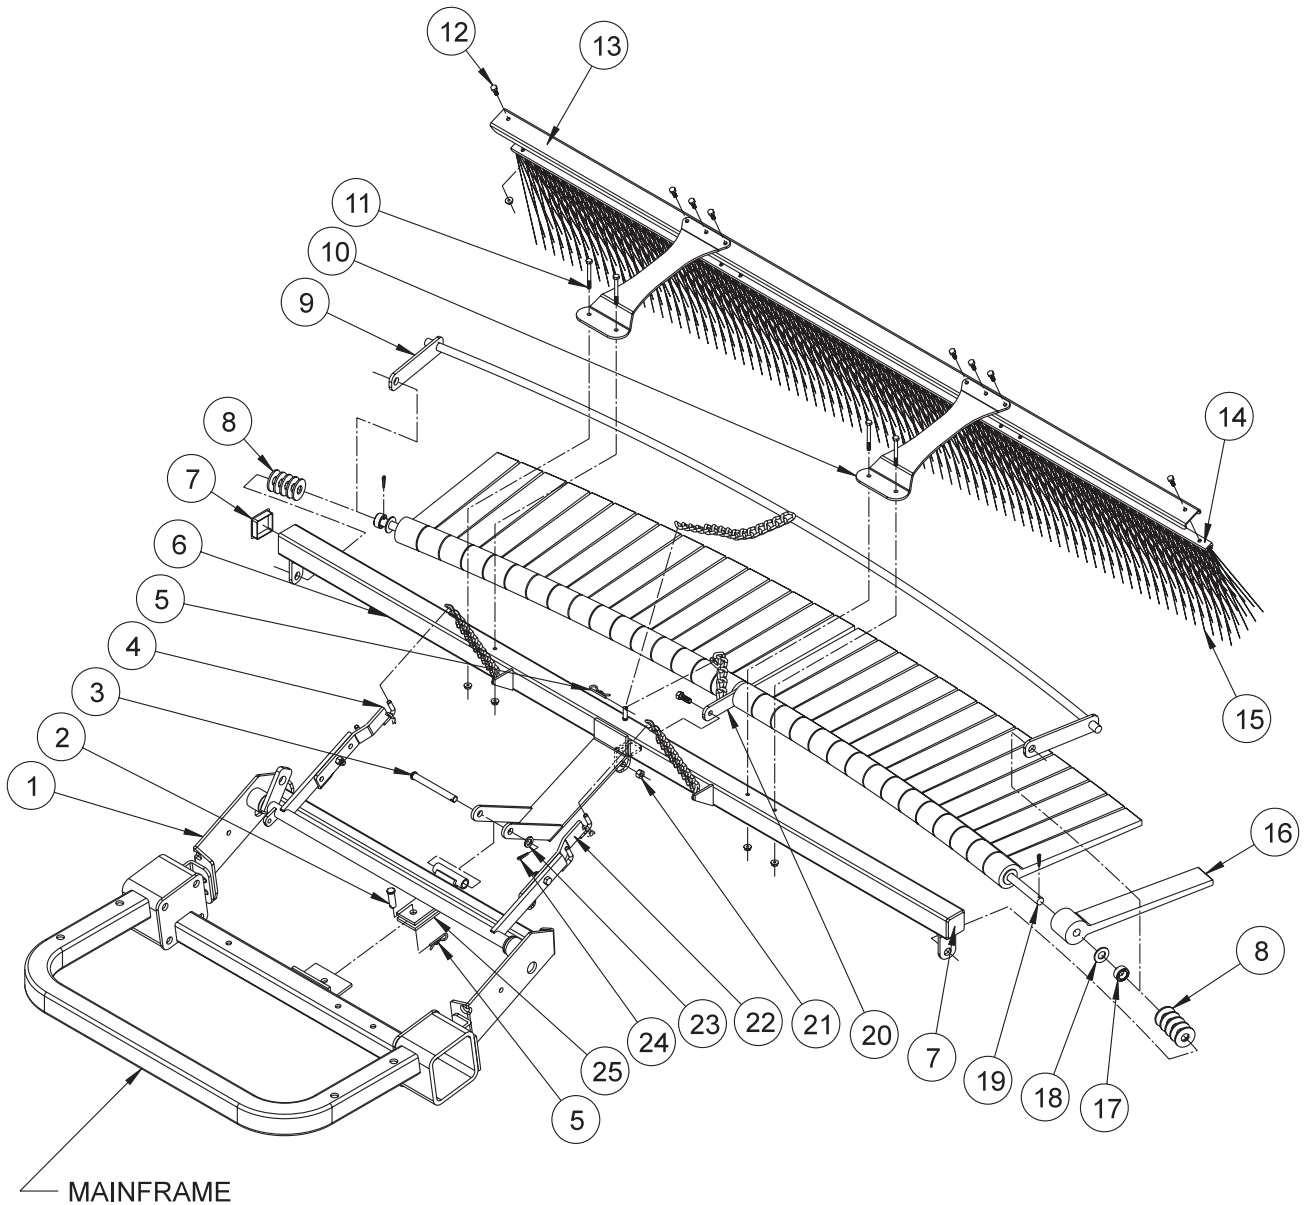



Accessories

43-002 FLEX ACTION FIELD FINISHER WITH BRUSH PARTS LIST



| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------------|---|----------|
| 1 | | Rake Lift (comes with machine) | 1 |
| 2 | HCP-12-150 | Clevis Pin $1\frac{1}{2}$ x $1\frac{1}{2}$ | 1 |
| 3 | HCP-12-450 | Clevis Pin, $1\frac{1}{2}$ x $4\frac{1}{2}$ | 1 |
| 4 | 26-116 | Right Extension Arm | 1 |
| | HB-38-16-125 | Bolt $\frac{3}{8}$ - 16 x $1\frac{1}{4}$ | 1 |
| | HNTL-38-16 | Lock Nut $\frac{3}{8}$ - 16 | 1 |
| 5 | HHP-18 | Bridge Pin, $\frac{1}{8}$ | 2 |
| 6 | 26-046 | Frame | 1 |
| 7 | 18-297 | Cap Plug | 2 |
| 8 | HMB-58-14 | Machine Bushing $\frac{5}{8}$ x 14GA | 10 |
| 9 | 26-047 | Leveler Bar | 1 |
| 10 | 43-041 | Mount Bracket | 2 |
| 11 | HB-14-20-250 | Bolt, $\frac{1}{4}$ -20 x $2\frac{1}{2}$ | 4 |
| | HNFL-14-20 | Flange Whiz-Lock Nut, $\frac{1}{4}$ -20 | 4 |
| 12 | HB-14-20-075 | Bolt, $\frac{1}{4}$ -20 x $\frac{3}{4}$ | 8 |
| | HNFL-14-20 | Flange Whiz-Lock Nut, $\frac{1}{4}$ -20 | 8 |
| 13 | 13-688 | Brush Channel | 1 |
| 14 | 13-683 | Brush Track | 1 |
| 15 | 13-682 | Brush, 77 x 11 | 1 |
| 16 | 26-041 | Rasp Flail | 32 |
| 17 | 11-040 | Spacer, $\frac{3}{4}$ " | 2 |
| 18 | HW-58 | Washer, $\frac{5}{8}$ | 32 |
| 19 | 26-049 | Mounting Bar | 1 |
| | HP-18-100 | Cotter Pin, $\frac{1}{8}$ x 1 | 2 |
| 20 | 26-048 | Flail Bar Strap | 1 |
| 21 | HB-38-16-100 | Bolt, $\frac{3}{8}$ - 16 x 1 | 1 |
| | HNCL-38-16 | Center Lock Nut, $\frac{3}{8}$ - 16 | 1 |
| 22 | 26-117 | Left Extension Arm | 1 |
| | HB-38-16-125 | Bolt $\frac{3}{8}$ - 16 x $1\frac{1}{4}$ | 1 |
| | HNTL-38-16 | Lock Nut $\frac{3}{8}$ - 16 | 1 |
| 23 | HMB-12-14 | Machine Bushing, $\frac{1}{2}$ - 14GA | 1 |
| 24 | HP-18-100 | Cotter Pin, $\frac{1}{8}$ x 1 | 1 |
| 25 | 19-107 | Draw Bar Assembly | 1 |

RAKE LIFT ARM HOLE PLACEMENT

If the Lift Arms on the Rake Lift are not drilled, use the following dimensions to drill $\varnothing 13/32$ holes to mount the extension arms to.

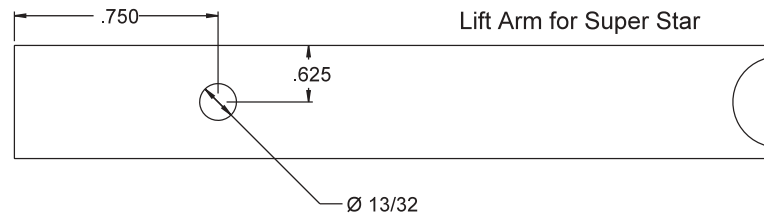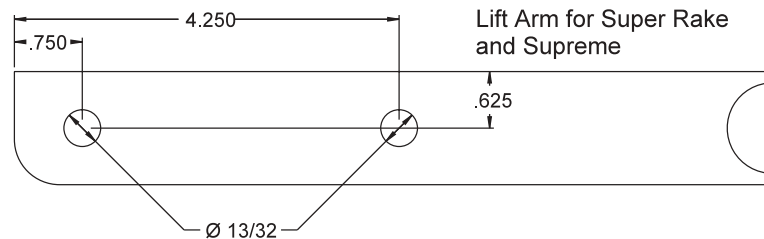

43-002 FLEXACTION FIELD FINISHER WITH BRUSH DRAWING

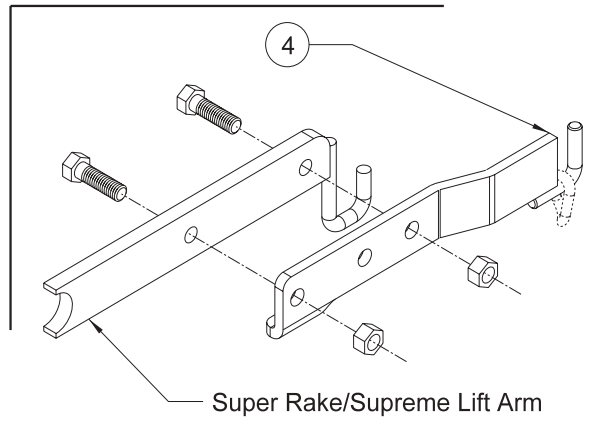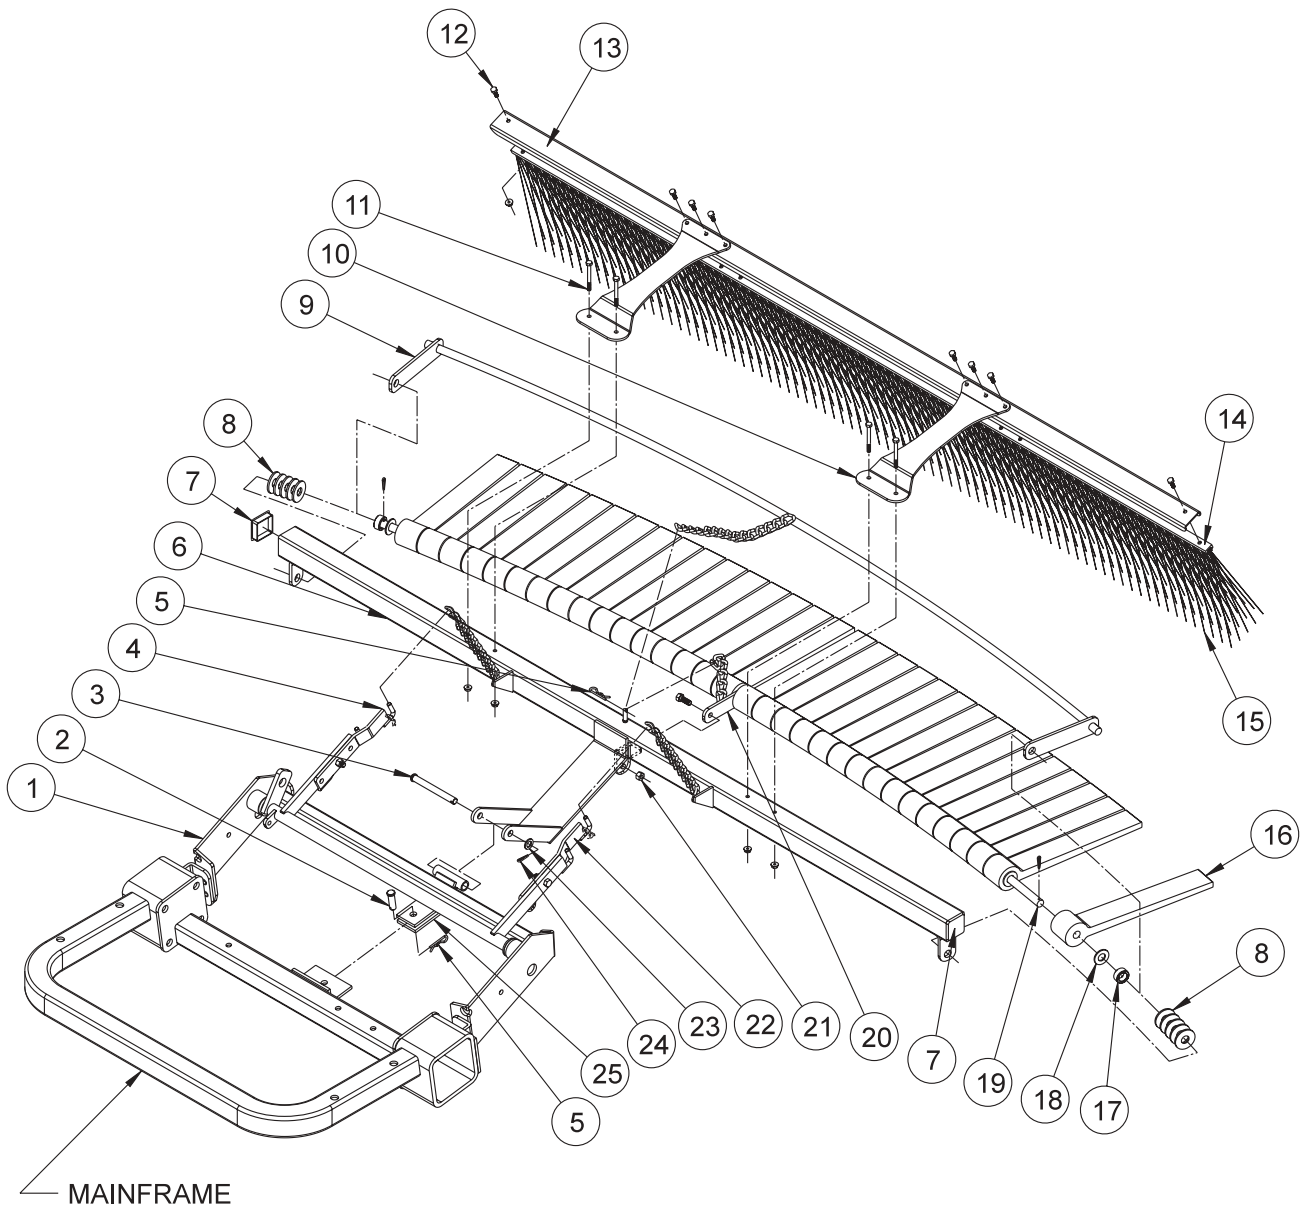

Accessories

43-002 FLEXACTION FIELD FINISHER WITH BRUSH INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

1. Install flail bar strap (Ref 20) to center of mounting bar (Ref 19) with chain on top of flail bar strap and mounting bar bent away from you. Apply a light coat of lubricant to overall length of mounting bar.
2. Install one rasp flail (Ref 16) with knobby side down adjacent to sides of flail bar strap (Ref 20). Now install a flat washer (Ref 18) so it sits adjacent with the outside of the rasp flail. Continue to install flails with knobby sides down with washers between until you have 16 flails and washers on each side of bar strap. Force all flails tightly toward bar strap.
3. After all 32 flails have been installed, place one spacer (Ref 17) to each end of mounting bar adjacent to washer.
4. Install leveler bar (Ref 9) to mounting bar, with curved leveler bar resting on top on the smooth sides of flails. If all flails and washers do not fit snugly at this time, remove leveler bar and install enough machine bushings to ensure a snug fit. Then reinstall leveler bar.
5. Lay the frame (Ref 6) on the floor or bench with welded tabs facing up. Install ends of assembled mounting bar, with knobby sides of flails up, into welded tabs on each end of frame and secure with $\frac{1}{8}$ x 1 cotter pin.
6. Install flail bar strap (Ref 20) to center tab on frame with $\frac{3}{8}$ -16 x 1 bolt and $\frac{3}{8}$ -16 center lock nut. Loose fit is required. Do not over tighten.
7. Flip assembly over so knobby sides of flails are now facing down. Install hitch (Ref 25) to frame with clevis pin (Ref 3) and cotter pin (Ref 24). The hitch should be attached to the frame as shown.
8. Install bar strap chain over welded pin on frame. Install leveler bar chain on to pin and secure in place with bridge pin. Use last bridge pin and clevis pin to hitch field finisher to your machine.
9. Add extension arms (Refs 4 & 22) to rake lift. **Super Star** - use the center hole and only (1) $\frac{3}{8}$ -16 x $1\frac{1}{4}$ bolt per arm. **Supreme & Super Rake(see sidebar)** - use the two outside holes on the extension arms and (2) $\frac{3}{8}$ -16 x $1\frac{1}{4}$ bolts per arm. Hook lift chains to extension arms (Refs 4 & 22).


OPERATING INSTRUCTIONS

Running attachment with all flails down, flat on the surface, will provide a leveling function. Running attachment partially raised and flails at a 20° - 40° angle in relation to the level surface, will provide a finishing function. The flails increase down pressure for desired finish. Drive in wide circular patterns and increase or decrease ground speed to achieve desired finish.

BRUSH ASSEMBLY

1. Place the brush (Ref 15) into the brush track (Ref 14). Place the brush channel (Ref 13) between the brush track and the mounting brackets. Now bolt the mounting brackets (Ref 10) to the brush track using the $\frac{1}{4}$ -20 x $\frac{3}{4}$ bolts and $\frac{1}{4}$ -20 flange whiz-lock nuts (Ref 12).
2. Mount the brush assembly to the frame using the (4) $\frac{1}{4}$ -20 x $2\frac{1}{2}$ bolts and $\frac{1}{4}$ -20 flange whiz-lock nuts (Ref 11).

26-008 FLEX ACTION FIELD FINISHER DRAWING

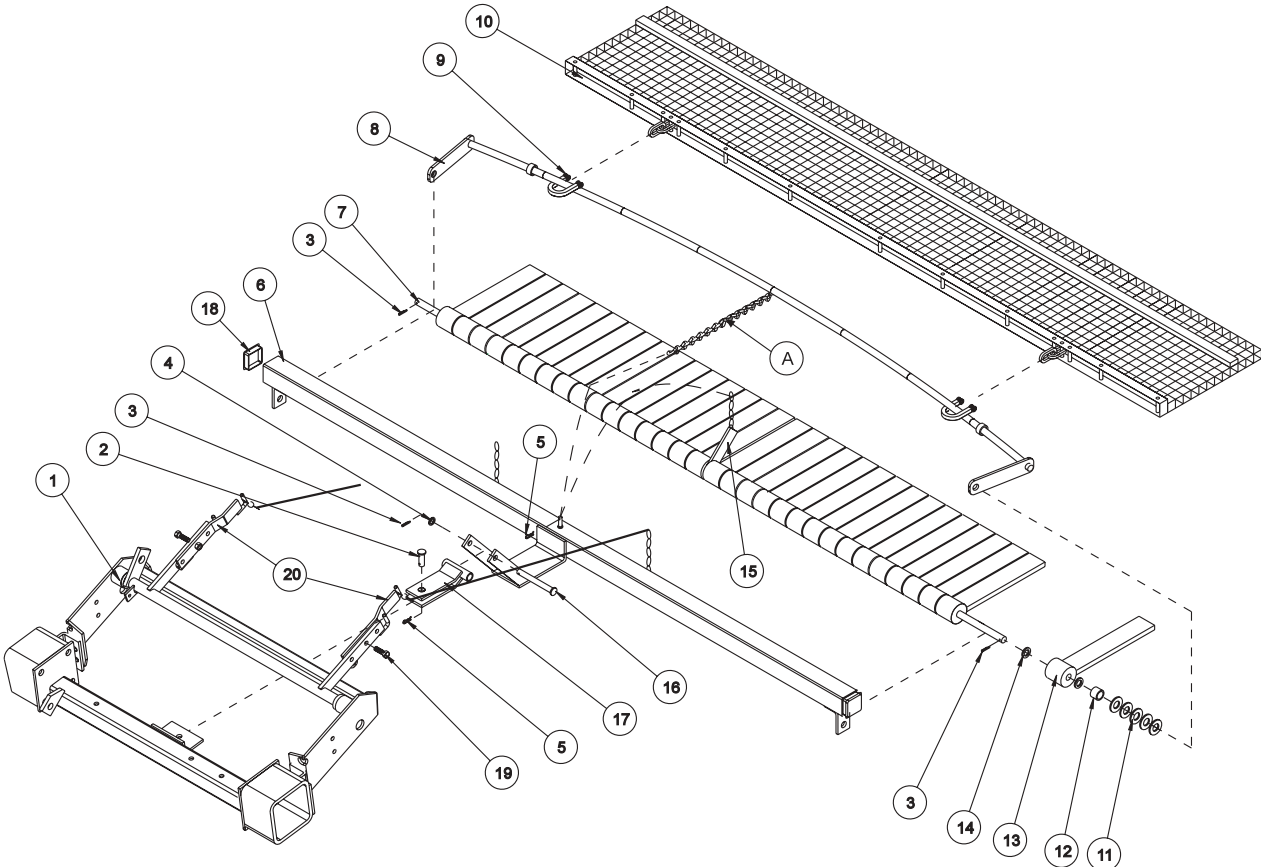


Accessories

26-008 FLEX ACTION FIELD FINISHER PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------------|--|----------|
| 1 | 42-024 | Rake Lift (comes with machine) | 1 |
| 2 | HCP-12-150 | Clevis Pin $\frac{1}{2} \times 1\frac{1}{2}$ | 1 |
| 3 | HP-18-100 | Cotter Pin $\frac{1}{8} \times 1$ | 3 |
| 4 | HMB-12-14 | Machine Bushing $\frac{1}{2}$ - 14GA | 1 |
| 5 | HHP-18 | Bridge Pin $\frac{1}{8}$ | 2 |
| 6 | 26-046 | Frame | 1 |
| 7 | 26-049 | Mounting Bar | 1 |
| 8 | 26-047 | Leveler Bar | 1 |
| 9 | 21-260 | $\frac{3}{8}$ Chain Clevis | 2 |
| 10 | 26-115 | Mesh Finisher | 1 |
| 11 | HMB-58-14 | Machine Bushing $\frac{5}{8} \times 14$ GA | 10 |
| 12 | 11-040 | Spacer $\frac{3}{4}$ " | 2 |
| 13 | 26-041 | Rasp Flail | 32 |
| 14 | HW-58 | Washer $\frac{5}{8}$ | 32 |
| 15 | 26-048 | Flail Bar Strap | 1 |
| | HB-38-16-100 | Bolt $\frac{3}{8}$ - 16 x 1 | 1 |
| | HNCL-38-16 | Center Lock Nut $\frac{3}{8}$ - 16 | 1 |
| 16 | HCP-12-450 | Clevis $\frac{1}{2} \times 4\frac{1}{2}$ | 1 |
| 17 | 19-107 | Hitch | 1 |
| 18 | 18-297 | Cap Plug | 2 |
| 19 | HB-38-16-125 | Bolt $\frac{3}{8}$ - 16 x $1\frac{1}{4}$ | 4 |
| | HNTL-38-16 | Lock Nut $\frac{3}{8}$ - 16 | 4 |
| 20 | 26-116 | Right Extension Arm | 1 |
| | 26-117 | Left Extension Arm | 1 |

26-008 FLEX ACTION FIELD FINISHER DRAWING

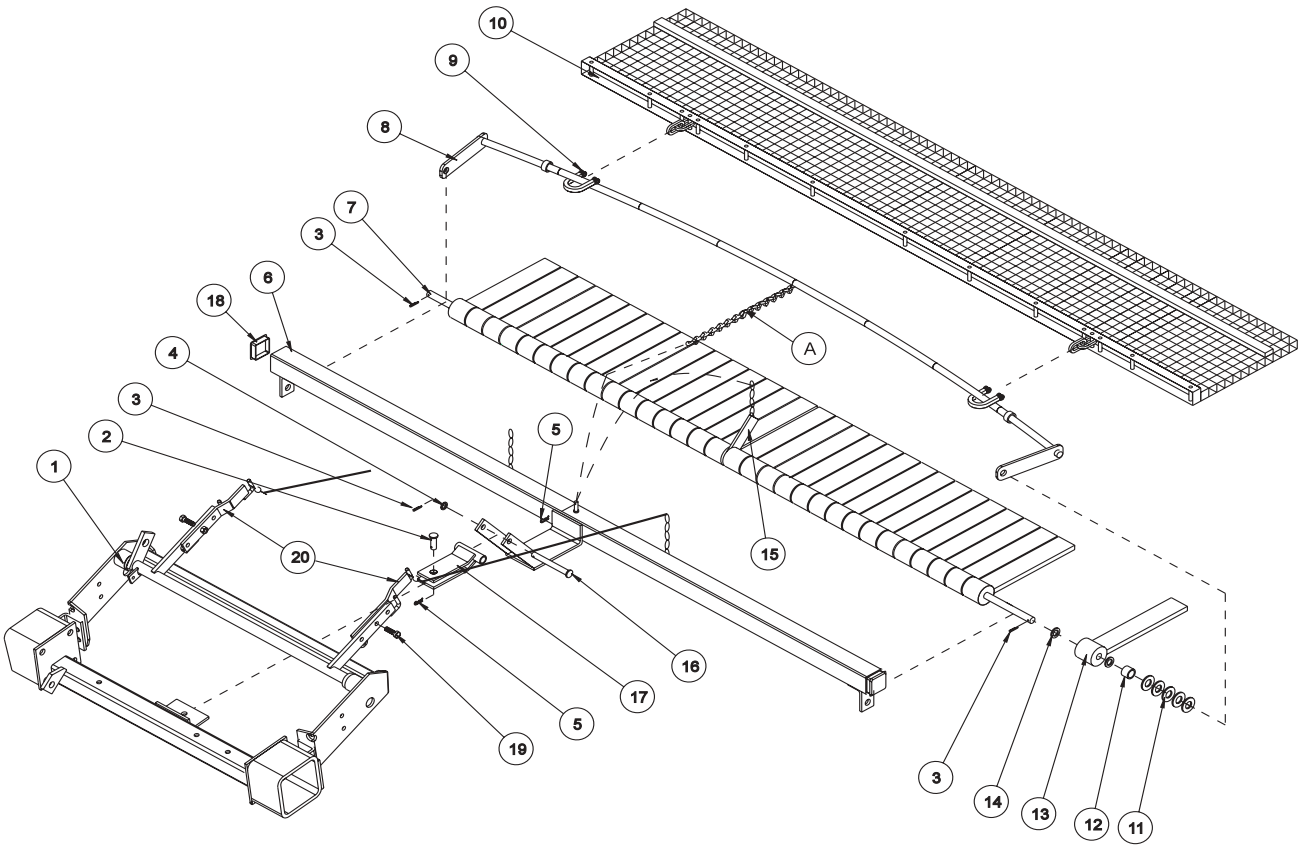

Accessories

INSTALLATION INSTRUCTIONS

1. Install flail bar (Ref 15) strap to center of mounting bar (Ref 7) with chain on top of flail bar strap and mounting bar bent away from you. Apply a light coat of lubricant to overall length of mounting bar.
2. Install one rasp flail (Ref 13) with knobby side down adjacent to sides of flail bar strap (Ref 15). Now install a flat washer (Ref 14) so it sits adjacent with the outside of the rasp flail. Continue to install flails with knobby sides down with washers between until you have 16 flails and washers on each side of bar strap. Force all flails tightly toward bar strap.
3. After all 32 flails have been installed, place one spacer (Ref 12) to each end of mounting bar adjacent to washer.
4. Install leveler bar (Ref 8) to mounting bar, with curved leveler bar resting on top on the smooth sides of flails. If all flails and washers do not fit snugly at this time, remove leveler bar and install enough machine bushings to ensure a snug fit. Then reinstall leveler bar.
5. Lay the frame (Ref 6) on the floor or bench with weld tabs facing up. Install ends of assembled mounting bar, with knobby sides of flails up, into welded tabs on each end of frame and secure with cotter pin (Ref 3).
6. Install flail bar strap (Ref 15) to center tab on frame with $\frac{3}{8}$ -16 x 1 bolt and $\frac{3}{8}$ -16 center lock nut. Loose fit is required. Do not over tighten
7. Flip assembly over so knobby sides of flails are now facing down. Install hitch (Ref 17) to frame with clevis pin (Ref 16) and cotter pin (Ref 3) . The hitch should be attached to the frame as shown.
8. Install bar strap chain over welded pin on frame. Install leveler bar chain on to pin and secure in place with bridge pin. Use last bridge pin and clevis pin to hitch field finisher to your machine.
9. Add extension arms (Ref 20) to rake lift. **Super Star** - use the center hole and only (2) $1\frac{1}{4}$ bolts (Ref 19). **Supreme & Super Rake** - use the two outside holes on the extension arms and (4) $1\frac{1}{4}$ bolts. Hook lift chains to extension arms (Ref 20).

OPERATING INSTRUCTIONS


Running attachment with all flails down, flat on the surface, will provide a leveling function. Running attachment partially raised and flails at a 20° - 40° angle in relation to the level surface, will provide a finishing function. The flails increase down pressure for desired finish. Drive in wide circular patterns and increase or decrease ground speed to achieve desired finish.

MESH FINISHER


To get a smoother finish, Install a Mesh Finisher onto your Flex Action Field Finisher.

1. If the 26-008 flex action field finisher is on your machine, lower it to the ground. You may have to pull machine ahead slightly so the field finisher is lying flat on the ground or floor.
2. Lay mesh finisher behind field finisher with weight bar facing up and chain hooks towards field finisher.
3. Take the two chain clevis' and hook onto leveler bar and then through the chain hooks on mesh finisher. The clevis pin that comes with the chain clevis should go through the chain clevis, first link on chain hook (on the mesh finisher) and then through other side of the chain clevis. Insert the cotter pin.
4. Center mesh finisher with flex action field finisher.
5. Raise lift on your machine to insure proper ground clearance before driving your machine.
6. (Ref A) Chain length is to control amount of mesh trailing behind flails for wet or dry conditions. For wet conditions: Shorten chains. For dry conditions: May use maximum amount of chain to make desired finish.

43-043 FINISHING BRUSH KIT DRAWING

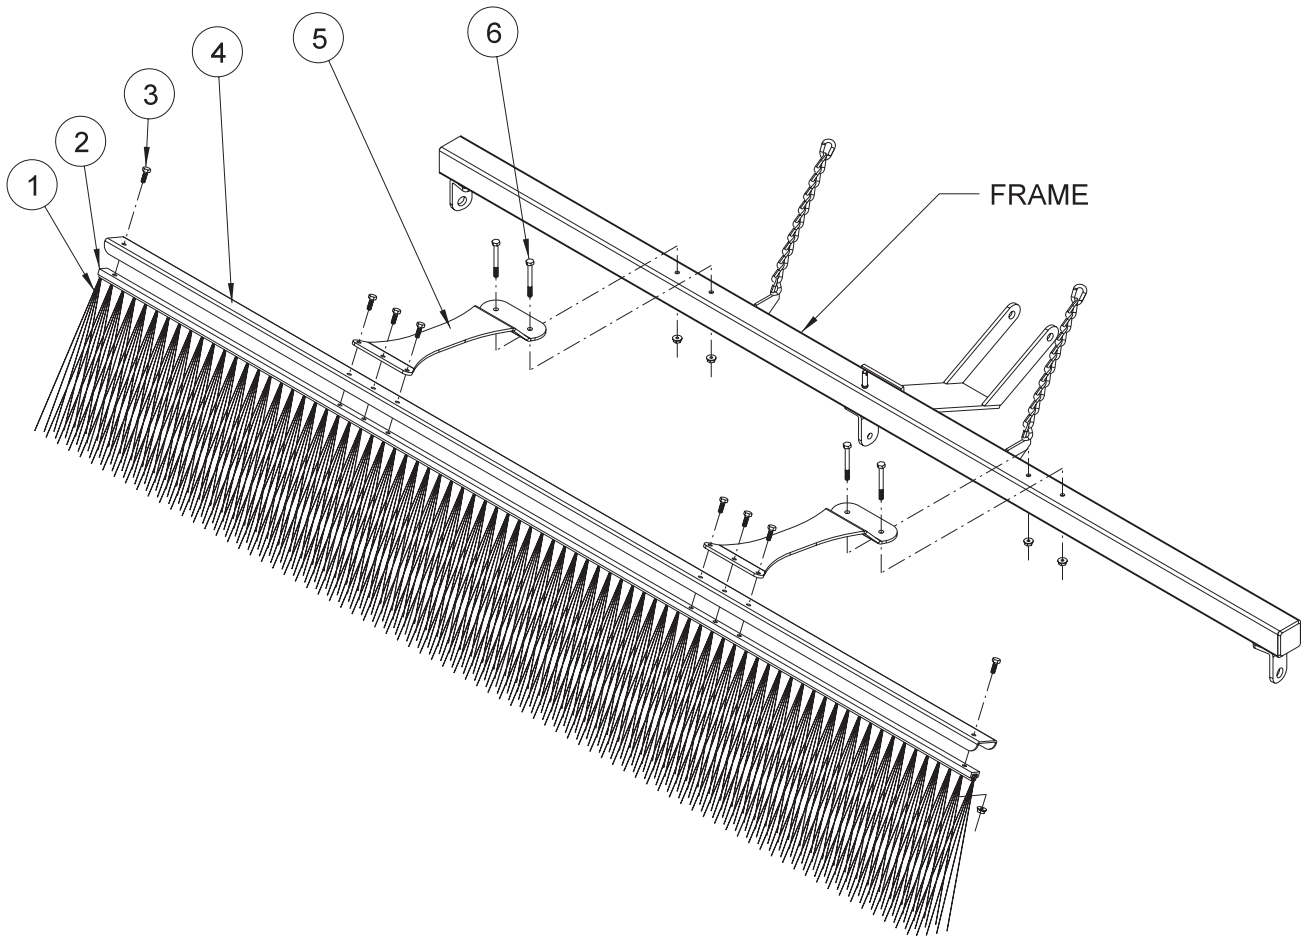

HOLE LOCATION

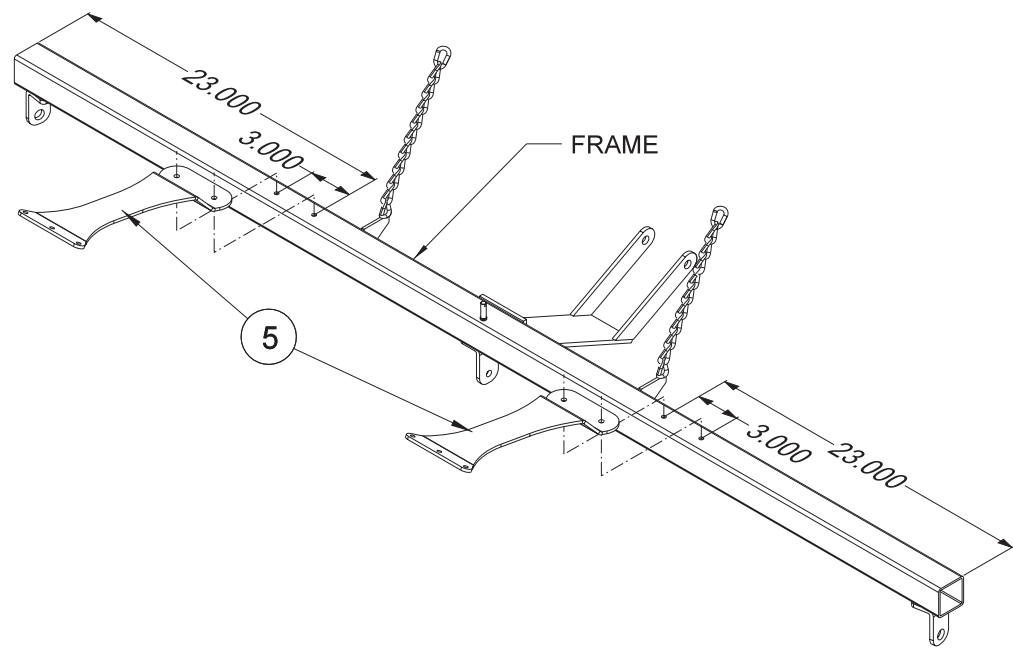

Accessories


43-043 FINISHING BRUSH KIT PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------------|--------------------------------|----------|
| 1 | 13-682 | Brush, 77 x 11 | 1 |
| 2 | 13-683 | Brush Track | 1 |
| 3 | HB-14-20-075 | Bolt, 1/4 - 20 x 3/4 | 8 |
| | HNFL-14-20 | Flange Whiz-Lock Nut, 1/4 - 20 | 8 |
| 4 | 13-688 | Brush Channel | 1 |
| 5 | 43-041 | Mount Bracket | 2 |
| 6 | HB-14-20-250 | Bolt, 1/4 - 20 x 2 1/2 | 4 |
| | HNFL-14-20 | Flange Whiz-Lock Nut, 1/4 - 20 | 4 |

INSTALLATION INSTRUCTIONS

1. Remove the mesh finisher from your unit, it will not be used with the brush.
2. Place the brush (Ref 1) into the brush track (Ref 2). Place the brush channel (Ref 4) between the brush track and the mounting brackets (Ref 5). Now bolt the mounting brackets (Ref 5) to the brush track using the 1/4 - 20 x 3/4" bolts and 1/4 - 20 flange whiz-lock nuts (Ref 3).
3. Four holes need to be drilled into the frame of the Flex Action Finisher to mount the brush. Drill two $\text{Ø}^{9/32}$ holes 23" in from each end and 3" apart (see Reference drawing).
4. Mount the brush assembly to the frame using the four 1/4 - 20 x 2 1/2" bolts and 1/4 - 20 flange whiz-lock nuts (Ref 5).

42-582 GREEN STAR RBS SPIKER SET (3) DRAWING

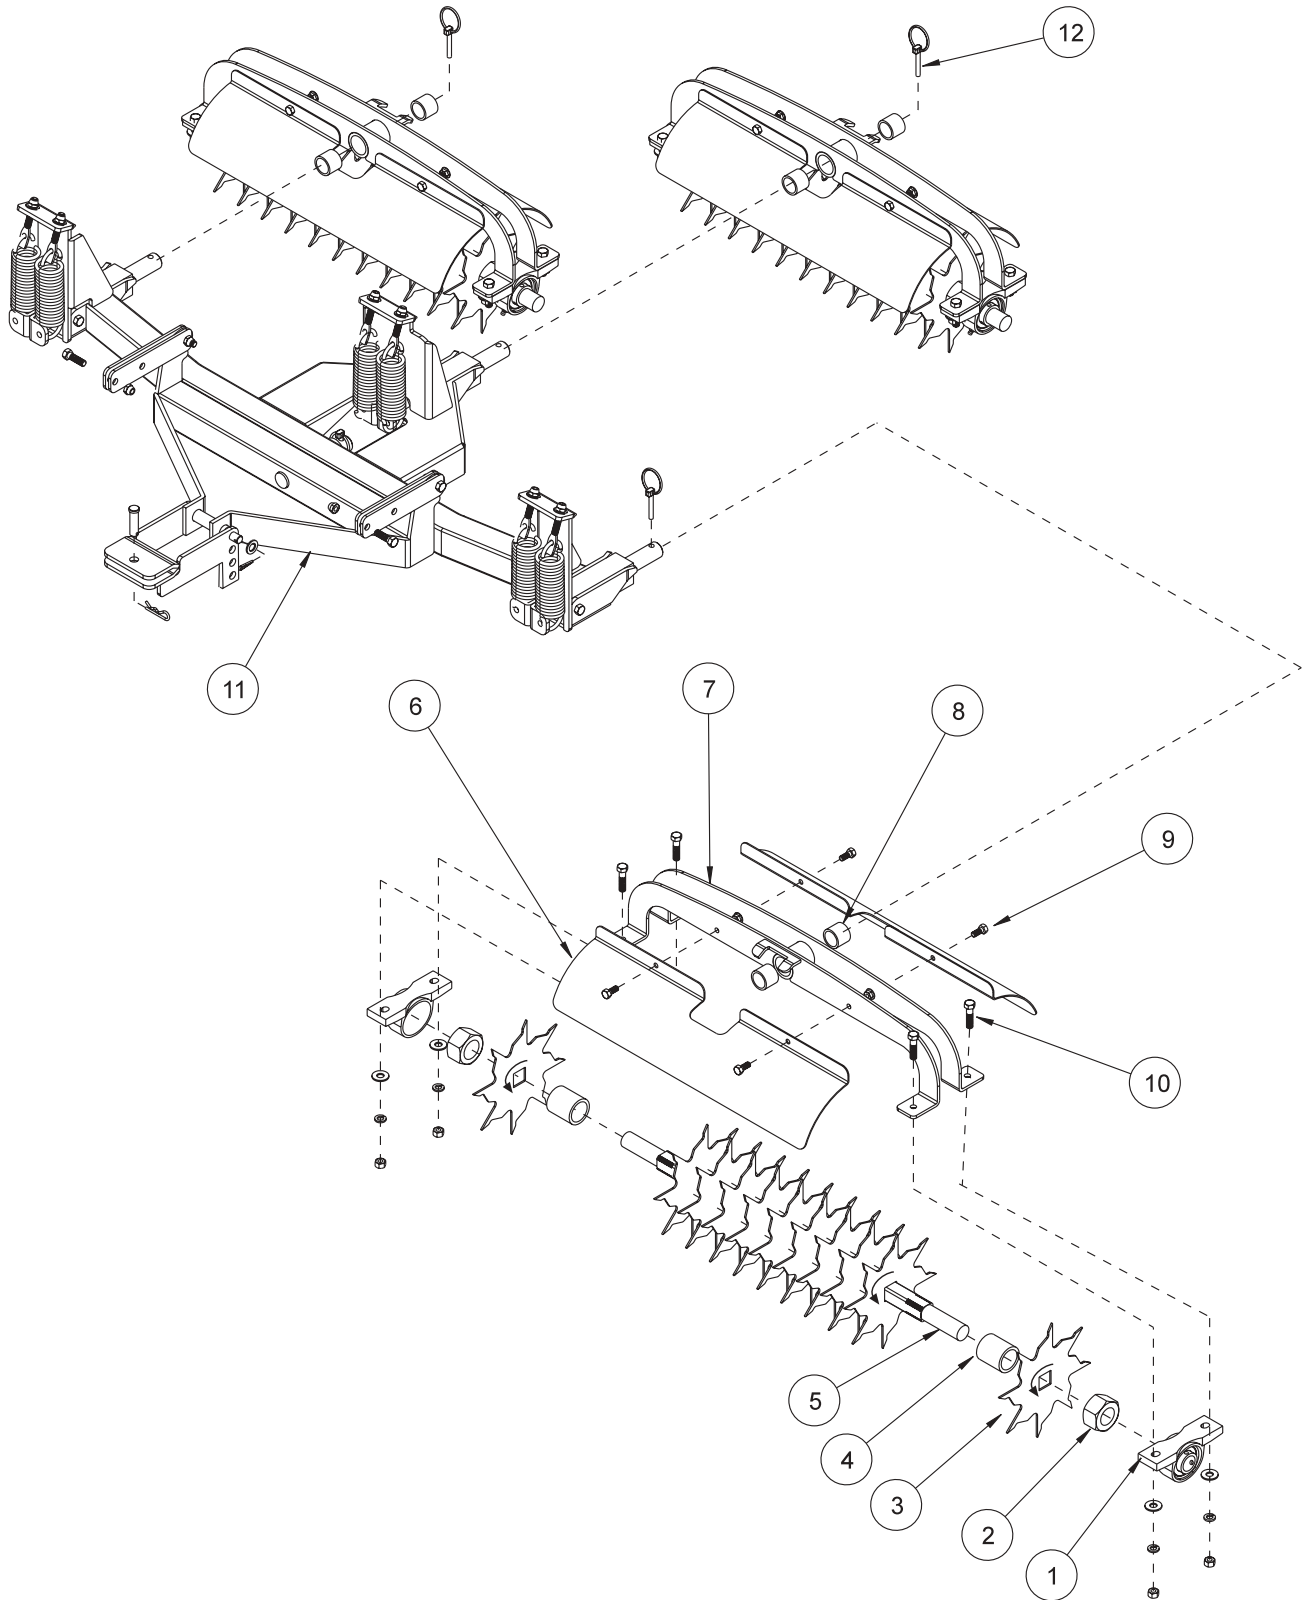

42-582 GREEN STAR RBS SPIKER SET (3) DRAWING

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|---------------|---|----------|
| 1 | 11-094 | Pillow Block | 6 |
| 2 | HNJ-114-12 | Jam Nut 1 ¹ / ₄ - 12 | 6 |
| 3 | 42-583 | Spiker Blade | 33 |
| 4 | 8965-1.875 | Spiker Blade Spacer (1.875") | 30 |
| 5 | 42-554 | Spiker Shaft | 3 |
| 6 | 42-578 | Spiker Cover | 6 |
| 7 | 42-574 | Fork | 3 |
| 8 | 18-295 | Oilite Bushing (part of 42-574) | 6 |
| 9 | HB-516-18-075 | Bolt ⁵ / ₁₆ - 18 x ³ / ₄ | 12 |
| | HNTL-516-18 | Lock Nut ⁵ / ₁₆ - 18 | 12 |
| 10 | HB-38-16-150 | Bolt ³ / ₈ - 16 x 1 ¹ / ₂ | 12 |
| | HWL-38 | Lock Washer ³ / ₈ | 12 |
| | HW-38 | Washer ³ / ₈ | 24 |
| | HN-38-16 | Nut ³ / ₈ - 16 | 12 |
| 11 | 42-586 | Green Star RBS Main Frame | 1 |
| 12 | 42-539 | Lynch Pin ⁵ / ₁₆ (part of main frame) | 3 |

ADJUSTMENTS AND OPERATION INSTRUCTIONS

ADJUSTMENT

The springs are preset for maximum down pressure, and should not need to be adjusted. If you feel the need to adjust the springs please call for further instructions. The unit comes pre-adjusted for most models. When installing spiker system use lower mounting holes on hitch.

Tire pressure should be 4 psi in the front and 7 psi in the rear tire for best traction.


OPERATION

Make sure the spiker system has been installed and adjusted properly for your model of bunker rake. Always transport in fully raised position. Always remove flag pole before spiking green. Do not stop on green while spiking. Do not spike up steep slopes or loss of traction may result. Do not turn while spiking.


To begin spiking, lower unit all the way down as you come across collar and continue straight across green until reaching other collar and raise as you come off of green. Overlap stripes the same as if you were mowing.

INSTALLATION

Spiker blades must be installed so that the jagged side of the tooth cuts into the turf first. This allows only a piercing of the turf, whereas if the straight edge of the spiker blades enters first it will act more as a cutting effect.

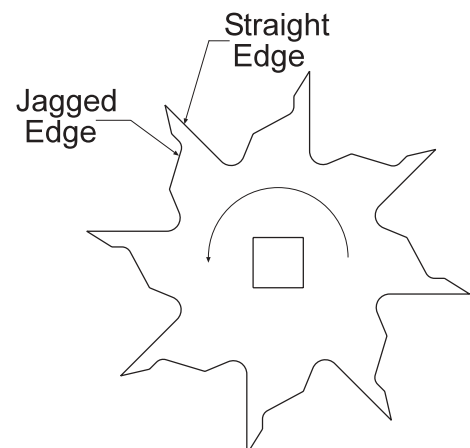

42-586 GREEN STAR RBS MAIN FRAME DRAWING

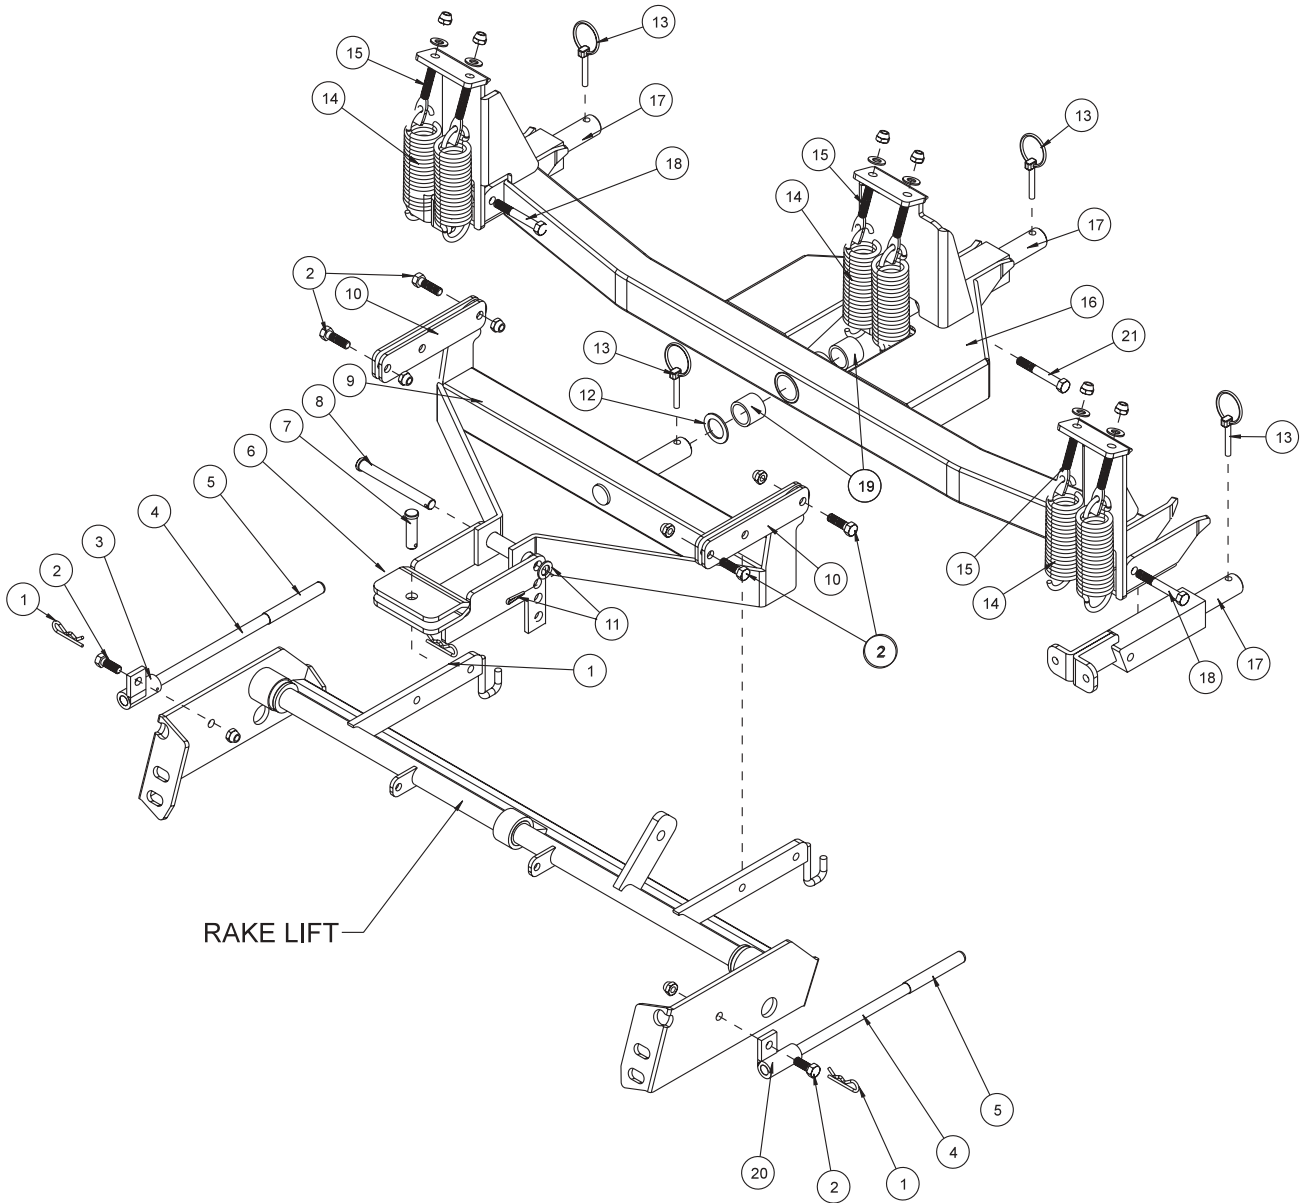


Accessories

42-586 GREEN STAR RBS MAIN FRAME PARTS LIST

| REF# | PART# | DESCRIPTION | QUANTITY |
|------|--------------|---|----------|
| 1 | HHP-18 | Bridge Pin $\frac{1}{8}$ | 3 |
| 2 | HB-38-16-125 | Bolt $\frac{3}{8}$ - 16 x $1\frac{1}{4}$ | 6 |
| | HNTL-38-16 | Lock Nut $\frac{3}{8}$ - 16 | 6 |
| 3 | 42-525 | Right Rod Holder | 1 |
| 4 | 42-580 | Stabilizer Rods | 2 |
| 5 | 13-499 | Grip | 2 |
| 6 | 42-565 | Hitch | 1 |
| 7 | HCP-12-175 | Clevis Pin $\frac{1}{2}$ - $1\frac{3}{4}$ | 1 |
| 8 | HCP-12-450 | Clevis Pin $\frac{1}{2}$ - $4\frac{1}{2}$ | 1 |
| 9 | 42-575 | Three Point Hitch | 1 |
| 10 | 42-566 | Lift Strap | 4 |
| 11 | HMB-12-14 | Machine Bushing $\frac{1}{2}$ x 14GA | 1 |
| | HP-18-100 | Cotter Pin $\frac{1}{8}$ x 1 | 1 |
| 12 | HMB-100-14 | Machine Bushing 1 x 14GA | 1 |
| 13 | 42-539 | Lynch Pin $\frac{5}{16}$ | 4 |
| 14 | 42-536 | Spring | 6 |
| 15 | 42-537 | Spade Bolt | 6 |
| | HNTL-38-16 | Lock Nut $\frac{3}{8}$ - 16 | 6 |
| 16 | 42-577 | Frame | 1 |
| 17 | 42-576 | Spring Tower | 3 |
| 18 | HB-38-16-275 | Bolt $\frac{3}{8}$ - 16 x $2\frac{3}{4}$ | 2 |
| | HNTL-38-16 | Lock Nut $\frac{3}{8}$ - 16 | 2 |
| 19 | 18-295 | Oilite Bushing (part of 42-577) | 2 |
| 20 | 42-524 | Left Rod Holder | 1 |
| 21 | HB-38-16-250 | Bolt $\frac{3}{8}$ - 16 x $2\frac{1}{2}$ | 1 |
| | HNCL-38-16 | Center Lock Nut $\frac{3}{8}$ - 16 | 1 |

GREEN STAR RBS MOUNT FOR SMITHCO SUPER STAR

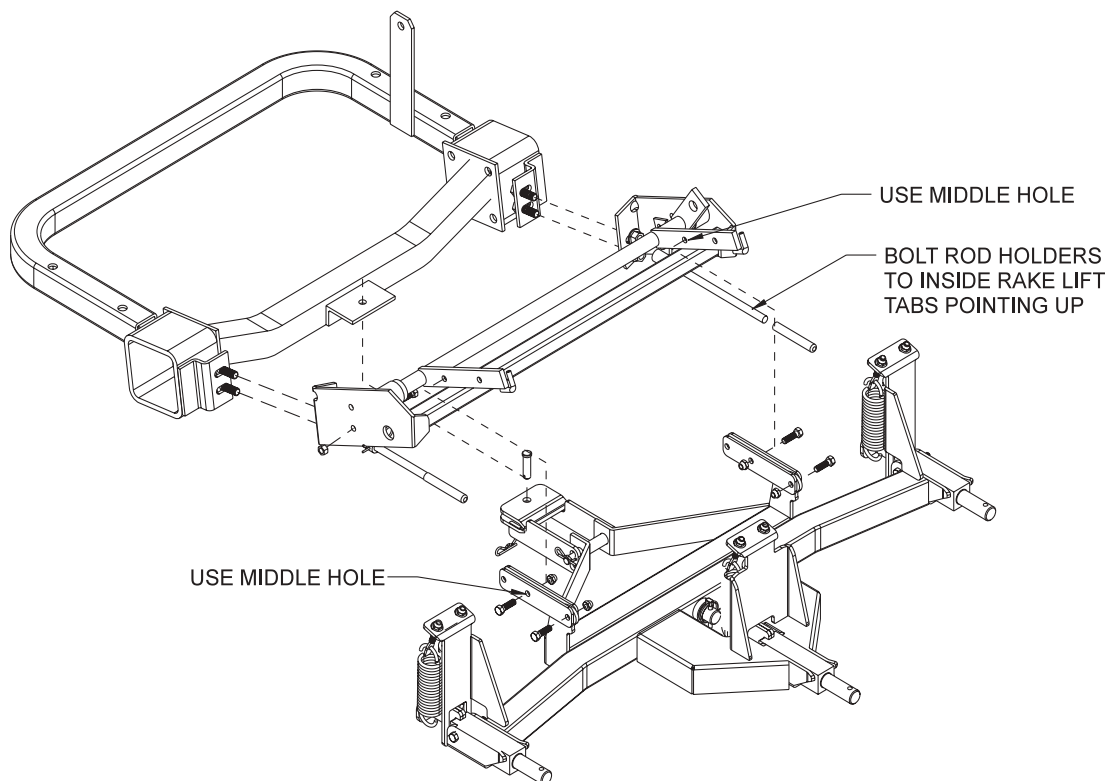

DECAL LIST

This is a list of decals located on the Super Star. Part number, description and location will help in reordering decals.

| | | | |
|--------|-----------------------------|---|---------------------------------------|
| 13-556 | Decal, Warning | 1 | Left Side Below Seat |
| 25-277 | Decal, Battery | 1 | Bottom Seat |
| 25-286 | Decal, Pinch Point | 1 | Bottom Seat Panel |
| 25-298 | Decal, Warning Hot | 2 | Bottom Seat Panel. Oil Filter Bracket |
| 25-333 | Decal, Emissions | 1 | Engine |
| 25-337 | Decal, Speed Boss | 1 | Hang from Steering |
| 25-344 | Decal, Smithco 3" Star | 1 | Steering Column |
| 25-349 | Decal, Foot Pedal | 1 | Right Side Nose Cone |
| 25-352 | Decal, By-Pass Valve | 1 | Hang Tag |
| 25-354 | Decal, Tire Pressure 5psi | 3 | Wheels |
| 25-357 | Decal, Smithco | 1 | Front Nose Cone |
| 25-361 | Decal, Technical Assistance | 1 | Main Frame |
| 27-077 | Decal, Smithco Round | 1 | Steering Cap |
| 42-283 | Decal, Super Star V | 2 | Nose Cone |
| 42-765 | Decal, Lift Control | 1 | Right Body Top |
| 42-764 | Decal, Control Panel | 1 | Left of Seat |

QUICK REFERENCE REPLACEMENT PARTS

REPLACEMENT FILTERS

| | | |
|-----------|-------------------------------------|-----------------------------|
| 23-031 | Hydraulic Oil Filter | |
| 15-165-01 | Air Filter Element with Pre-Cleaner | Briggs and Stratton# 5050 |
| 42-076-03 | Air Filter Element Fender Mounted | |
| 50-403 | Fuel Filter | |
| 13-531 | Engine Oil Filter | Briggs and Stratton# 492932 |

SEAL KITS

| | | |
|-------------------|---|--|
| 34-109 | Variable Pump | |
| 14-098 | Seal Kit | |
| 42-002 and 42-039 | Wheel Motors | |
| 42-002-15 | Seal Kit | |
| 42-220 | 2-Bank Hydraulic Valve | |
| 14-062 | Seal Kit | |
| 14-106 | Relief Assembly Kit | |
| 14-203 | Spring Centering Assembly Kit (1 per bank) | |
| 42-227 | 3-Bank Hydraulic Valve | |
| 14-205 | Seal Kit | |
| 14-106 | Relief Assembly Kit | |
| 14-203 | Spring Centered Assembly Kit (1 per bank) | |
| 10-135 | Hydraulic Cylinder (Attachment Lift Cylinder) | |
| 13-357 | Hydraulic Cylinder for Rake Lift | |
| 13-292 | Hydraulic Cylinder for Sand Plow Lift | |
| 14-267 | Seal Kit | |

FLUIDS

| | |
|-----------------|---|
| Engine Oil | Refer to Engine Manual |
| Hydraulic Fluid | SAE 10W-40 API Service SJ or higher Motor Oil |

OTHER PARTS

| | |
|-------------|----------------------------------|
| Spark Plugs | RC12YC (Gap 0.030 inch (0.76mm)) |
|-------------|----------------------------------|

LIMITED WARRANTY

SMITHCO warrants this product to be free from defects in material and workmanship under normal use for one year from the date of purchase by the original user. (60 days if product is used for rental purposes.) All warranty claims must be handled through a SMITHCO authorized dealer or by SMITHCO, INC. All transportation charges must be paid by the purchaser.

There is no further express warranty. All implied warranties, including those of merchantability and fitness for a particular purpose, are limited to one year, (60 days if product is used for rental purposes) from the date of purchase by the original user, and to the extent permitted by law any and all implied warranties are excluded and disclaimed after the expiration of such period.

All incidental and consequential damages, including pickup and delivery of the unit, communication, mileage charges and/or rental of a replacement unit during repair, are not covered under this warranty, nor is any loss of income and/or other loss resulting from the failure of the product to function due to a warranty defect.

The following items are not covered under the SMITHCO warranty, and are warranted by their respective manufacturer.

- (a) Engine and engine parts, including starters, generators, alternators and filters.**
- (b) Transaxle, differentials, gear boxes and mechanical pumps.**
- (c) Hydrostatic transmissions, hydraulic pumps and motors.**
- (d) Batteries.**
- (e) Wheels and tires.**

A copy of the warranty for the above items is furnished if necessary with each SMITHCO product.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitations of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which may vary from state to state.

Federal law now requires disclosure of the warranty which applies to this product prior to the sale to a customer. Please leave this statement attached to the product and allow the buyer to remove it after purchase.



English

World Class Quality, Performance and Support

Equipment from Ransomes Jacobsen Limited is built to exacting standards ensured by ISO 9001 registration at all our manufacturing locations. A worldwide dealer network and factory-trained technicians backed by Ransomes Jacobsen Parts Xpress provide reliable, high-quality product support.



BOB-CAT BUNTON CUSHMAN JACOBSEN RANSOMES RYAN E-Z-GO

Ransomes Jacobsen Limited
Central Avenue, Ransomes Europark, Ipswich, England, IP3 9QG
English Company Registration No. 1070731
www.ransomesjacobsen.com